



IMPORTANT INSTALLER!

Donut GASKET must be installed ON EACH END as shown.

INSTALLER IS RESPONSIBLE for properly joining and installing merchandisers as described in joining instruction, P/N 0387177.

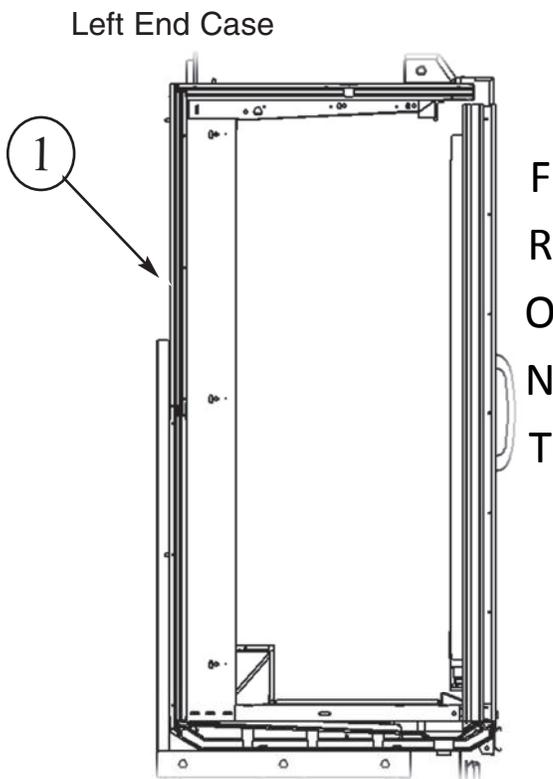


RLT

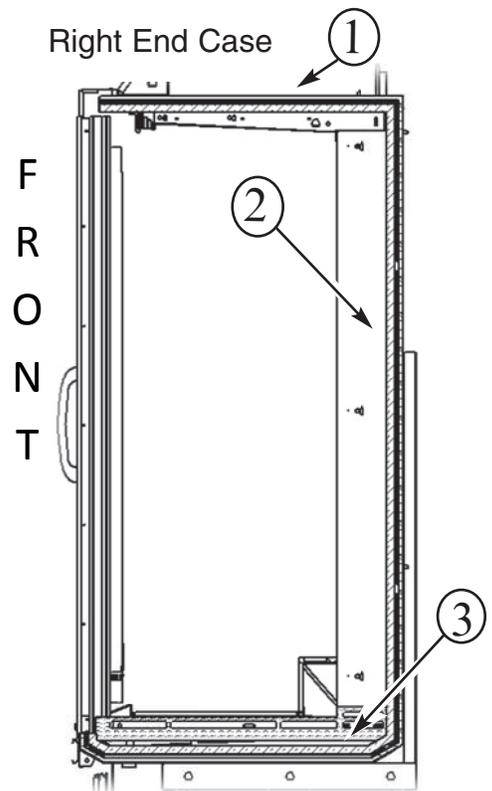


Use only one right Gasket Pad Sealer for each case joining.

- (1) Donut
- ▨ (2) 1 in. x 1/2 in.
- (3) 1/2 in. x 1/4 in.

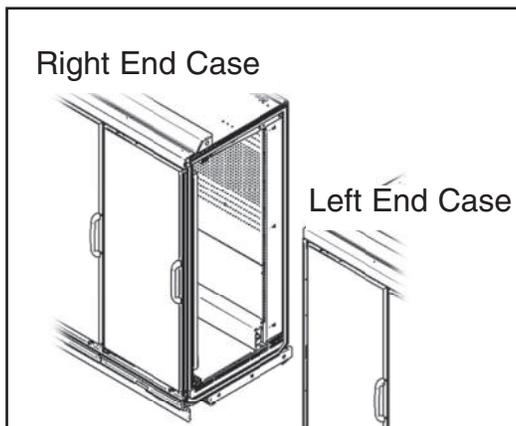

Use all three gaskets when applying an end assembly.

Use all three gaskets on each side of an insulated partition.

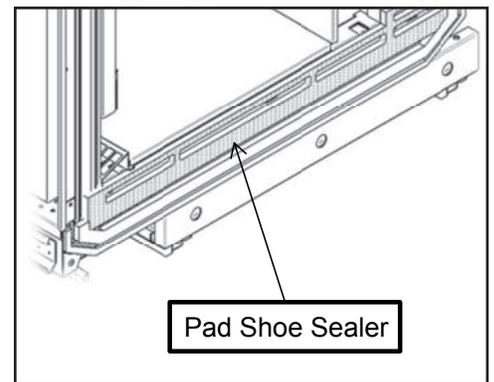

P/N 0479783_C

Spanish 0538949
French 0538950