

Husmann Beer Merchandiser Step-by-Step Set Up Instructions



Place the Husmann Beer Merchandiser in the location inside your business



Remove all shipping and packing materials

ARV-570 & ARV-1230 - Open envelope with Thumbscrew caster locks which must be inserted into casters to prevent movement
MAXI-140 - Remove shipping legs before sealing unit to counter



Allow the unit to rest for 30 minutes once placed in the appropriate location


- Unit must be leveled



Plug the power cord into the proper electrical receptacle


- Put the Husmann Beer Merchandiser on its own dedicated electrical circuit
- The Double Door ARV-1230 requires a 20 amp circuit with a special wall receptacle (NEMA 5-20P)
- Avoid use of extension cords, but if absolutely necessary, the extension cord needs to be at least the same gauge as the power cord itself
- If in doubt call an electrician

For ARV-1230

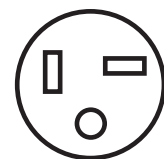

NEMA 5-20P

For ARV-570
MAXI-140

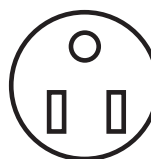

NEMA 5-15P



Turn on all interior light switches and exterior light switch for lighted sign panel

(Interior top right)




MAXI-140 shown with Optional Leg kit



Set the wire display shelves

Flat shelf wire product stops should be toward the back of the unit.
ARV-570 - Four or Five rows of flat wire shelves;
 OR Four rows of gravity feed shelves with product guides.
ARV-1230 - Four or Five rows of flat wire shelves.
MAXI-140 - One fixed flat wire shelf and one removable flat wire shelf at the bottom.

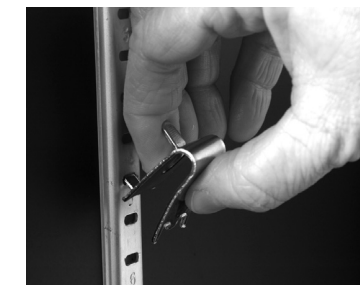

Start with the bottom shelf first. Insert metal shelf clips into slotted strips located on the front and back interior of the cooler. Each shelf will require four shelf clips. Insert one end of the shelf clip into the upper slot and gently squeeze the clip to insert into the slot below.

When gravity feed shelves are provided, rear shelf clips should be positioned seven slots above the front shelf clips. Slotted strips are marked as a guide. Place the wire display shelf on top of each shelf clip for proper positioning. Allow 2 inches between bottle top and shelf above.

MAXI-140 - Top shelf is fastened at the factory while bottom shelf is not fastened for quick and easy cleaning.

The MAXI-140 door is not self-closing.



MAXI-140 Bottom Shelf with Top Bar at back



Allow unit to run for 30 minutes before loading product. LED display simulates actual beer temperature. (LED display requires beer to be loaded in merchandiser for 30 minutes to work properly.)

