


HUSSMANN®

IMPACT™

KIT INSTALLATION INSTRUCTION

**Installation of Magnetic Strip to Back Panels
before installing Mirror Kit**

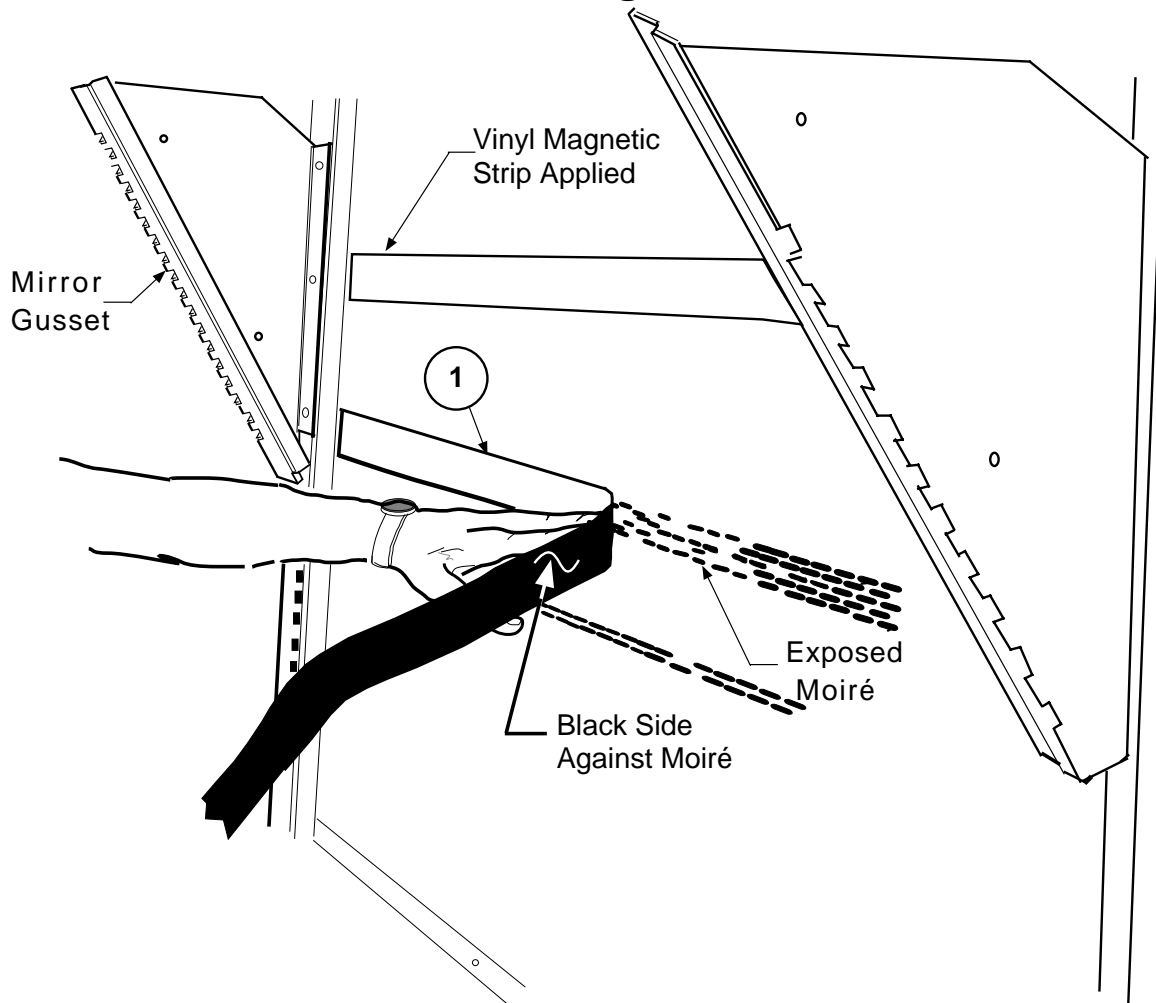

- Step 1.** Before installing Mirrors view back panel for any visible moiré openings that will be closed off by installing the Mirror Gusset Kit.
- Step 2.** Install **Vinyl Magnetic Strips – 1** to the back panel, covering these openings (As shown above).
- Step 3.** Refer to Mirror Kit Instruction P/N 376451 to complete installation of mirrors.

NOTE: Failure to install Magnetic Strip will cause *condensation on mirrors.*

P/N 387593
7/15/95