


Procedure for Installing Lighted Shelves



Shelf lighting uses parallel wiring. Please follow these instructions to ensure good contact between male and female connectors.

1 REMOVE PRODUCT FROM SHELF AND PLACE IN COOLER. SHUT OFF POWER TO MERCHANDISER. REMOVE ALL SHELVES.

2 Remove shelf connectors from power sockets. Always grip shelf connector by the handle when removing from socket. **PULL handle DOWN AND THEN OUT to disengage.** Note that latch tongue must depress to disengage plug.

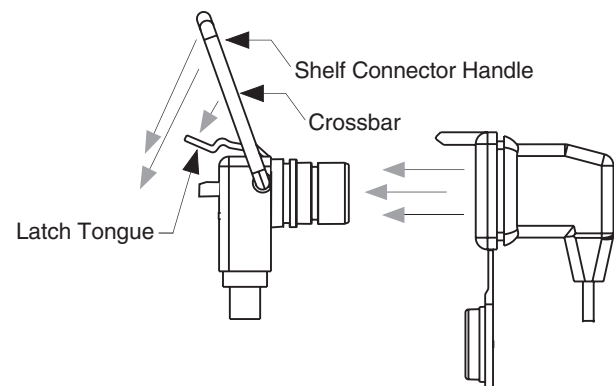


3 Engage each power socket cap and ensure that each cap is fully seated before cleaning. Ensure the proper seating of the cap at all



times when the plug is not engaged. **4** Clean the merchandiser as described in the *Care and Cleaning* paragraphs of *Section 5 – Maintenance* in the Installation and Operation Manual (P/N 378414 or P/N 428668) provided with the case. **Keep liquid out of sockets.**

5 Verify that power is at the case and turned on. Verify that the case light switch is turned “OFF.” Switch is located in the canopy, on the left, behind first row of lamps.

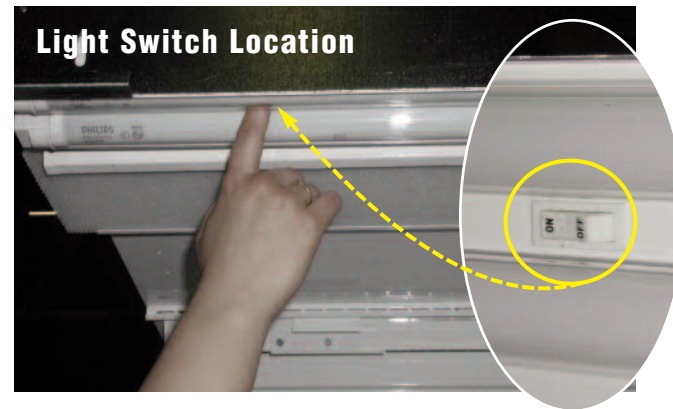

6 See the illustration below. It is typical of D5, C5, and D6 models. Note that other models will have fewer rows of shelves.

Starting from the left-hand bottom section, choose the location for the first shelf, X-1.

Secure the shelf in the slotted upright. Make certain that the shelf is level and that ends are in the same slot on the left and right upright. **It is important that shelf brackets be properly seated in the slotted upright.**



Plug and Receptacle

7 Remove the cap from the rear wall socket and insert the shelf plug in the socket. Secure cord under clip.




8 Working from left to right, install the next shelf, X-2, to the right of the first shelf you installed.

Always work from left to right and from the bottom up in each 8 ft (2438 mm) and 12 ft (3685 mm) case. After each shelf on the bottom row is in position, be sure to remove the cap and insert the shelf plug. Push firmly.

9 Turn “ON” the case light switch after the entire bottom row has been installed in either 8 or 12 ft (2438 or 3658 mm) cases. The shelf lights should light.

- If a shelf lights do not operate,
- A. Turn off light switch.
 - B. Make certain the shelf lamps are properly engaged in the shelf lamp holders.
 - C. Remove and firmly re-insert each shelf plug.
 - D. Turn on light switch.

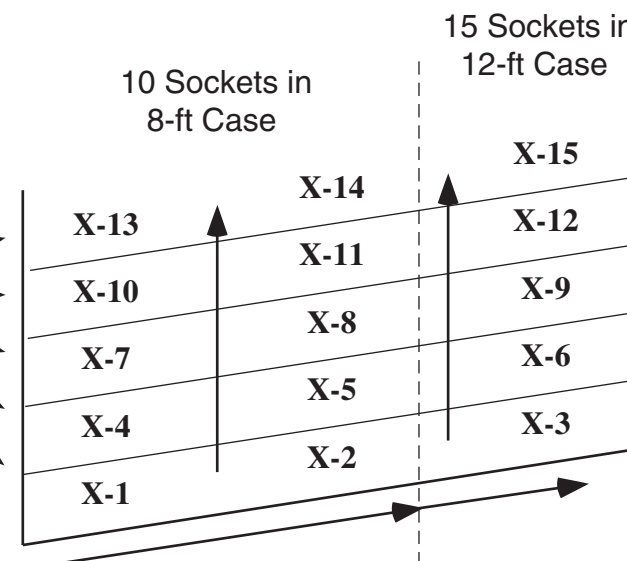

Always work Left to Right, and Bottom to Top



If lights do not operate after checking the items listed above, **contact the installation contractor.**

10 Using the row of shelves just installed as support, set the next shelf, X-4, in the desired location. Remove the cap and insert the shelf plug. Continue working left to right installing shelves X-5 and X-6.

Note: Since the location for the remaining shelves, X-4 to X-15, may be directly over the rear wall receptacle, the shelf should be plugged in before engaging brackets in the uprights. The lower shelf will support the weight of the next shelf until it is plugged in. After installing each shelf, verify that its plug is properly connected to its rear wall receptacle. Continue working row by row, bottom up, left to right.

Important
If a shelf is plugged in and the lamp does not work, **verify:**

- A. the case light switch is “ON” and
- B. that the shelf lamp is properly engaged in the shelf lamp holders.

P/N 0432812_A
January, 2010

Spanish 0538805 French 0538806