

# **HUSSmann®**

## ***EcoShine II Horizontal LEDs for Multi-Deck Merchandisers Shelf, Rail and Canopy***



## ***Upgrade Installation Manual***

**P/N 0524791\_G**  
October 2016

MANUAL- KIT INSTALLATION ECOSHINE II MULTI-DECK

**Spanish 0527937**  
**French 0531195**



## BEFORE YOU BEGIN

Read these instructions completely and carefully.



### **WARNING**

***RISK OF FIRE OR ELECTRICAL SHOCK. LUMINAIRE WIRING AND ELECTRICAL PARTS MAY BE DAMAGED WHEN DRILLING FOR INSTALLATION OF LED RETROFIT KIT. CHECK FOR ENCLOSED WIRING AND COMPONENTS.***

### **WARNING**

***TO PREVENT WIRING DAMAGE OR ABRASION, DO NOT EXPOSE WIRING TO EDGES OF SHEET METAL OR OTHER SHARP OBJECTS.***

### **WARNING**

***RISK OF FIRE OR ELECTRIC SHOCK. LED RETROFIT KIT INSTALLATION REQUIRES KNOWLEDGE OF LUMINAIRES' ELECTRICAL SYSTEMS. IF NOT QUALIFIED, DO NOT ATTEMPT INSTALLATION. CONTACT A QUALIFIED ELECTRICIAN.***

### **NOTICE**

***ONLY THOSE OPEN HOLES INDICATED IN THE PHOTOGRAPHS AND / OR DRAWINGS MAY BE MADE OR ALTERED AS A RESULT OF KIT INSTALLATION. DO NOT LEAVE ANY OTHER OPEN HOLES IN AN ENCLOSURE OF WIRING OR ELECTRICAL COMPONENTS.***

### **WARNING**

***RISK OF FIRE OR ELECTRICAL SHOCK. INSTALL THIS KIT ONLY IN THE LUMINAIRES THAT HAVE THAT HAVE THE CONSTRUCTION FEATURES AND DIMENSIONS SHOWN IN THE PHOTOGRAPHS AND / OR DRAWINGS.***

### **WARNING**

***TO PREVENT WIRING DAMAGE OR ABRASION, DO NOT EXPOSE WIRING TO EDGES OF SHEET METAL OR OTHER SHARP OBJECTS.***

## TABLE OF CONTENTS

<b>SAFETY</b> .....	<b>4</b>
Working Near the Public .....	4
Personal Safety .....	5
ANSI Z535.5 Definitions .....	5
Always*Clear™ Glass .....	6
LED Light Fixtures .....	6
Cleaning LEDs Fixtures .....	6

<b>GENERAL</b> .....	<b>7</b>
For Your Safety .....	7
Electrical Connections .....	7
Identification of Wiring .....	7
Shipping Damage .....	8
Remove Existing Lighting .....	8
EcoShine II Plus Lighting Multi-Deck Shelf Parts List .....	9
EcoShine II Plus Canopy Lighting for Multi-Deck Merchandisers Parts List ..	10
Parts Identification Chart .....	12
Tools and Supplies Needed .....	12
Fluorescent Equipment Removal .....	13
Connect Wiring To Power Supply .....	14
Shelf And Canopy Light Installation ....	15
Canopy Light Installation .....	18

### REVISION HISTORY

**REVISION G** — Removed ES Plus, updated LED charts, new pictures of canopy LEDs

**REVISION F** — new information on Page 15

**REVISION E** — Updated Parts List

**REVISION D** — Replaced part list; added brackets

**REVISION C** — Added caution boxes on Page 2. Updated Lighting Chart, Page 9, 10 and 11; change reference from EcoShine II to EcoShine II Plus throughout document; new part numbers for clip page 18

**REVISION A** — Original Issue

**IMPORTANT**  
**KEEP IN STORE FOR FUTURE REFERENCE**  
*Quality that sets industry standards!*

**HUSSMANN®**

12999 St. Charles Rock Road • Bridgeton, MO 63044-2483

U.S. & Canada 1-800-922-1919 • Mexico 01-800-890-2900

[www.husmann.com](http://www.husmann.com)

© 2016 Hussmann Corporation

## SAFETY

There are two main hazard areas that service technicians may encounter on a day-to-day basis. They are: working within close proximity to the public and personal safety. Before starting work, review these hazards by completing the following checklist:

### *WORKING NEAR THE PUBLIC*

#### KEEPING THE PUBLIC OUT:

The following techniques reduce the risk of injury to third parties (shoppers, store employees, etc.):

Cordon off all work areas with cones, caution tape, warning signs and/or barricades. Maintain a work area of at least five feet from the public. Is a second person required to prevent the public from entering the work area when the work area cannot be adequately cordoned off?

#### HAZARDOUS MATERIALS


Can the public be exposed to any chemicals, refrigerants or fumes? If yes, can steps be taken to eliminate or reduce the risk of exposure? to guard against accidental release of refrigerants, make sure the work area is adequately cordoned off (instead of posting a *WET FLOOR* sign, use *CAUTION* tape to prevent the public from entering the area).

Are wet floors going to create a slip hazard for pedestrians? If yes, be sure to post *WET FLOOR* signs and establish a schedule for clean up as soon as the work is complete.

#### ELECTRICAL HAZARDS

Are all live electrical hazards protected from public access; i.e., de-energized/locked out or cordoned off? Is proper signage in place?

Do light bulbs need to be replaced: If yes, will high work be conducted from a ladder or a scissor lift? Make sure the work area is cordoned off as shown below.

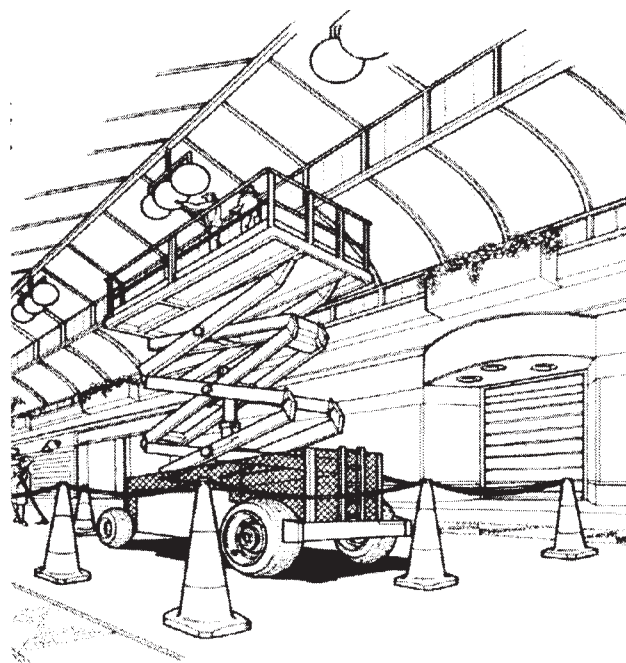

## WARNING

Fluorescent lamps contain mercury vapor. Mercury exposure at high levels can harm the brain, heart, kidneys, lungs, and immune system of people of all ages. Do not break or puncture fluorescent lamps. Dispose of, or store, all fluorescent lamps in accordance with Federal (40 CFR 273), State, and local hazardous waste requirements. Refer to <http://www.epa.gov/mercury/about.htm>

**PERSONAL SAFETY**

Over 90% of accidents are due to human error or from complacency about the job. This checklist is provided to remind you of the potentially hazardous conditions at the jobsite.

**WORKING AT HEIGHT**

Will you be working more than six feet off the ground? If yes, have you received appropriate training (i.e., ladder, scissor lifts and personal fall-arrest systems)?

Do you have the appropriate personal protective equipment (PPE) for working at height (safety harness/lanyard)?

Will you be working on roofs with unprotected edges? If yes, make sure actions are taken to prevent a fall (i.e., identification of **adequate** anchor points for safety harnesses).

**CONFINED SPACE WORK**

Will you be working in any confined spaces? If yes, have you received appropriate training? A confined space has limited means of entry/egress, is not designed for human occupancy, and is large enough for bodily entry.

Is permit-required confined space entry required? If yes, have appropriate steps been taken for safe entry, such as permit issuance. **If in doubt, DO NOT ENTER and inform the client.**

**ELECTRICAL / LOTO**

Does the project require you to work with live electricity? If yes, have you received appropriate training?

Do you have appropriate locks and tags to de-energize or isolate the electrical supply?

**REMOTE AND LIMITED USE LOCATIONS**

Is there the potential to contact poisonous plants (ivy, oak or sumac)? If yes, make sure you wear proper PPE (gloves, long pants and long sleeves).

Check for snakes, vermin and bees / wasps.

If stung or bitten, do you have reactions that require medical treatment, such as Epinephrine EpiPen? **If yes, inform the client prior to starting work.**

\*\*\*\*\*

**ANSI Z535.5 DEFINITIONS**

• **DANGER** – Indicate[s] a hazardous situation which, if not avoided, will result in death or serious injury.



• **WARNING** – Indicate[s] a hazardous situation which, if not avoided, could result in death or serious injury.



• **CAUTION** – Indicate[s] a hazardous situation which, if not avoided, could result in minor or moderate injury.

• **NOTICE** – *Not related to personal injury* – Indicates[s] situations, which if not avoided, could result in damage to equipment.

**ALWAYS\*CLEAR™ GLASS**

Hussmann recommends using a soft cloth with isopropyl (rubbing) alcohol to clean the inside (coated) glass surface. Isopropyl alcohol does not freeze and evaporates without leaving residue. Always allow the surface to dry before closing the door. Use of abrasives may damage the coated surface and void the warranty. Labels (stickers) applied to the coated surface will cause damage and void the warranty.


**LED LIGHT FIXTURES**

EcoShine II LED (light emitting diode) lights work well for dimming or on/off operation using an occupancy sensor (optional kits). They can be turned on and off in a cold environment with no warm-up time and no negative impact on lamp life.

Hussmann EcoShine II LED light fixtures normally perform for up to 50,000 hours. That is 5.7 years of continuous, 24 hour operation. They are backed by a multi-year materials warranty on the LED light strips and a five-year materials warranty on the power supply.

**CLEANING LED FIXTURES**

Use a lint-free cloth to wipe the surface of the luminaires. Do NOT use scouring pads, bleach, solvents, or detergents. This may damage the surface of the clear plastic cover.

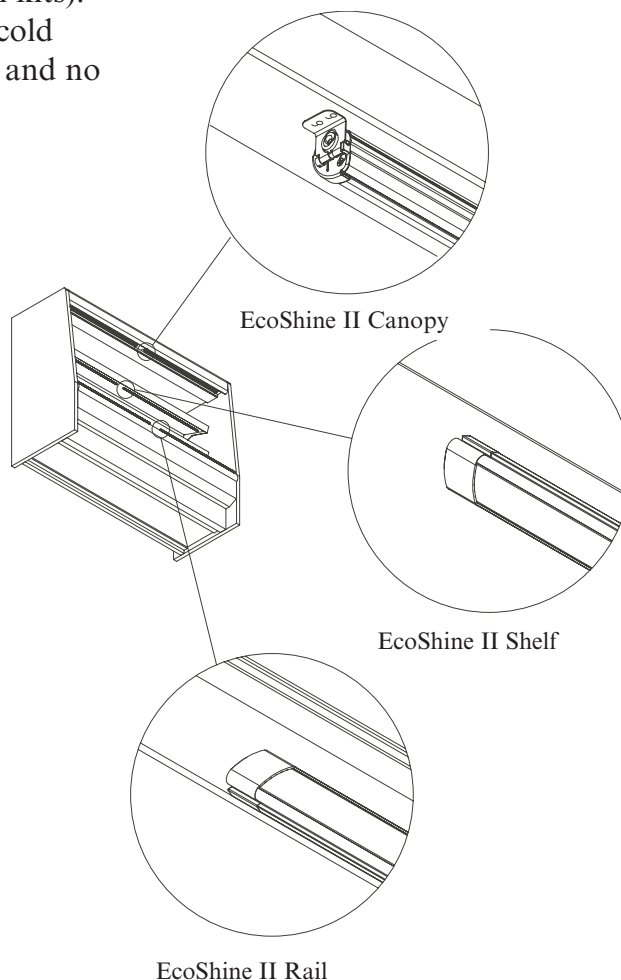

## GENERAL

This instruction explains how to remove original equipment manufacture (OEM) fluorescent lamp fixtures and replace them with Hussmann LED light fixtures for multi-deck merchandiser.

### FOR YOUR SAFETY

- Read and observe all CAUTIONS and WARNINGS shown throughout these instructions.
- Each person working on or near the installation described must wear safety glasses or goggles..
- Block access to the work area by customers or other personnel to prevent injury.
- Read and follow all industry safety recommendations and established procedures.
- Wiring must be 2 wire with ground and rated for 75°C (176°F).

### ELECTRICAL CONNECTIONS

All wiring must be in compliance with NEC and local codes. All electrical connections are to be made in the wireway or mullion or LED light fixture.

### IDENTIFICATION OF WIRING

Leads for all electrical circuits are identified by colored plastic bands. These bands correspond to the *color code sticker* (shown below) located inside the merchandiser's wireway cover. Anthony doors may not conform to this chart. Refer to the manufacturer's manual for their information.

#### WIRING COLOR CODE

**Leads for all electrical circuits are identified by a colored plastic band: neutral wire for each circuit has either White insulation or a White plastic sleeve in addition to the color band.**

PINK ..... REFRIG. THERMOSTAT LOW TEMP.  
LIGHT BLUE. REFRIG. THERMOSTAT NORM TEMP.  
DARK BLUE. DEFROST TERM. THERMOSTAT  
PURPLE ..... CONDENSATE HEATERS  
BROWN ..... FAN MOTORS  
GREEN\* ..... GROUND

ORANGE OR  
TAN ..... LIGHTS  
MAROON .. RECEPTACLES  
YELLOW ... DEFROST HEATERS 120V  
RED ..... DEFROST HEATERS 208V  
\*EITHER COLORED SLEEVE OR COLORED INSULATION

**ELECTRICIAN NOTE: Use copper conductor wire only.  
CASE MUST BE GROUNDED**

**THESE ARE MARKER COLORS WIRES MAY VARY.**



## SHIPPING DAMAGE

All equipment should be thoroughly examined for shipping damage before and during unloading.

This equipment has been carefully inspected at our factory. Any claim for loss or damage must be made to the carrier. The carrier will provide any necessary inspection reports and/or claim forms.

### Apparent Loss Or Damage

If there is an obvious loss or damage, it must be noted on the freight bill or express receipt and signed by the carrier's agent; otherwise, carrier may refuse claim.

### Concealed Loss Or Damage

When loss or damage is not apparent until after equipment is uncrated, retain all packing materials and submit a written request to the carrier for inspection, within 15 days.

### Missing Parts

Every effort is made to ship all parts for the kit. The Hussmann Service Center can be reached by calling

- from U.S. & Canada 1-800-922-1919
- from Mexico 01-800-890-2900 •

## REMOVE EXISTING FLUORESCENT LIGHTING (IF PREVIOUSLY INSTALLED)

1. Remove product from the merchandiser and store at appropriate product temperature.
2. Turn the light switch to off. The switch is located inside the case on the door mullion.
3. Lock out and tag out the circuit breaker for the lighting circuit of the case where the LED light fixtures are being installed.
4. If fluorescent lighting is present in the canopy or shelves; it should be removed.
5. Remove and discard the lenses covering the fluorescent tubes.
6. Remove the fluorescent tubes.



## WARNING

### — LOCK OUT / TAG OUT —

***To avoid serious injury or death from electrical shock, always disconnect the electrical power at the main disconnect when servicing or replacing any electrical component. This includes, but is not limited to, such items as doors, lights, fans, heaters, and thermostats.***

**Fluorescent Lamp Disposal:** The United States Environmental Protection Agency has information regarding environmentally-safe fluorescent lamp waste management programs.

On the Net: EPA Web site:  
<http://www.epa.gov/osw/hazard/wastetypes/universal/lamps/recycle.htm>



## EcoShine II Horizontal LED Lighting

- Shelf and Rail for Multi-Deck
- Shelf, Rail and Canopy for Specialty and Service

## Factory Replacement and Upgrade Parts

	Aftermarket Part Number	Description	Energy Watts (DC) per Fixture	Energy Watts (AC) / per Fixture	CRI Rating (Typical)	Length (inches)	Efficacy (Lumens/Watt) Typical
Warm White	3004880	EcoShine II Shelf 3000K 12 in.	1.8	2.1	93	12	90
	3004883	EcoShine II Shelf 3000K 18 in.	2.9	3.4	93	18	90
	3004886	EcoShine II Shelf 3000K 24 in.	4.0	4.7	93	24	90
	3004889	EcoShine II Shelf 3000K 36 in.	6.2	7.2	93	36	90
	3004892	EcoShine II Shelf 3000K 36 in. High Output	10.2	11.9	93	36	90
	3004895	EcoShine II Shelf 3000K 48 in.	8.7	10.1	93	48	90
	3004898	EcoShine II Shelf 3000K 48 in. High Output	14.7	17.1	93	48	90
	3004901	EcoShine II Shelf 3000K 60 in.	10.2	11.9	93	60	90
	3004904	EcoShine II Shelf 3000K 72 in.	13.4	15.6	93	72	90
Warm Neutral							
	3004881	EcoShine II Shelf 3500K 12 in.	1.8	2.1	93	12	90
	3004884	EcoShine II Shelf 3500K 18 in.	2.9	3.4	93	18	90
	3004887	EcoShine II Shelf 3500K 24 in.	4.0	4.7	93	24	90
	3004890	EcoShine II Shelf 3500K 36 in.	6.2	7.2	93	36	90
	3004893	EcoShine II Shelf 3500K 36 in. High Output	10.2	11.9	93	36	90
	3004896	EcoShine II Shelf 3500K 48 in.	8.7	10.1	93	48	90
	3004899	EcoShine II Shelf 3500K 48 in. High Output	14.7	17.1	93	48	90
	3004902	EcoShine II Shelf 3500K 60 in.	10.2	11.9	93	60	90
Neutral White	3004905	EcoShine II Shelf 3500K 72 in.	13.4	15.6	93	72	90
	3004882	EcoShine II Shelf 4000K 12 in.	1.8	2.1	93	12	90
	3004885	EcoShine II Shelf 4000K 18 in.	2.9	3.4	93	18	90
	3004888	EcoShine II Shelf 4000K 24 in.	4.0	4.7	93	24	90
	3004891	EcoShine II Shelf 4000K 36 in.	6.2	7.2	93	36	90
	3004894	EcoShine II Shelf 4000K 36 in. High Output	10.2	11.9	93	36	90
	3004897	EcoShine II Shelf 4000K 48 in.	8.7	10.1	93	48	90
	3004900	EcoShine II Shelf 4000K 48 in. High Output	14.7	17.1	93	48	90
	3004903	EcoShine II Shelf 4000K 60 in.	10.2	11.9	93	60	90
	3004906	EcoShine II Shelf 4000K 72 in.	13.4	15.6	93	72	90

EcoShine II LED lights are covered by a 5 year parts and labor limited warranty.  
See Hussmann warranty policy for additional details.

These luminaires are IP67 rated. IP stands for ingress protection. The lights are totally protected from dust ingress — (6) and from the effects of fluid immersion between 5.9 in (15cm) and 3.28 ft (1m) — (7).

## EcoShine II Canopy LED Lighting for Multi-Deck Merchandisers Factory, Replacement and Upgrade Parts

	Aftermarket Part Number	Description	Energy Watts (DC) per Fixture	Energy Watts (AC) / per Fixture	CRI Rating (Typical)	Length (inches)	Efficacy (Lumens/Watt) Typical
Warm White	3007980	EcoShine II Canopy 3000K 12 in.	4.6	5.3	93	11.4	90
	3007986	EcoShine II Canopy 3000K 18 in.	6.1	7.1	93	16.8	90
	3007993	EcoShine II Canopy 3000K 24 in.	8.7	10.1	93	20.8	90
	3008024	EcoShine II Canopy 3000K 60 in.	22.6	26.3	93	58.8	90
	3007983	EcoShine II Canopy 3000K 12 in. High Output	5.6	6.5	93	11.4	90
	3007989	EcoShine II Canopy 3000K 18 in. High Output	7.5	8.7	93	16.8	90
	3007996	EcoShine II Canopy 3000K 24 in. High Output	11.6	13.5	93	20.8	90
	3008027	EcoShine II Canopy 3000K 60 in. High Output	29.4	34.2	93	58.8	90
Warm Neutral	3007981	EcoShine II Canopy 3500K 12 in.	4.6	5.3	93	11.4	90
	3007987	EcoShine II Canopy 3500K 18 in.	6.1	7.1	93	16.8	90
	3007994	EcoShine II Canopy 3500K 24 in.	8.7	10.1	93	20.8	90
	3008025	EcoShine II Canopy 3500K 60 in.	22.6	26.3	93	58.8	90
	3007984	EcoShine II Canopy 3500K 12 in. High Output	5.6	6.5	93	11.4	90
	3007991	EcoShine II Canopy 3500K 18 in. High Output	7.5	8.7	93	16.8	90
	3007997	EcoShine II Canopy 3500K 24 in. High Output	11.6	13.5	93	20.8	90
	3008028	EcoShine II Canopy 3500K 60 in. High Output	29.4	34.2	93	58.8	90
Neutral White	3007982	EcoShine II Canopy 4000K 12 in.	4.6	5.3	93	11.4	90
	3007988	EcoShine II Canopy 4000K 18 in.	6.1	7.1	93	16.8	90
	3007995	EcoShine II Canopy 4000K 24 in.	8.7	10.1	93	20.8	90
	3008026	EcoShine II Canopy 4000K 60 in.	22.6	26.3	93	58.8	90
	3007985	EcoShine II Canopy 4000K 12 in. High Output	5.6	6.5	93	11.4	90
	3007992	EcoShine II Canopy 4000K 18 in. High Output	7.5	8.7	93	16.8	90
	3007998	EcoShine II Canopy 4000K 24 in. High Output	11.6	13.5	93	20.8	90
	3008029	EcoShine II Canopy 4000K 60 in. High Output	29.4	34.2	93	58.8	90

EcoShine II LED lights are covered by a 5 year parts and labor limited warranty.  
See Hussmann warranty policy for additional details.

EcoShine II Canopy LED Lighting for Multi-Deck Merchandisers  
Factory and Replacement Parts

	Aftermarket Part Number	Description	Energy Watts (DC) per Fixture	Energy Watts (AC) / per Fixture	CRI Rating (Typical)	Length (inches)	Efficacy (Lumens/ Watt) Typical
Warm White	3007999	EcoShine II Canopy 3000K 36 in.	13.9	16.2	93	34.3	90
	3008011	EcoShine II Canopy 3000K 48 in.	17.0	19.8	93	45.8	90
	3008002	EcoShine II Canopy 3000K 36 in. High Output	17.4	20.2	93	34.3	90
	3008014	EcoShine II Canopy 3000K 48 in. High Output	23.3	27.1	93	45.8	90
Warm Neutral	3008000	EcoShine II Canopy 3500K 36 in.	13.9	16.2	93	34.3	90
	3008012	EcoShine II Canopy 3500K 48 in.	17.0	19.8	93	45.8	90
	3008003	EcoShine II Canopy 3500K 36 in. High Output	17.4	20.2	93	34.3	90
	3008015	EcoShine II Canopy 3500K 48 in. High Output	23.3	27.1	93	45.8	90
Neutral White	3008001	EcoShine II Canopy 4000K 36 in.	13.9	16.2	93	34.3	90
	3008013	EcoShine II Canopy 4000K 48 in.	17.0	19.8	93	45.8	90
	3008004	EcoShine II Canopy 4000K 36 in. High Output	17.4	20.2	93	34.3	90
	3008016	EcoShine II Canopy 4000K 48 in. High Output	23.3	27.1	93	45.8	90

EcoShine II LED lights are covered by a 5 year parts and labor limited warranty. See Hussmann warranty policy for additional details.


EcoShine II Canopy Lighting for Multi-Deck Merchandisers  
Upgrade Parts

	Aftermarket Part Number	Description	Energy Watts (DC) per Fixture	Energy Watts (AC) / per Fixture	CRI Rating (Typical)	Length (inches)	Efficacy (Lumens/ Watt) Typical
Warm White	3008005	EcoShine II Canopy 3000K 36 in. Retrofit	13.9	16.2	93	34.3	90
	3008017	EcoShine II Canopy 3000K 48 in. Retrofit	17.0	19.8	93	45.8	90
	3008008	EcoShine II Canopy 3000K 36 in. High Output Retrofit	17.4	20.2	93	34.3	90
	3008020	EcoShine II Canopy 3000K 48 in. High Output Retrofit	23.3	27.1	93	45.8	90
Warm Neutral	3008006	EcoShine II Canopy 3500K 36 in. Retrofit	13.9	16.2	93	34.3	90
	3008018	EcoShine II Canopy 3500K 48 in. Retrofit	17.0	19.8	93	45.8	90
	3008009	EcoShine II Canopy 3500K 36 in. High Output Retrofit	17.4	20.2	93	34.3	90
	3008021	EcoShine II Canopy 3500K 48 in. High Output Retrofit	23.3	27.1	93	45.8	90
Neutral White	3008007	EcoShine II Canopy 4000K 36 in. Retrofit	13.9	16.2	93	34.3	90
	3008019	EcoShine II Canopy 4000K 48 in. Retrofit	17.0	19.8	93	45.8	90
	3008010	EcoShine II Canopy 4000K 36 in. High Output Retrofit	17.4	20.2	93	34.3	90
	3008023	EcoShine II Canopy 4000K 48 in. High Output Retrofit	23.3	27.1	93	45.8	90


EcoShine II LED lights are covered by a 5 year parts and labor limited warranty. See Hussmann warranty policy for additional details. These parts include 79 in. cable leads for upgrade installation.

**PARTS IDENTIFICATION CHART****EcoShine II  
Canopy LED Light Fixture****EcoShine II  
Shelf, Rail, and Service Canopy  
LED Light Fixture****100W 24VDC Power Supply  
Class 2**


Standard 100W Power Supply  
Part Number: 0547639  
or  
Slimline 100W Power Supply  
Part Number: 4483262

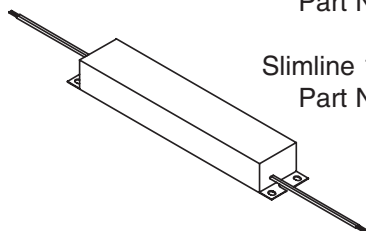**Standard Shelf LED Bracket**

Plastic Bracket  
Part Number:  
0544182



Retaining Clip:  
0544183

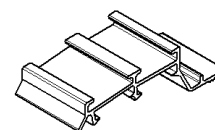**RECOMMENDED TOOLS AND SUPPLIES**

Safety Eye-wear



Tape Measure

Heat Shrink  
Butt Terminals

Wire Nuts

Battery-  
powered  
Drill

Diagonal Pliers



Wire Stripper

Phillips and Flat Blade  
Screwdrivers

7/64 Drill Bit


9/64 Drill Bit




Bit Depth Collar



Gloves

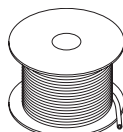DMM  
Digital Multimeter

Wire

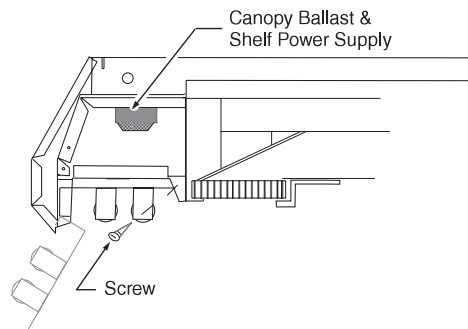

### Remove Front Lamp Assembly to Access Screws

### Fluorescent Equipment Removal


LED power supplies are installed in the same location as existing canopy and shelf ballasts. These ballasts are located at the top of the merchandiser inside the canopy.

1. **DISCONNECT POWER TO THE MERCHANDISER.**
2. LED power supplies are installed in the same location as existing canopy and shelf ballasts. These ballasts are located at the top of the merchandiser inside the canopy.
3. Remove the screws that secure the lamp panel.




### Access to Canopy and Shelf Ballasts

4. Grasp the lamp panel at its front edge and carefully pull down. It will swing freely from its hinged rear edge.
5. Disconnect wires from shelf and canopy ballasts. Note the color of power source wires.

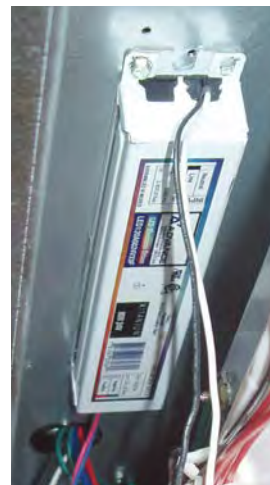

6. Locate and remove the ballasts. Mount the LED power supplies in the canopy. Power supply has a 120V 50/60 Hz input and a 24VDC output.

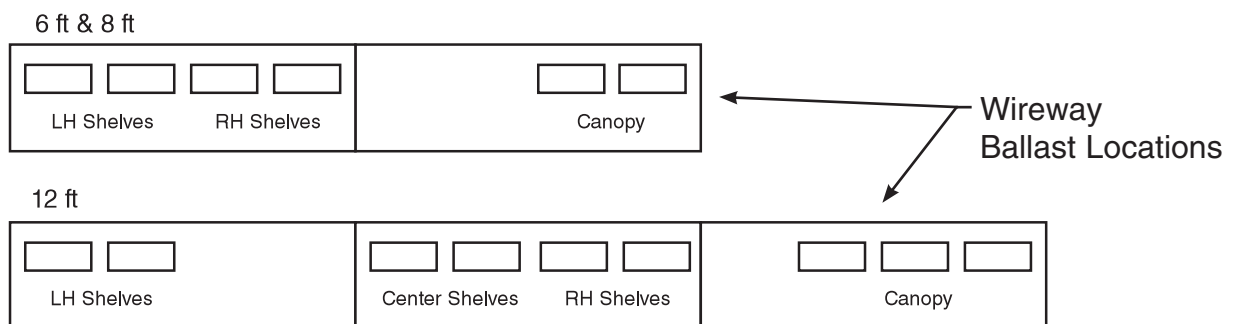

## CONNECT WIRING TO POWER SUPPLY


1. Tuck the wire leads from the LED fixture, into the canopy, and connect the leads to the power supply. Follow the wiring diagrams on the last two pages as a guide. Connect the original load and neutral wires to LED power supply input wires (black and white wires), and secure with approved wiring connectors.
2. Connect the LED power supply output wires (red and blue wires) to wiring leads.
3. Additional wiring may be needed to connect the power supply to existing wiring in the wireway. Use conductors of proper size and rating.
4. The power supply case is grounded. Attach power supply to a ground point in the refrigerated merchandiser, either directly with a screw, or by using a green wire to attach to a remote ground point

DO NOT LEAVE ANY EXPOSED WIRE NUTS OR CONNECTORS. RETROFIT LED FIXTURES HAVE LONG WIRING LEADS (2M). FISH NEW WIRING THROUGH MULLION USING EXISTING BALLAST WIRING.

**IMPORTANT**

Ensure that all connection points are sealed for damp location using the appropriate method per the NEC or local electrical code.

## Materials

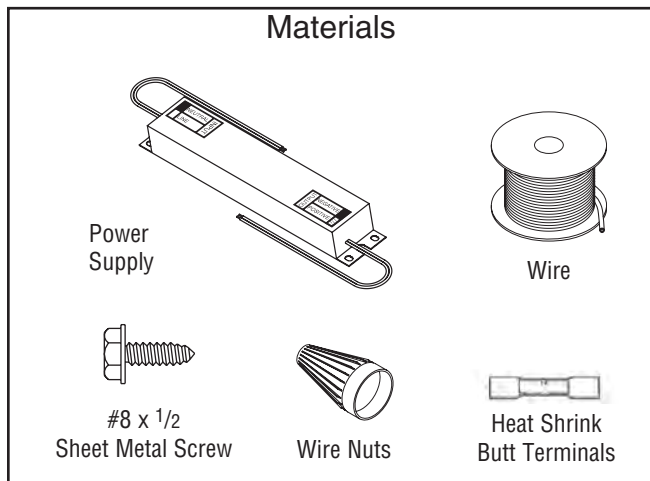**! WARNING**

— LOCK OUT / TAG OUT —

*To avoid serious injury or death from electrical shock, always disconnect the electrical power at the main disconnect when servicing or replacing any electrical component. This includes, but is not limited to, such items as doors, lights, fans, heaters, and thermostats.*



## SHELF AND CANOPY LIGHT INSTALLATION

1. Remove all existing shelf lights and mounting clips.
2. Use the magnetic clips or shelf clips to affix the light bar to the underside of the shelf.

### NOTE:

One power supply can provide power for as many as 10 shelf lights.




3. Install rail lights similar.

### Shelf Lighting - Typical Case Wattage (AC)

Number of Shelves	4 foot	6 foot	8 foot	12 foot
EcoShine II (1 Row)	10.1	14.4	20.2	30.3
EcoShine II (2 Row)	20.2	28.8	40.5	60.7
EcoShine II (3 Row)	30.3	43.3	60.7	91
EcoShine II (4 Row)	40.5	57.7	80.9	121.4
EcoShine II (5 Row)	50.6	72.1	101.2	151.7
EcoShine II (6 Row)	60.7	86.5	121.4	182.1
EcoShine II (7 Row)	70.8	100.9	141.6	212.4

These wattages are to be used for guideline purposes only.



The ESII Canopy throws light asymmetrical, so if the fixture is turned (wires on the RH side) it does not optimize the light throw of the fixture.

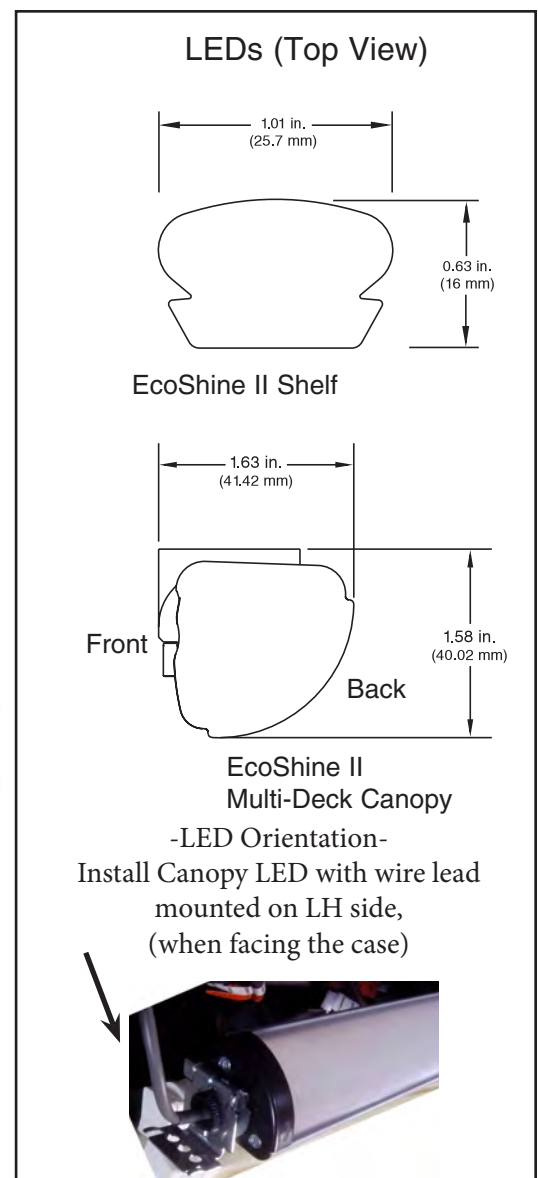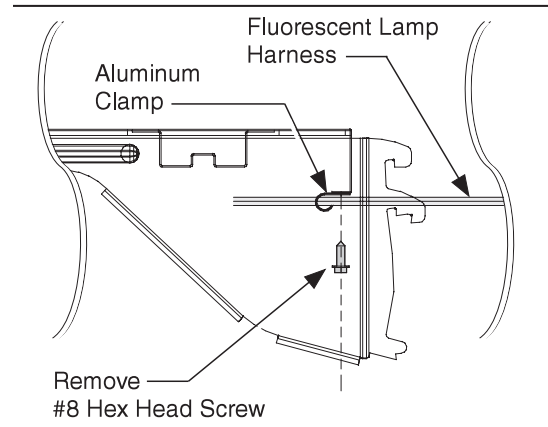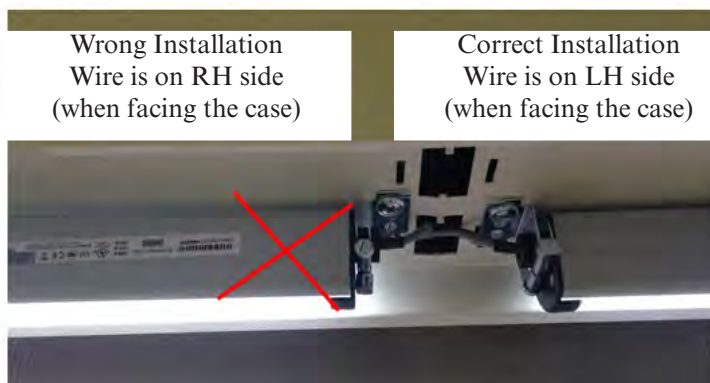




3. Plug the quick-connect plugs into the shelf receptacles at the back of the merchandiser.
4. Use a tie wrap to contain any excess plug wire. Do not allow wire to lie on product or hang loose.

**NOTE:** Free cord length from last clip (strain relief) to outlet must be less than 12 inches (305 mm). Longer lengths must be constrained. Inspect all shelf lamp plugs and receptacles for arcing, corrosion or other damage. Replace as necessary.

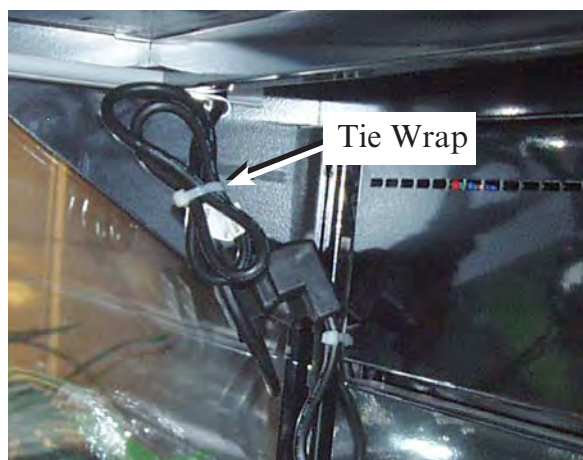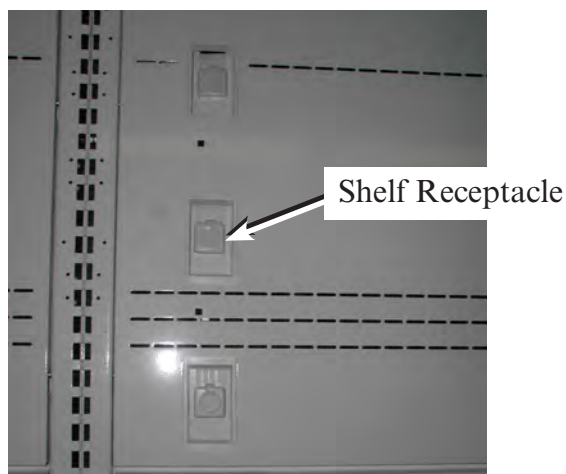


#### Common Shelf Plugs

Contact your Hussmann representative to order other custom plug types.

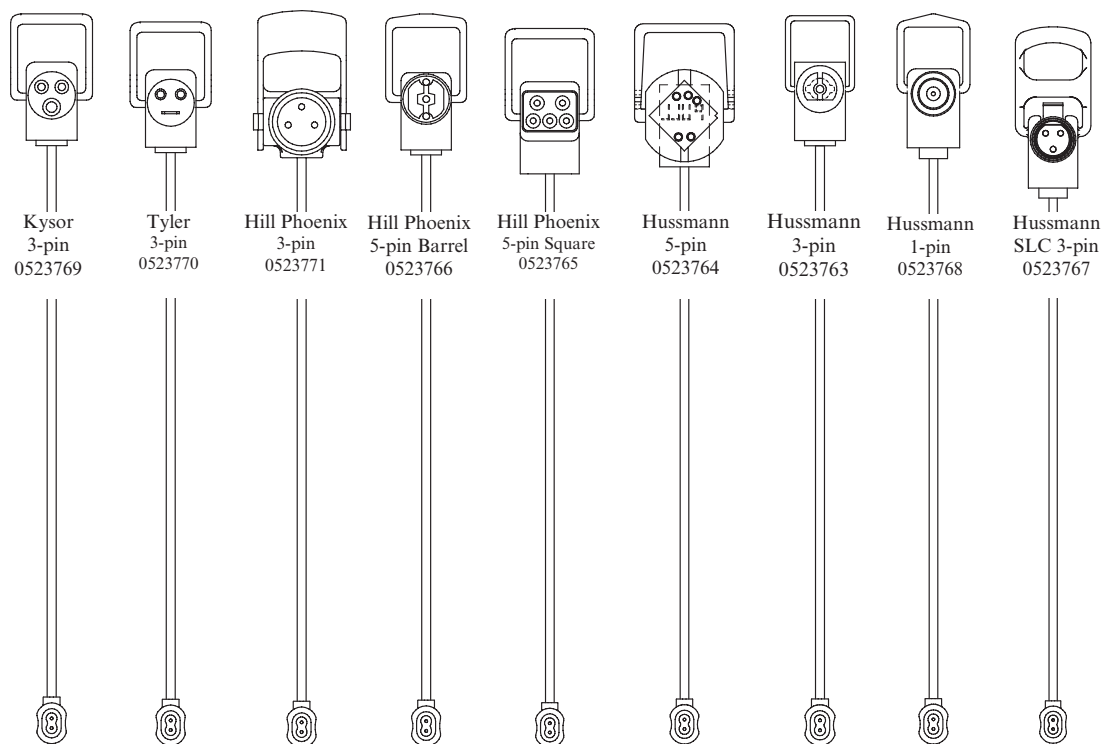

## Optional Shelf Harness and LED Light Circuits for 3, 4, 5, 6 &amp; 7 Rows of Shelves

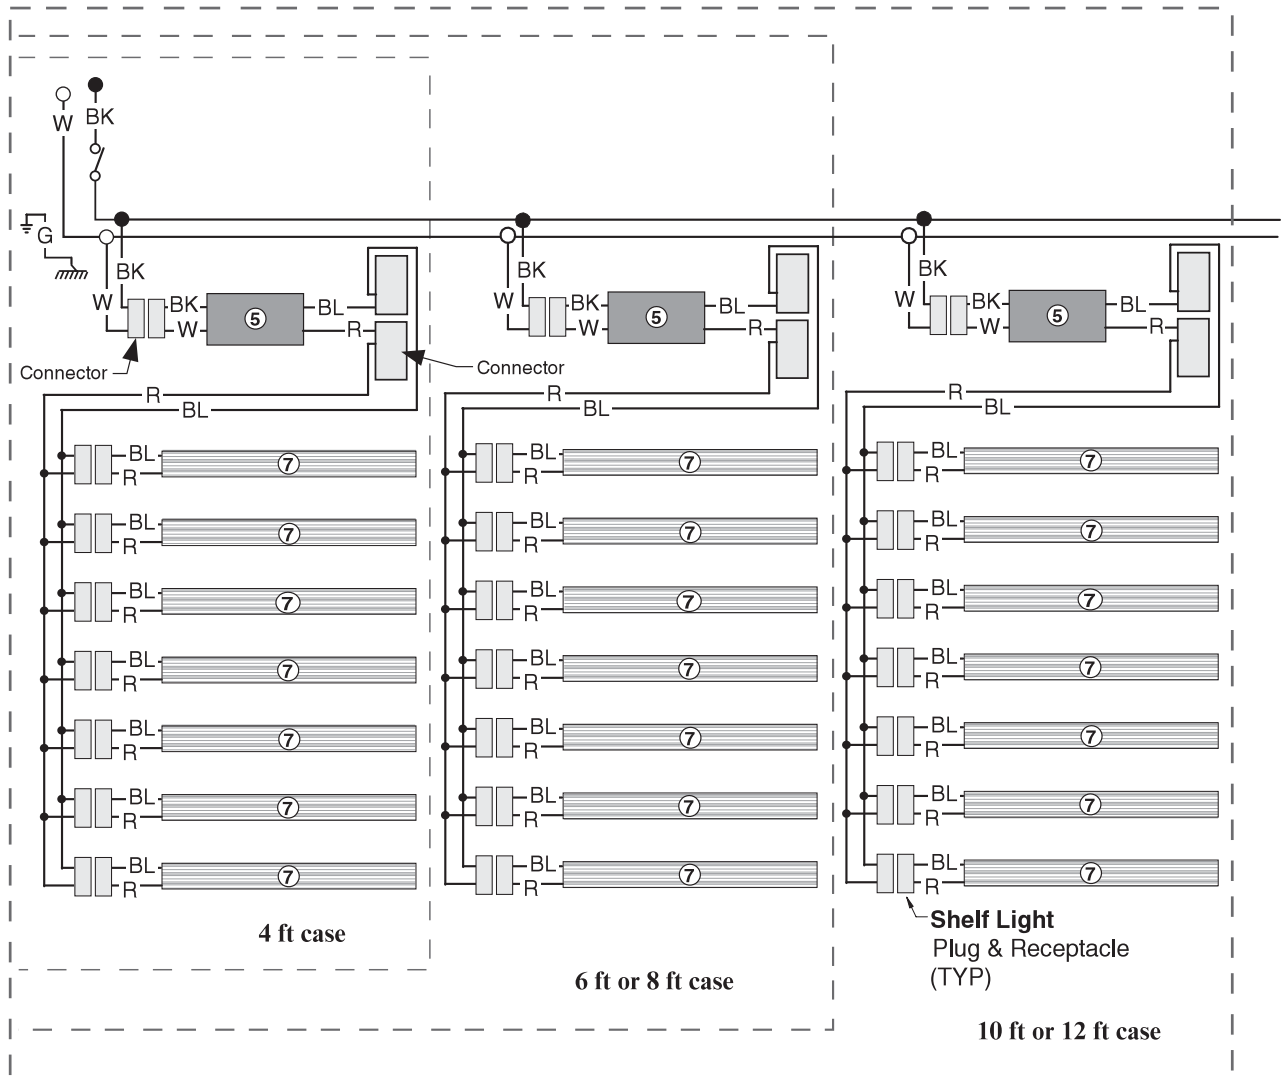**WARNING**

All components must have mechanical ground, and the merchandiser must be grounded.

CIRCLED NUMBERS = PARTS LIST ITEM NUMBERS

R = Red

G = Green

BL = Blue

BK = Black

W = White

● = 120V POWER

○ = 120V NEUTRAL

⏏ = FIELD GROUND


mm = CASE GROUND

CANOPY LIGHT INSTALLATION


- 1. Route electrical wiring connections for the single-row canopy. Connection can be made at the power supply using a molex connector, or use approved wire connectors or heat shrink butt connectors.
- 2. Attach the Canopy LEDs to the canopy using mounting clips and screws.

- NOTE:  
One power supply can provide powerfor as many as 3 canopy lights.
- 3. Restore power to the merchandiser. Verify proper orientation of all canopy light bars.

Standard Clip — 0525165  
Intermediate — 0525166  
Extended — 0525174

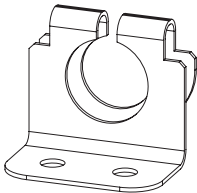

EcoShine II Canopy  
Standard Mounting Clip  
(Canopy for multi-deck)

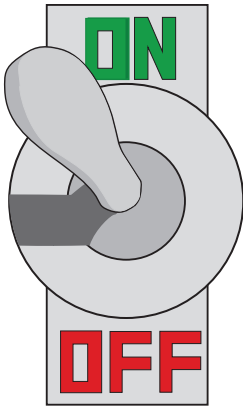

Canopy Lighting - Typical Case Wattage (AC)

Canopy Light Style	4 ft	6 ft	8 ft	12 ft
EcoShine II	19.8	32.3	39.5	59.3
EcoShine II HO	27.1	40.5	54.2	81.3

These wattages are to be used for guideline purposes only.

4-Ft Case

6-Ft or 8-Ft Case

10-Ft or 12-Ft Case

**● = 120V POWER      ○ = 120V NEUTRAL      ⚡ = FIELD GROUND      ≡ = CASE GROUND**

A decorative border made of a repeating blue geometric pattern, resembling interlocking squares or a stylized knot, surrounds the entire page content.

# **HUSSmann®**

**To obtain warranty information  
or other support, contact your  
Hussmann representative.  
Please include the model and  
serial number of the product.**