

DSF, DSFI, DSFM, DSFN,-EP OPEN FISH SERVICE CASE

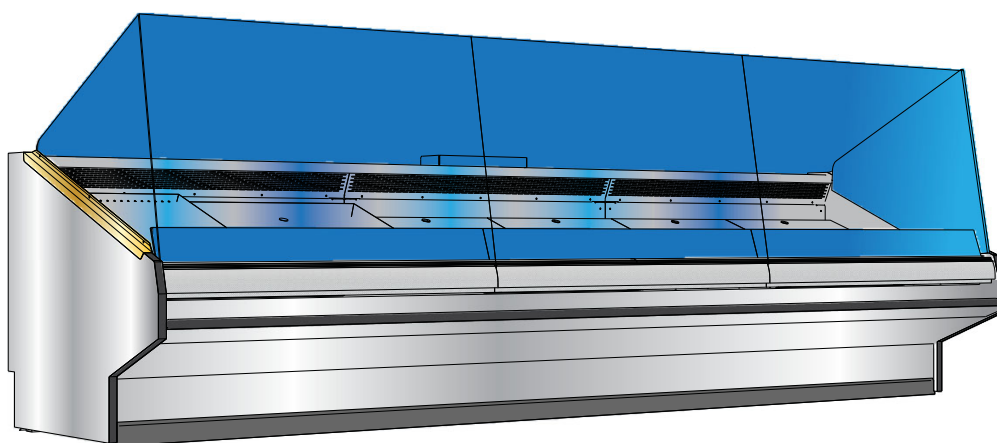


Table of Contents

General Information.....	4
Cut and Plan Views	5
Spec Sheet	8
Installation.....	15
Body Panel Removal	16
Glass Adjustment	17
Swing Arm Adjustment	19
Top Canopy Adjustment (HEB).....	20
Lifting Instructions	21
Plumbing	23
Humidification	24
Manifold Flush System	25
Refrigeration	26
Electrical	27
Electrical Wiring Diagram Index	28
Wiring Diagrams	29
Maintenance	48
Service Tips	49
User Information	50




1. Do Not Push, Pull, Adjust, or Manipulate the DSF case by any glass component.
 - Doing so will result in severe damage to such components
 - Glass breakage may result in serious injury
2. Never stand on the top, deck, or any merchandising feature for any reason.
 - Misusing these surfaces as steps will result in damage to the case
 - Misusing these surfaces as steps may result in serious injury to the user
 - These surfaces are intended for the storage and merchandising of food products only
 - Use a ladder or designed structure to work above the case (Do not lean on case)

General Information

Case Description:

This Booklet specifically covers the following models:

- DSF,DSFI,DSFM,DSFN,-EP

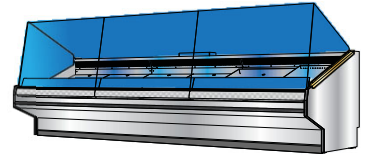

Description: The **DSF, DSFI, DSFM, DSFN, DSFM-VG, EP** Straight-glass refrigerated service Open Fish merchandiser is designed for Fresh Seafood Applications. They are available as either remote type models, which require separate condensing unit connections.

Shipping Damage: All equipment should be thoroughly examined for shipping damage before and during unloading. This equipment has been carefully inspected at our factory and the carrier has assumed responsibility for safe arrival. If damaged, either apparent or concealed, claim must be made to the carrier.

Apparent Loss or Damage: If there is an obvious loss or damage, it must be noted on the freight bill or express receipt and signed by the carrier's agent; otherwise, carrier may refuse claim. The carrier will supply necessary claim forms.

Concealed Loss or Damage: When loss or damage is not apparent until after all equipment is uncrated, a claim for concealed damage is made. Make request in writing to carrier for inspection within 15 days, and retain all packaging. The carrier will supply inspection report and required claim forms.

Location/Store Conditions: The refrigerated merchandisers have been designed for use only in air conditioned stores where temperature and humidity are maintained either 75°F ambient and 55% RH or 80°F and 55% RH . DO NOT allow air conditioning, electric fans, ovens, open doors or windows (etc.) to create air currents around the merchandiser, as this will impair its correct operation.

Shortages: Check your shipment for any possible shortages of material. If a shortage should exist and is found to be the responsibility of Hussmann Chino, notify Hussmann Chino. If such a shortage involves the carrier, notify the carrier immediately, and request an inspection. Hussmann Chino will acknowledge shortages within ten days from receipt of equipment.

Hussmann Chino Product Control: The serial number and shipping date of all equipment has been recorded in Hussmann's files for warranty and replacement part purposes. All correspondence pertaining to warranty or parts ordering must include the serial number of each piece of equipment involved, in order to provide the customer with the correct parts.

Keep this booklet with the case at all times for future reference.



HUSSMANN®/CHINO

A publication of HUSSMANN® Chino
13770 Ramona Avenue • Chino, California 91710
(909) 590-4910
(800) 922-1919





This equipment is to be installed to comply with the applicable NEC, Federal, State, and Local Plumbing and Construction Code having jurisdiction.


DSF

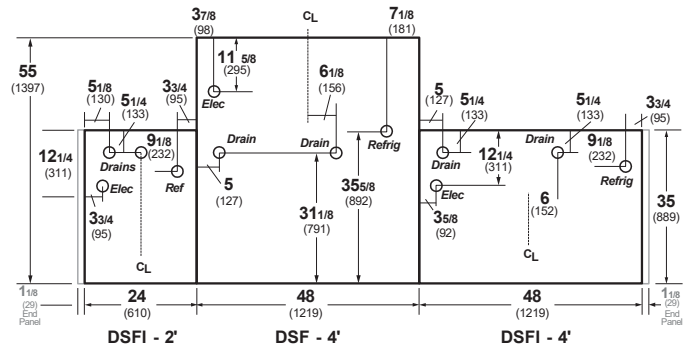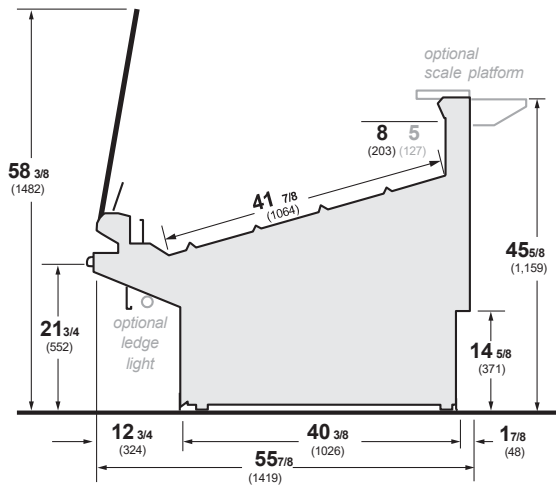


DSFI

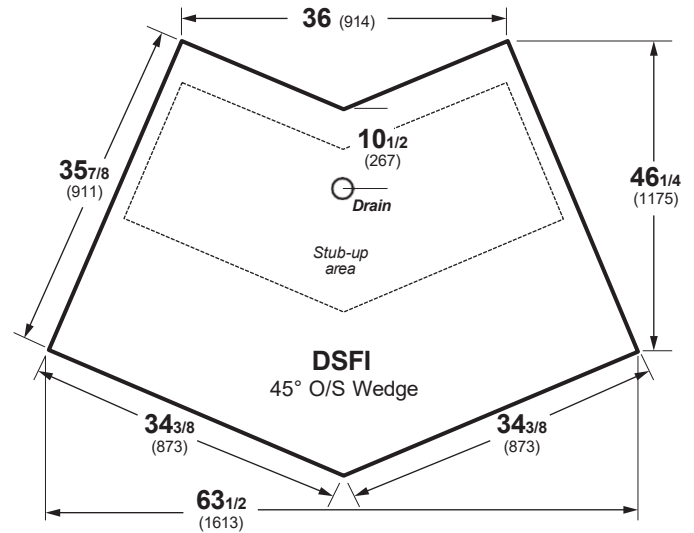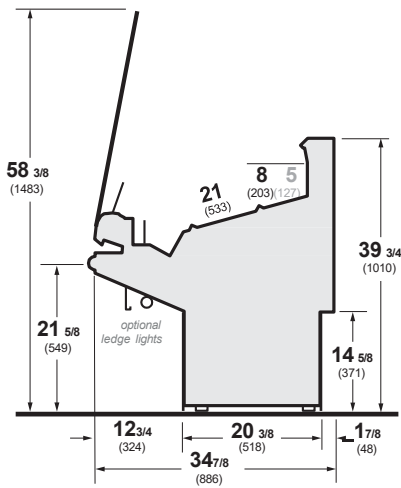


DSF-EP

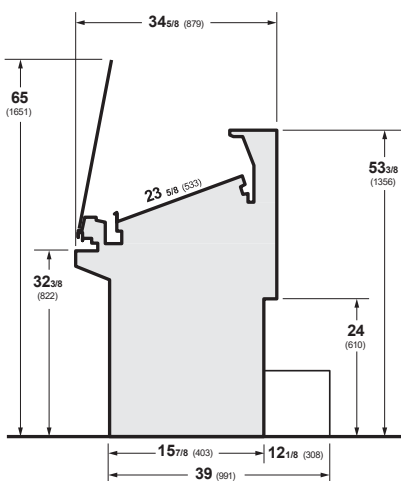

DSFM with Straight glass

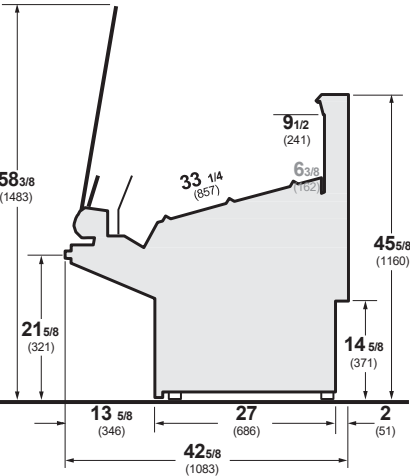


DSFM

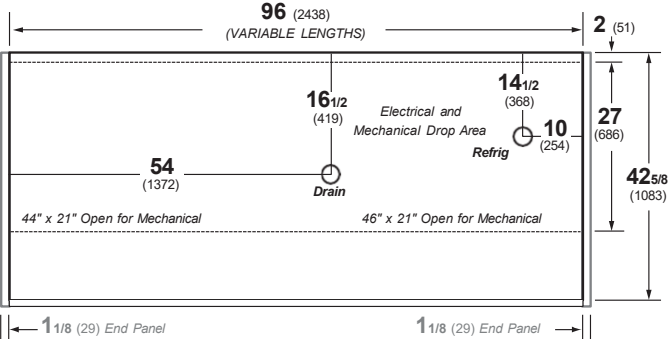


Notes:
Contact your sales representative for information on possible availability of additional case lengths.


DSFM 45° O/S Wedge

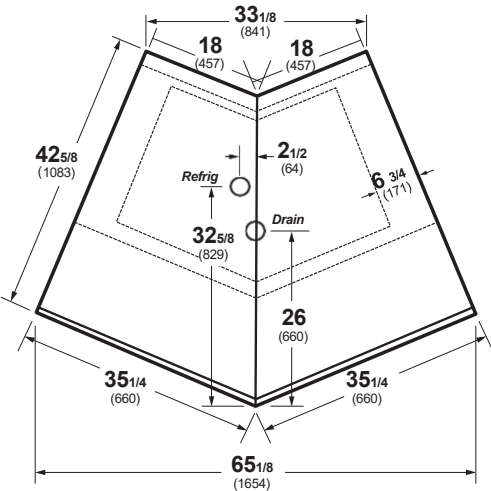

DSFN

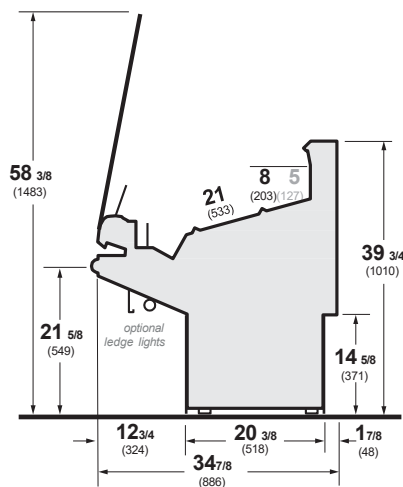


DSFN - 4'

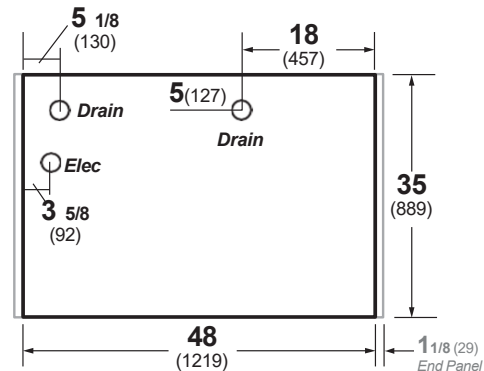


Notes:
Contact your sales representative for information on possible availability of additional case lengths.

DSFN-EP

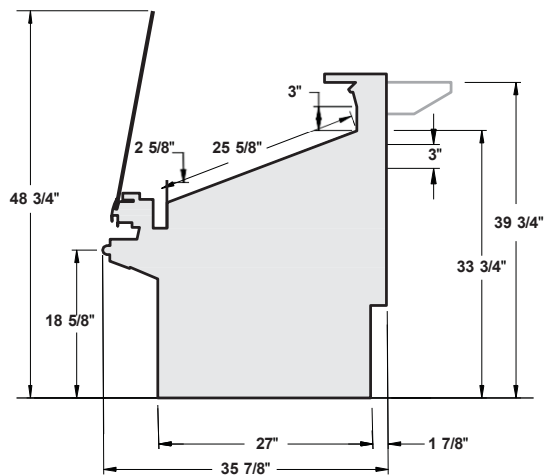

DSFN-EP - 8'

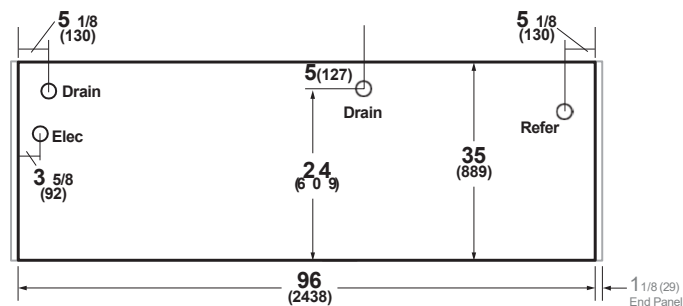

Notes:
Contact your sales representative for information on possible availability of additional case lengths.




SERVICE SEAFOOD
HUSSMANN - DSF (CHINO)


REVISION DATE 09/01/17





Hussmann refrigerated merchandisers configured for sale for use in the United States meet or surpass the requirements of the DOE 2017 energy efficiency standards.

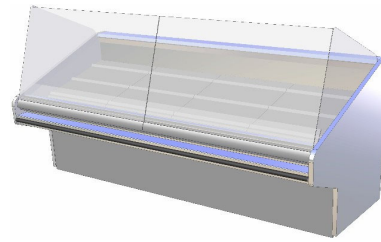

DSF

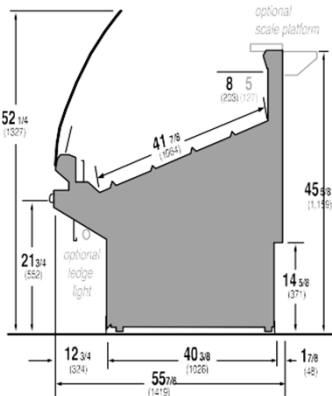

DSF

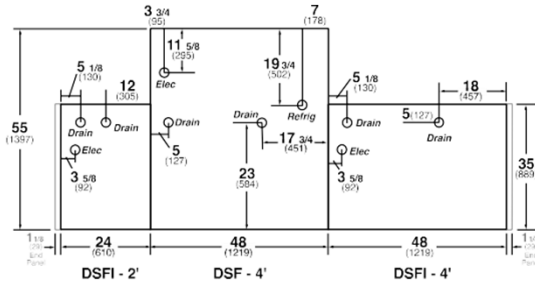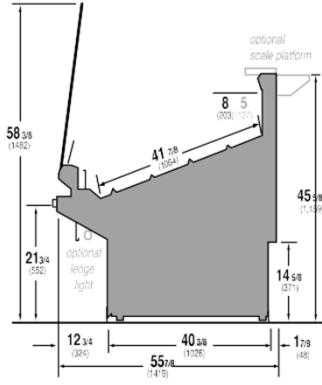

REFRIGERATION DATA:

CASE LENGTH	CASE USAGE	CAPACITY *** (BTU/HR/FT)		TEMPERATURE (°F)			VELOCITY (FT/MIN)
		RATING CONDITION		EVAPORATOR		DISCHARGE AIR ** (°F)	
		NSF 7	AHRI 1200	NSF 7	AHRI 1200	NSF 7	
2',3',4',5',6'	FRESH SEAFOOD	400	400	24	24	30-32	350-500

CASE LENGTH *	EST. REFG. CHRG. (R404A) (LBS)	20°F GLYCOL 6° RISE	
		GPM	PSI
2'	0.3	0.3	0.1
3'	0.5	0.4	0.5
4'	0.7	0.6	1.1
5'	0.9	0.7	1.9
6'	1.1	0.8	0.4

**FRONT DISCHARGE AIR MEASURED INSIDE AIR CURTAIN HONEYCOMB

***REFRIGERATION NOTES:

- 1) BTU'S INCLUDE NO CANOPY LIGHTS AND NO SHELF LIGHTS
- 2) AHRI 1200 RATING POINT FOR ENERGY CONSUMPTION COMPARISON ONLY
- 3) USE DEW POINT FOR HIGH GLIDE REFRIGERANTS. CARE SHOULD BE TAKEN TO USE THE DEW POINT IN P/T TABLES FOR MEASURING AND ADJUSTING SUPERHEAT. ADJUST EVAPORATOR PRESSURE AS NEEDED TO MAINTAIN THE DISCHARGE AIR TEMPERATURE SHOWN.
- 4) THE PRINCIPAL COOLING EFFECT IN FISH CASES IS ACCOMPLISHED WITH A TRADITIONAL ICE BED. THE REFRIGERATION PRESERVES THE ICE AND MAINTAINS A COLD PROTECTIVE LAYER OVER THE PRODUCT.
- 5) RATING CONDITION IS NSF TYPE I, 75°F/55% RH

REFRIGERATION DATA CONTINUED:

ELEC. THERMOSTAT / AIR SENSOR SETTINGS			DEFROST TYPE	TIME (MIN)	DEFROST FREQUENCY (#/DAY)	TERM. TEMP (°F) COIL ONLY	DRIP TIME	DEFROST WATER (LBS/DAY/FT)
USAGE	CUT IN (°F)	CUT OUT (°F)						
FRESH SEAFOOD	33	30	OFF TIME	46	3	48	N/A	1.1

END PANEL WIDTH KEY		
# OF END PNLS	END PNL WIDTH (IN.)	TOTAL ADDED LENGTH (IN.)
1	1.125	1.125
2	1.125	2.25

ELECTRICAL DATA:

STANDARD FANS, HEATERS, LED LIGHTS (115 VOLT)

CASE LENGTH *	EVAPORATOR FANS					HUMIDITY FANS (OPTIONAL)			CANOPY LIGHTS LED OPTIONAL		OPTIONAL LED SHELF LIGHTS		MAX. LED LOAD (W/ ALL OPTIONS)		ANTI-SWEAT HEATERS		CONVENIENCE OUTLETS (OPTIONAL)		
	# OF EVAP FANS	BLADE DIA. (IN.)	BLADE PITCH (°)	AMPS	WATTS	# OF HUMIDITY FANS	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	# OUTLETS	VOLTS	AMPS
2'	1	8	10	0.6	50	1	0.1	8	N/A	N/A	N/A	N/A	N/A	N/A	0.1	11	1	115	15
3'	1	8	10	0.6	50	1	0.1	8	N/A	N/A	N/A	N/A	N/A	N/A	0.1	17	1	115	15
4'	1	8	10	0.6	50	1	0.1	8	N/A	N/A	N/A	N/A	N/A	N/A	0.2	23	1	115	15
5'	2	8	10	0.6	50	1	0.1	8	N/A	N/A	N/A	N/A	N/A	N/A	0.2	29	1	115	15
6'	2	8	10	1.2	100	1	0.1	8	N/A	N/A	N/A	N/A	N/A	N/A	0.3	34	1	115	15

OPTIONAL HIGH OUTPUT LED LIGHTS (115 VOLT)

CASE LENGTH *	CANOPY LIGHTS H.O. LED		OPTIONAL SHELF		MAX. H.O. LED LOAD	
	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS
2'	N/A	N/A	N/A	N/A	N/A	N/A
3'	N/A	N/A	N/A	N/A	N/A	N/A
4'	N/A	N/A	N/A	N/A	N/A	N/A
5'	N/A	N/A	N/A	N/A	N/A	N/A
6'	N/A	N/A	N/A	N/A	N/A	N/A



DOE 2017
Energy Efficiency
Compliant


Hussmann refrigerated merchandisers configured for sale for use in the United States meet or surpass the requirements of the DOE 2017 energy efficiency standards.

SERVICE SEAFOOD - DEEP SERVICE FISH INLET

HUSSMANN - DSFI REMOTE (CHINO)

REVISION DATE

02/02/17

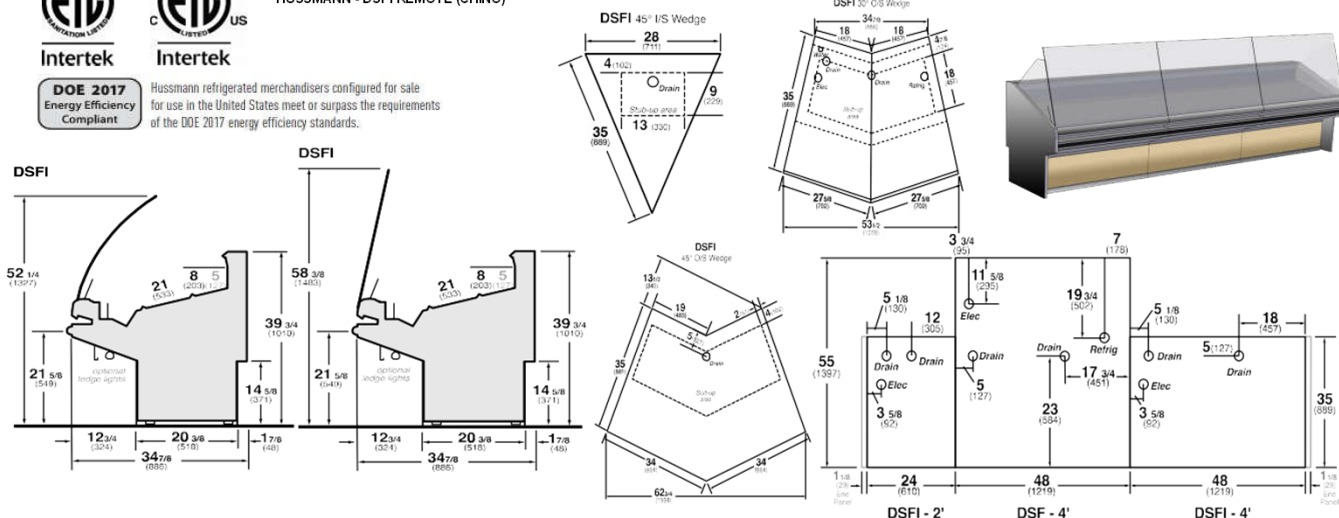

REFRIGERATION DATA:

REFRIGERATION DATA:		CAPACITY *** (BTU/HR/FT) (TOTAL FOR WEDGES)		TEMPERATURE (°F)			VELOCITY (FT/MIN)
CASE LENGTHS/ WEDGES	CASE USAGE	RATING CONDITION		EVAPORATOR		DISCHARGE AIR ** (°F)	
		NSF 7	AHRI 1200	NSF 7	AHRI 1200	NSF 7	
3',4',5'	FRESH SEAFOOD	250	250	26	26	32	500
45° IS	FRESH SEAFOOD	500	500	26	26	32	500
45° OS	FRESH SEAFOOD	1200	1200	26	26	32	500
30° OS	FRESH SEAFOOD	1000	1000	26	26	32	500

**FRONT DISCHARGE AIR MEASURED INSIDE AIR CURTAIN HONEYCOMB

***REFRIGERATION NOTES:

- 1) AHRI 1200 RATING POINT FOR ENERGY CONSUMPTION COMPARISON ONLY
- 2) USE DEW POINT FOR HIGH GLIDE REFRIGERANTS. CARE SHOULD BE TAKEN TO USE THE DEW POINT IN P/T TABLES FOR MEASURING AND ADJUSTING SUPERHEAT. ADJUST EVAPORATOR PRESSURE AS NEEDED TO MAINTAIN THE DISCHARGE AIR TEMPERATURE SHOWN.
- 3) THE PRINCIPAL COOLING EFFECT IN FISH CASES IS ACCOMPLISHED WITH A TRADITIONAL ICE BED. THE REFRIGERATION PRESERVES THE ICE AND MAINTAINS A COLD PROTECTIVE LAYER OVER THE PRODUCT.
- 4) RATING CONDITION IS NSF TYPE I, 75°F/55% RH

CASE LENGTH S	EST. REFG. CHRG. 404A (LBS)	GLYCOL (20°F INLET, 6° RISE)	
		GPM	PSI
3'	0.5	0.3	0.1
4'	0.7	0.4	0.3
5'	0.9	0.4	0.7
45° IS	0.2	0.2	0.3
45° OS	0.2	0.4	1.7
30° OS	0.2	0.3	1.1

REFRIGERATION DATA CONTINUED:

ELEC. THERMOSTAT / AIR SENSOR SETTINGS			DEFROST TYPE	TIME (MIN)	DEFROST FREQUENCY (#/DAY)	TERM. TEMP. (°F) COIL ONLY	DRIP TIME	DEFROST WATER (LBS/DAY/FT)
USAGE	CUT IN (°F)	CUT OUT (°F)						
FRESH SEAFOOD	33	30	OFF TIME	46	3	48	N/A	1.1

END PANEL WIDTH KEY		
# OF END PNLS	END PNL WIDTH (IN.)	TOTAL ADDED LENGTH (IN.)
1	1.125	1.125
2	1.125	2.25

ELECTRICAL DATA:

STANDARD FANS, HEATERS, LED LIGHTS (115 VOLT)

CASE LENGTH	EVAPORATOR FANS					CANOPY LIGHTS LED		OPTIONAL LED SHELF LIGHTS		MAX. LED LOAD (W/ ALL OPTIONS)		ANTI-SWEAT HEATERS		CONVENIENCE OUTLETS (OPTIONAL)			HUMIDITY SYSTEM FANS (OPTIONAL) (3" AXIAL FAN)		
	# OF EVAP FANS	BLADE DIA. (IN.)	BLADE PITCH (°)	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	# OUTLET S	VOLTS	AMPS	# OF FANS	AMPS	WATTS
3'	1	6.7	10	0.6	50	N/A	N/A	N/A	N/A	N/A	N/A	0.1	17	1	115	15	1	0.1	8
4'	1	6.7	10	0.6	50	N/A	N/A	N/A	N/A	N/A	N/A	0.2	23	1	115	15	1	0.1	8
5'	2	6.7	10	1.2	100	N/A	N/A	N/A	N/A	N/A	N/A	0.2	29	1	115	15	1	0.1	8
45° IS	1	6.7	10	0.6	50	N/A	N/A	N/A	N/A	N/A	N/A	0.1	11	N/A	N/A	N/A	1	0.1	8
45° OS	1	6.7	10	0.6	50	N/A	N/A	N/A	N/A	N/A	N/A	0.2	29	N/A	N/A	N/A	1	0.1	8
30° OS	1	6.7	10	0.6	50	N/A	N/A	N/A	N/A	N/A	N/A	0.2	23	N/A	N/A	N/A	1	0.1	8



OPTIONAL HIGH OUTPUT LED LIGHTS (115 VOLT)

CASE LENGTH	CANOPY LIGHTS H.O. LED		OPTIONAL SHELF		MAX. H.O. LED LOAD	
	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS
3'	N/A	N/A	N/A	N/A	N/A	N/A
4'	N/A	N/A	N/A	N/A	N/A	N/A
5'	N/A	N/A	N/A	N/A	N/A	N/A
45° IS	N/A	N/A	N/A	N/A	N/A	N/A
45° OS	N/A	N/A	N/A	N/A	N/A	N/A
30° OS	N/A	N/A	N/A	N/A	N/A	N/A



SERVICE SEAFOOD
HUSMANN - DSFM-EP-R W/ CANOPY (CHNO)
DOE 2017 Energy Efficiency Compliance
Recessed refrigerated case features designed for sale for use in the United States meet or exceed the requirements of the DOE 2017 energy efficiency standards.

REVISION DATE 06/26/26

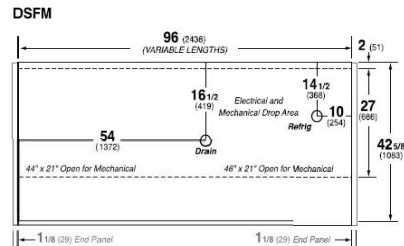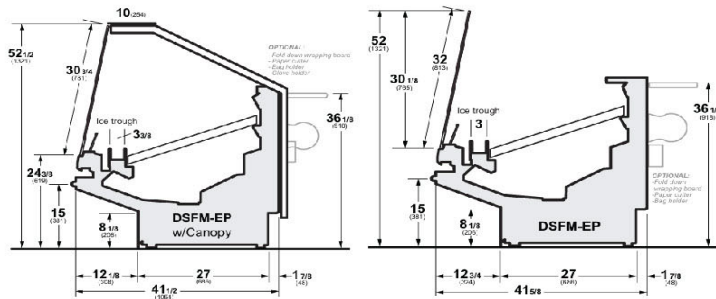

Notes:
Contact your sales representative for information on possible availability of additional case lengths.

REFRIGERATION DATA:

CASE LENGTHS	CASE USAGE	CAPACITY ¹ (BTU/HR/FT) (TOTAL FOR WEDGES)		TEMPERATURE (°F)			VELOCITY (FT/MIN)
		RATING CONDITION		EVAPORATOR		DISCHARGE AIR °F	
		NSF 7	AHRI 1200	NSF 7	AHRI 1200	NSF 7	
3', 4', 5', 6', 8', 10', 12'	FRESH SEAFOOD	400	400	20	20	32	50-100
45° OS	FRESH SEAFOOD	1700	1700	20	20	32	50-100

*FRONT DISCHARGE AIR MEASURED INSIDE AIR CURTAIN HONEYCOMB

***REFRIGERATION NOTES:

- 1) AHRI 1200 RATING POINT FOR ENERGY CONSUMPTION COMPARISON ONLY
- 2) USE DEW POINT FOR HIGH GLIDE REFRIGERANTS. CARE SHOULD BE TAKEN TO USE THE DEW POINT IN P/T TABLES FOR MEASURING AND ADJUSTING SUPERHEAT. ADJUST EVAPORATOR PRESSURE AS NEEDED TO MAINTAIN THE DISCHARGE AIR TEMPERATURE SHOWN.
- 3) RATING CONDITION IS NSF TYPE I, 75°F/55% RH

CASE LENGTHS	EST. REFG. CHRGE. (lb)	GLYCOL (18°F INLET, 4° RISE)	
		GPM	PSI
3'	1.1	0.4	0.1
4'	1.2	0.6	0.4
5'	1.3	0.7	0.8
6'	1.4	0.8	1.2
8'	1.5	1.1	0.7
10'	1.6	1.3	1.2
12'	1.8	1.5	1.8
45° OS	2.1	2.7	2.2

REFRIGERATION DATA CONTINUED:

CASE LENGTHS	ELEC. THERMOSTAT / AIR SENSOR SETTINGS		DEFROST TYPE	TIME (MIN)	DEFROST FREQUENCY (#/DAY)	TERM. TEMP (°F) COIL ONLY	DRIP TIME	DEFROST WATER (LBS/DAY/FT)
	USAGE	CUT IN (°F)	CUT OUT (°F)					
3', 4', 5', 6', 8', 10', 12'	FRESH SEAFOOD	28	27	OFF TIME	46	3	48	N/A
45° OS	FRESH SEAFOOD	27	26	OFF TIME	46	3	48	N/A

END PANEL WIDTH KEY		
# OF END PNLS	END PNL WIDTH (IN.)	TOTAL ADDED LENGTH (IN.)
1	1.125	1.125
2	1.125	2.25

ELECTRICAL DATA:

STANDARD FANS, HEATERS, LED LIGHTS (115 VOLT)

CASE LENGTH	EVAPORATOR FANS					OPTIONAL LED CANOPY LIGHTS		MAX. LED LOAD (W/ ALL OPTIONS)		ANTI-SWEAT HEATERS		CONVENIENCE OUTLETS (OPTIONAL)			HUMIDITY SYSTEM FANS (OPTIONAL) (3" AXIAL)		
	# OF EVAP FANS	BLADE DIA. (IN.)	BLADE PITCH (°)	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	# OUTLETS	VOLTS	AMPS	# OF EVAP	AMPS	WATTS
3'	1	6.7	20	0.6	50	0.1	8	0.1	8	0.1	17	1	115	15	1	0.1	8
4'	1	6.7	20	0.6	50	0.1	10	0.1	10	0.2	23	1	115	15	1	0.1	8
5'	2	6.7	20	1.2	100	0.1	13	0.1	13	0.2	29	1	115	15	1	0.1	8
6'	2	6.7	20	1.2	100	0.1	15	0.1	15	0.3	34	1	115	15	1	0.1	8
8'	2	6.7	20	1.2	100	0.2	21	0.2	21	0.4	46	1	115	15	1	0.1	8
10'	4	6.7	20	2.5	200	0.2	26	0.2	26	0.5	57	1	115	15	1	0.1	8
12'	3	6.7	20	1.9	150	0.3	31	0.3	31	0.6	68	1	115	15	1	0.1	8
45° OS	2	6.7	10	1.2	100	0.1	13	0.1	13	0.3	34	1	115	15	N/A	N/A	N/A

OPTIONAL HIGH OUTPUT LED LIGHTS (115 VOLT)

CASE LENGTH	OPTIONAL CANOPY		MAX. H.O. LED LOAD	
	AMPS	WATTS	AMPS	WATTS
3'	0.1	13	0.1	13
4'	0.1	15	0.1	15
5'	N/A	N/A	N/A	N/A
6'	0.2	26	0.2	26
8'	0.3	30	0.3	30
10'	N/A	N/A	N/A	N/A
12'	0.4	46	0.4	46
45° OS	0.1	13	0.1	13






SERVICE SEAFOOD
HUSSMANN - DSFM-VG REMOTE (CHINO)



Hussmann refrigerated merchandisers configured for sale for use in the United States meet or surpass the requirements of the DOE 2017 energy efficiency standards.

REVISION DATE 09/01/17

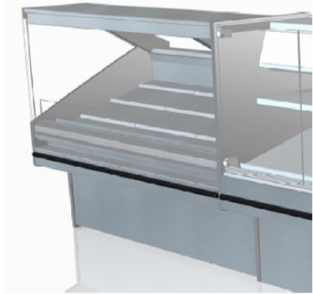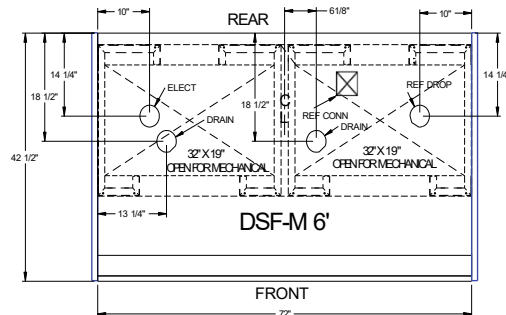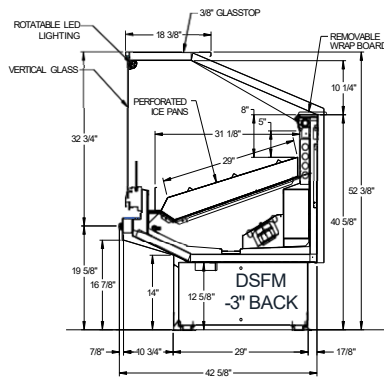

REFRIGERATION DATA:

CASE LENGTHS	CASE USAGE	CAPACITY *** (BTU/HR/FT)		TEMPERATURE (°F)			VELOCITY (FT/MIN)
		RATING CONDITION		EVAPORATOR		DISCHARGE AIR * (°F)	
		NSF 7	AHRI 1200	NSF 7	AHRI 1200	NSF 7	
6', 8', 10', 12'	FRESH SEAFOOD	450	450	24	24	32	130-160

CASE LENGTHS	EST. REFG. CHRG. 404A (LBS)	GLYCOL (20°F INLET, 6° RISE)	
		GPM	PSI
6'	1.3	0.9	0.5
8'	1.8	1.2	1.0
10'	2.3	1.5	1.5
12'	2.8	1.8	2.1

*FRONT DISCHARGE AIR MEASURED INSIDE AIR CURTAIN HONEYCOMB

**DEFROST WATER DOES NOT INCLUDE ICE MELT RATE FROM STANDARD CASE OPERATION

***REFRIGERATION NOTES:

- 1) BTU'S INCLUDE 1 ROW OF CANOPY LIGHTS
- 2) AHRI 1200 RATING POINT FOR ENERGY CONSUMPTION COMPARISON ONLY
- 3) USE DEW POINT FOR HIGH GLIDE REFRIGERANTS. CARE SHOULD BE TAKEN TO USE THE DEW POINT IN P/T TABLES FOR MEASURING AND ADJUSTING SUPERHEAT. ADJUST EVAPORATOR PRESSURE AS NEEDED TO MAINTAIN THE DISCHARGE AIR TEMPERATURE SHOWN.
- 4) THE PRINCIPAL COOLING EFFECT IN FISH CASES IS ACCOMPLISHED WITH A TRADITIONAL ICE BED. THE REFRIGERATION PRESERVES THE ICE AND MAINTAINS A COLD PROTECTIVE LAYER OVER THE PRODUCT.
- 5) RATING CONDITION IS NSF TYPE I, 75°F/55% RH

REFRIGERATION DATA CONTINUED:

ELEC. THERMOSTAT / AIR SENSOR SETTINGS			DEFROST TYPE	TIME (MIN)	DEFROST FREQUENCY (#/DAY)	TERM. TEMP (°F) COIL ONLY	DRIP TIME	DEFROST WATER** (LBS/DAY/FT)
USAGE	CUT IN (°F)	CUT OUT (°F)						
FRESH SEAFOOD	33	30	OFF TIME	46	3	38	N/A	1.6

END PANEL WIDTH KEY		
# OF END PNLS	END PNL WIDTH (IN.)	TOTAL ADDED LENGTH (IN.)
1	1.5	1.5
2	1.5	3.0

ELECTRICAL DATA:

STANDARD FANS, HEATERS, LED LIGHTS (115 VOLT)

CASE LENGTH	EVAPORATOR FANS					HUMIDITY FANS (OPTIONAL)			CANOPY LIGHTS LED		OPTIONAL LED SHELF LIGHTS		MAX. LED LOAD (W/ ALL OPTIONS)		ANTI-SWEAT HEATERS		CONVENIENCE OUTLETS (OPTIONAL)		
	# OF EVAP FANS	BLADE DIA. (IN.)	BLADE PITCH (°)	AMPS	WATTS	# OF HUMIDITY FANS	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	# OUTLETS	VOLTS	AMPS
6'	2	8	10	1.2	100	1	0.1	8	0.3	39	N/A	N/A	0.3	39	0.3	34	1	115	15
8'	2	8	10	1.2	100	1	0.1	8	0.5	54	N/A	N/A	0.5	54	0.4	46	1	115	15
10'	3	8	10	1.9	150	1	0.1	8	0.6	68	N/A	N/A	0.6	68	0.5	57	1	115	15
12'	3	8	10	1.9	150	1	0.1	8	0.7	81	N/A	N/A	0.7	81	0.6	68	1	115	15

OPTIONAL HIGH OUTPUT LED LIGHTS (115 VOLT)


CASE LENGTH	CANOPY LIGHTS H.O. LED		OPTIONAL SHELF		MAX. H.O. LED LOAD	
	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS
6'	0.4	47	N/A	N/A	0.4	47
8'	0.6	64	N/A	N/A	0.6	64
10'	N/A	N/A	N/A	N/A	N/A	N/A
12'	0.8	96	N/A	N/A	0.8	96


SERVICE SEAFOOD
HUSSMANN - DSFN REMOTE (CHINO)



Hussmann refrigerated merchandisers configured for sale for use in the United States meet or surpass the requirements of the DOE 2017 energy efficiency standards.

REVISION DATE 02/02/17


DSFN

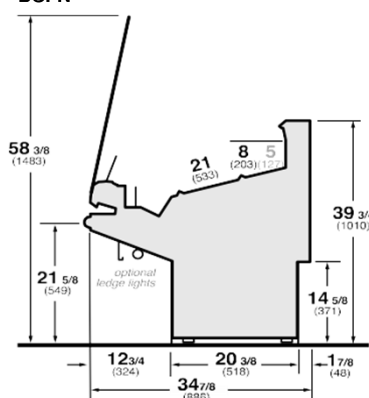


DSFN

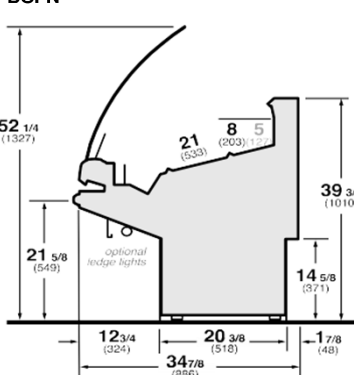

DSFN - 4'

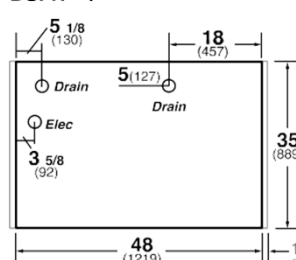

Notes:
Contact your sales representative for information on possible availability of additional case lengths.

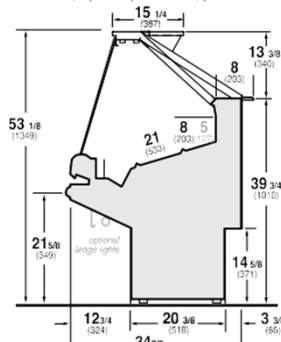DSFN
Narrow Display with Optional Canopy and Door**REFRIGERATION DATA:**

CASE LENGTHS	CASE USAGE	CAPACITY *** (BTU/HR/FT)		TEMPERATURE (°F)			VELOCITY (FT/MIN)
		RATING CONDITION		EVAPORATOR		DISCHARGE AIR ** (°F)	
		NSF 7	AHRI 1200	NSF 7	AHRI 1200	NSF 7	
3', 4', 5', 6', 8', 10', 12'	FRESH SEAFOOD	250	250	24	24	32	500

***FRONT DISCHARGE AIR MEASURED INSIDE AIR CURTAIN HONEYCOMB

***REFRIGERATION NOTES:

- 1) AHRI 1200 RATING POINT FOR ENERGY CONSUMPTION COMPARISON ONLY
- 2) USE DEW POINT FOR HIGH GLIDE REFRIGERANTS. CARE SHOULD BE TAKEN TO USE THE DEW POINT IN P/T TABLE FOR MEASURING AND ADJUSTING SUPERHEAT. ADJUST EVAPORATOR PRESSURE AS NEEDED TO MAINTAIN THE DISCHARGE AIR TEMPERATURE SHOWN.
- 3) THE PRINCIPAL COOLING EFFECT IN FISH CASES IS ACCOMPLISHED WITH A TRADITIONAL ICE BED. THE REFRIGERATION PRESERVES THE ICE AND MAINTAINS A COLD PROTECTIVE LAYER OVER THE PRODUCT.
- 4) RATING CONDITION IS NSF TYPE I, 75°F/55% RH

CASE LENGTH HS	EST. REFG. CHRG. 404A (LBS)	GLYCOL (20°F INLET, 6° RISE)	
		GPM	PSI
3'	0.5	0.3	0.1
4'	0.7	0.3	0.3
5'	0.9	0.4	0.6
6'	1.1	0.5	1.0
8'	1.5	0.7	0.5
10'	1.9	0.8	0.9
12'	2.4	1.0	1.3

REFRIGERATION DATA CONTINUED:

ELEC. THERMOSTAT / AIR SENSOR SETTINGS			DEFROST TYPE	TIME (MIN)	DEFROST FREQUENCY (#/DAY)	TERM. TEMP (°F) COIL ONLY	DRIP TIME	DEFROST WATER (LBS/DAY/FT)
USAGE	CUT IN (°F)	CUT OUT (°F)						
FRESH SEAFOOD	33	30	OFF TIME	46	3	48	N/A	1.1

END PANEL WIDTH KEY		
# OF END PNLS	END PNL WIDTH (IN.)	TOTAL ADDED LENGTH (IN.)
1	1.125	1.125
2	1.125	2.25

ELECTRICAL DATA:**STANDARD FANS, HEATERS, LED LIGHTS (115 VOLT)**

CASE LENGTH	EVAPORATOR FANS					OPTIONAL BOOM LIGHTS LED		OPTIONAL LED SHELF LIGHTS		MAX. LED LOAD (W/ ALL OPTIONS)		ANTI-SWEAT HEATERS		CONVENIENCE OUTLETS (OPTIONAL)			HUMIDITY SYSTEM FANS (OPTIONAL) (3" AXIAL FAN)		
	# OF EVAP FANS	BLADE DIA. (IN.)	BLADE PITCH (°)	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	# OUTLETS	VOLTS	AMPS	# OF EVAP FANS	AMPS	WATTS
3'	1	6.7	10	0.6	50	0.5	58	N/A	N/A	0.5	58	0.1	17	1	115	15	1	0.1	8
4'	1	6.7	10	0.6	50	0.9	108	N/A	N/A	0.9	108	0.2	23	1	115	15	1	0.1	8
5'	1	6.7	10	0.6	50	1.5	170	N/A	N/A	1.5	170	0.2	29	1	115	15	1	0.1	8
6'	2	6.7	10	1.2	100	1.0	116	N/A	N/A	1.0	116	0.3	34	1	115	15	1	0.1	8
8'	2	6.7	10	1.2	100	1.9	215	N/A	N/A	1.9	215	0.4	46	1	115	15	1	0.1	8
10'	3	6.7	10	1.9	150	3.0	339	N/A	N/A	3.0	339	0.5	57	1	115	15	1	0.1	8
12'	3	6.7	10	1.9	150	2.8	323	N/A	N/A	2.8	323	0.6	68	1	115	15	2	0.2	16

OPTIONAL HIGH OUTPUT LED LIGHTS (115 VOLT)

CASE LENGTH	BOOM LIGHTS H.O. LED (OPTIONAL)		OPTIONAL SHELF		MAX. H.O. LED LOAD	
	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS
3'	0.6	71	N/A	N/A	0.6	71
4'	1.1	128	N/A	N/A	1.1	128
5'	1.8	202	N/A	N/A	1.8	202
6'	1.2	142	N/A	N/A	1.2	142
8'	2.2	256	N/A	N/A	2.2	256
10'	3.5	405	N/A	N/A	3.5	405
12'	3.3	383	N/A	N/A	3.3	383





SERVICE SEAFOOD
HUSSMANN - DSFN-EP-R (CHINO)

DOE 2017
Energy Efficiency
Compliant

Husmann refrigerated merchandisers configured for sale for use in the United States meet or surpass the requirements of the DOE 2017 energy efficiency standards.

REVISION DATE 06/21/18

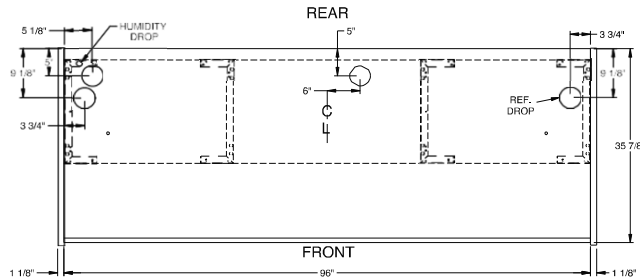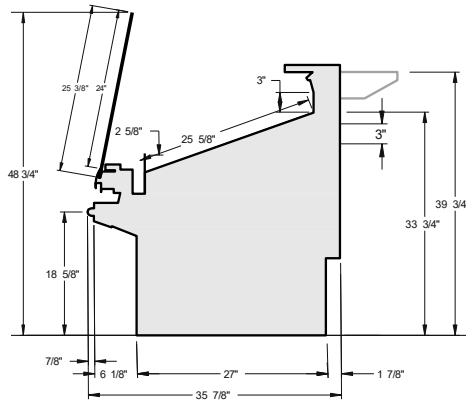

REFRIGERATION DATA:

REFRIGERATION DATA		CAPACITY *** (BTU/HR/FT) (TOTAL FOR WEDGES)		TEMPERATURE (°F)			VELOCITY (FT/MIN)
CASE LENGTHS	CASE USAGE	RATING CONDITION		EVAPORATOR		DISCHARGE AIR ** (°F)	
		NSF 7	AHRI 1200	NSF 7	AHRI 1200	NSF 7	
2',3',4',5', 6',8',10',12'	FRESH SEAFOOD	320	320	22	22	32	50-100
45° O	FRESH SEAFOOD	2000	2000	22	22	32	50-100

****FRONT DISCHARGE AIR MEASURED INSIDE AIR CURTAIN HONEYCOMB**

***REFRIGERATION NOTES:

- 1) AHRI 1200 RATING POINT FOR ENERGY CONSUMPTION COMPARISON ONLY
- 2) USE DEW POINT FOR HIGH GLIDE REFRIGERANTS. CARE SHOULD BE TAKEN TO USE THE DEW POINT IN P/T TABLES FOR MEASURING AND ADJUSTING SUPERHEAT. ADJUST EVAPORATOR PRESSURE AS NEEDED TO MAINTAIN THE DISCHARGE AIR TEMPERATURE SHOWN.
- 3) RATING CONDITION IS NSF TYPE I, 75°F/55% RH

CASE LENGT HS	EST. REFG. CHRG. 404A (LBS)	GLYCOL (20°F INLET, 6° RISE)	
		GPM	PSI
2'	0.3	0.2	0.0
3'	0.5	0.3	0.0
4'	0.7	0.4	0.3
5'	0.9	0.6	0.5
6'	1.1	0.7	0.9
8'	1.5	0.8	0.5
10'	1.9	1.0	0.8
12'	2.4	1.2	1.2
45' O	0.4	3.2	2.8

REFRIGERATION DATA CONTINUED:

ELEC. THERMOSTAT / AIR SENSOR SETTINGS			DEFROST TYPE	TIME (MIN)	DEFROST FREQUENCY (#/DAY)	TERM. TEMP (°F) COIL ONLY	DRIP TIME	DEFROST WATER (LBS/DAY/FT)
USAGE	CUT IN (°F)	CUT OUT (°F)						
BLOWER COIL	31	29	OFF TIME	46	3	48	N/A	TBD
SPIRAL COIL	31	30				48	N/A	

END PANEL WIDTH KEY

# OF END PNLS	END PNL WIDTH (IN.)	TOTAL ADDED LENGTH (IN.)
1	1.125	1.125
2	1.125	2.25

ELECTRICAL DATA:

STANDARD FANS, HEATERS, LED LIGHTS (115 VOLT)

CASE LENGTH	EVAPORATOR FANS					OPTIONAL LED SHELF LIGHTS		MAX. LED LOAD (W/ ALL OPTIONS)		ANTI-SWEAT HEATERS		CONVENIENCE OUTLETS (OPTIONAL)			HUMIDITY SYSTEM FANS (OPTIONAL) (3" AXIAL FAN)		
	# OF EVAP FANS	BLADE DIA. (IN.)	BLADE PITCH (°)	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	# OUTLETS	VOLTS	AMPS	# OF EVAP FANS	AMPS	WATTS
2'	1	6.7	15	0.6	50	N/A	N/A	N/A	N/A	N/A	N/A	1	115	15	1	0.1	8
3'	1	6.7	15	0.6	50	N/A	N/A	N/A	N/A	N/A	N/A	1	115	15	1	0.1	8
4'	1	6.7	15	0.8	50	N/A	N/A	N/A	N/A	N/A	N/A	1	115	15	1	0.1	8
5'	2	6.7	15	1.2	100	N/A	N/A	N/A	N/A	N/A	N/A	1	115	15	1	0.1	8
6'	2	6.7	15	1.2	100	N/A	N/A	N/A	N/A	N/A	N/A	1	115	15	1	0.1	8
8'	2	6.7	15	1.2	100	N/A	N/A	N/A	N/A	N/A	N/A	1	115	15	1	0.1	8
10'	4	6.7	15	2.5	200	N/A	N/A	N/A	N/A	N/A	N/A	1	115	15	1	0.1	8
12'	3	6.7	15	1.9	150	N/A	N/A	N/A	N/A	N/A	N/A	1	115	15	1	0.1	8
45" O	2	6.7	15	1.2	100	N/A	N/A	N/A	N/A	N/A	N/A	1	115	15	1	0.1	8

OPTIONAL HIGH OUTPUT LED LIGHTS (115 VOLT)

CASE LENGTH	OPTIONAL SHELF		MAX. H.O. LED LOAD	
	AMPS	WATTS	AMPS	WATTS
2'	N/A	N/A	N/A	N/A
3'	N/A	N/A	N/A	N/A
4'	N/A	N/A	N/A	N/A
5'	N/A	N/A	N/A	N/A
6'	N/A	N/A	N/A	N/A
8'	N/A	N/A	N/A	N/A
10'	N/A	N/A	N/A	N/A
12'	N/A	N/A	N/A	N/A
45"O	N/A	N/A	N/A	N/A

Installation

Location


The refrigerated merchandisers have been designed for use only in air conditioned stores where temperature and humidity are maintained at or below 75°F and 55% relative humidity. DO NOT allow air conditioning, electric fans, ovens, open doors or windows (etc.) to create air currents around the merchandiser, as this will impair its correct operation.

Product temperature should always be maintained at a constant and proper temperature. This means that from the time the product is received, through storage, preparation and display, the temperature of the product must be controlled to maximize life of the product.

Uncrating the Stand (If Provided; Crating is Optional)

Place the fixture as close to its permanent position as possible. Remove the top of the crate. Detach the walls from each other and remove from the skid. Unbolt the case from the skid. The fixture can now be lifted off the crate skid. **Lift only at base of stand!**

When crating is not provided, lift at one end panel using forklift and place a dolly under that end panel such that end panel rests in the middle of the dolly. Repeat the same procedure at the other end panel. Once the fixture is on dollies, move it carefully out of the truck. This is a recommendation only. Unloading the fixture following safe procedures is the responsibility of the company unloading and installing these fixtures.

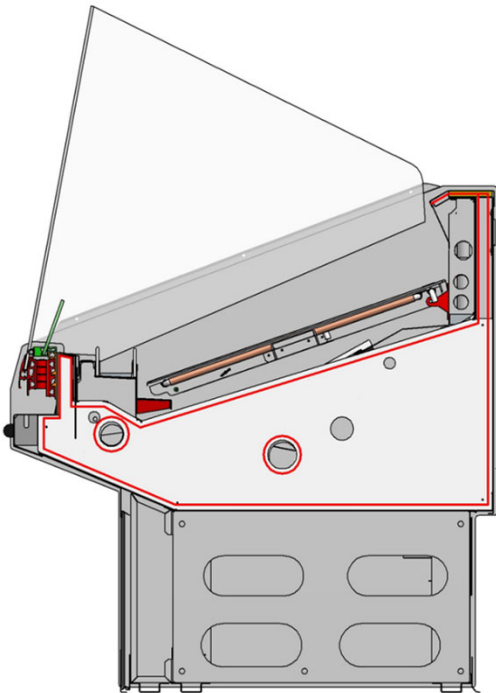

Exterior Loading

These models have not been structurally designed to support excessive external loading. **Do not walk on their tops;** This could cause serious personal injury and damage to the fixture.

Setting and Joining

The sectional construction of these models enable them to be joined in line to give the effect of one continuous display. A joint trim kit is supplied with each joint.



WARNING

- DSF glass is shipped installed to merchandiser.
- Merchandiser will arrive with shipping foam to prevent glass damage
- Cases must be set and joined prior to removal of glass shipping foam.
 - High risk of injury if glass shipping foam is removed prior to transportation and or finalizing permanent location.

Leveling

IMPORTANT! IT IS IMPERATIVE THAT CASES BE LEVELED FROM FRONT TO BACK AND SIDE TO SIDE PRIOR TO JOINING. A LEVEL CASE IS NECESSARY TO INSURE PROPER OPERATION, WATER DRAINAGE, GLASS ALIGNMENT, AND OPERATION OF THE HINGES SUPPORTING THE GLASS. LEVELING THE CASE CORRECTLY WILL SOLVE MOST HINGE OPERATION PROBLEMS.

NOTE: A. To avoid removing concrete flooring, begin lineup leveling from the highest point of the store floor.

B. When wedges are involved in a lineup, set them first.


All cases were leveled and joined prior to shipment to insure the closest possible fit when cases are joined in the field. When joining, use a carpenters level and shim legs accordingly. Case must be raised correctly, under legs where support is best, to prevent damage to case.

Red solid line indicates where sealant must be applied before bolting cases together

Body Panel Removal


The merchandiser's body panels are designed to be held in place without the use of fasteners for a smoother less intrusive aesthetics. The lower body panel is held in place by the lower flange of the upper front body panel located just underneath the bumper section of the case and resting hooks located at the bottom of the case which the body panel rest onto.

Follow the below steps in order to remove body panels and vice versa to re-install to the merchandiser.

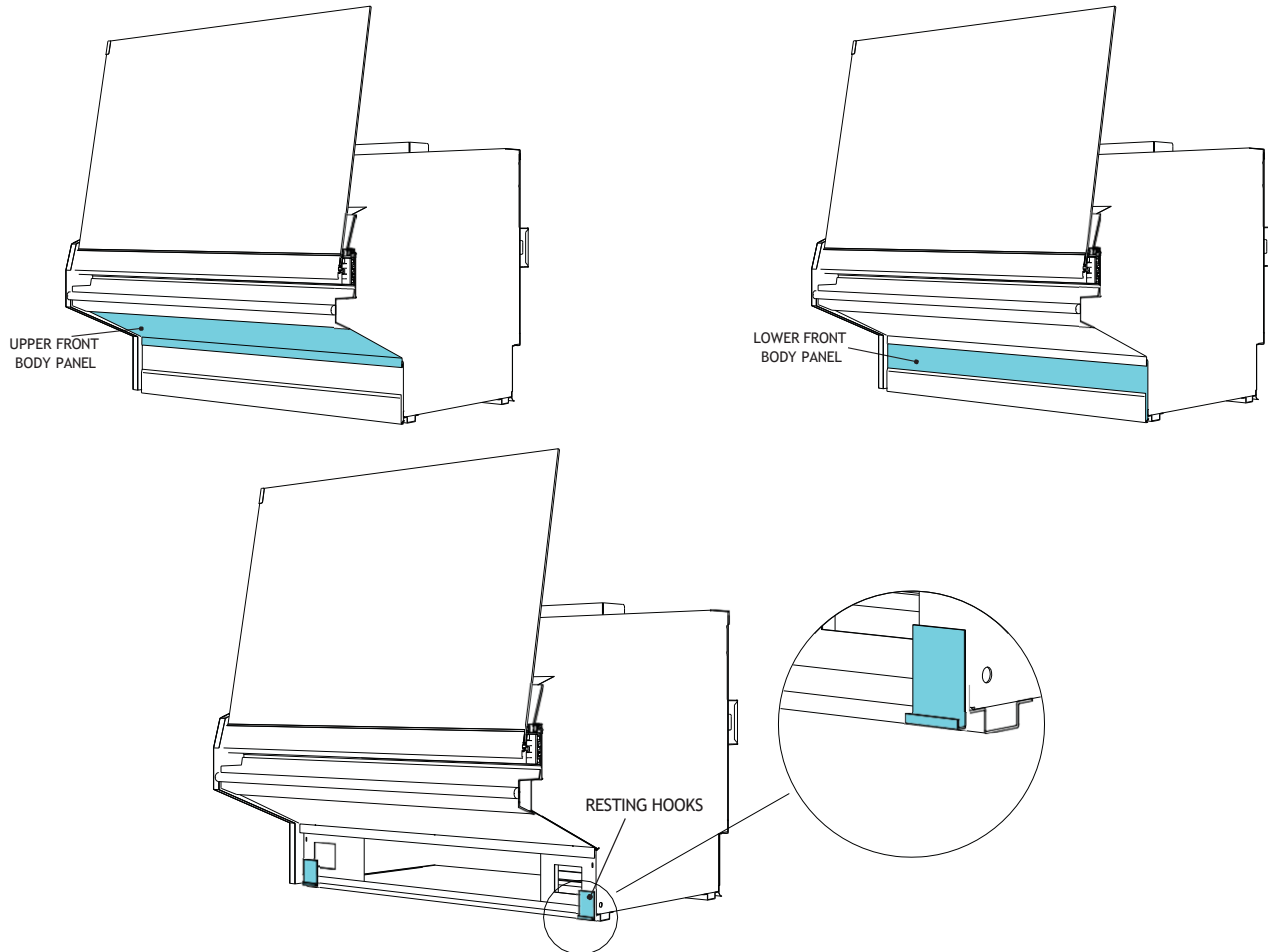


Step 1

Raise body panel in upward motion to lift bottom channel from resting hooks at bottom of case.

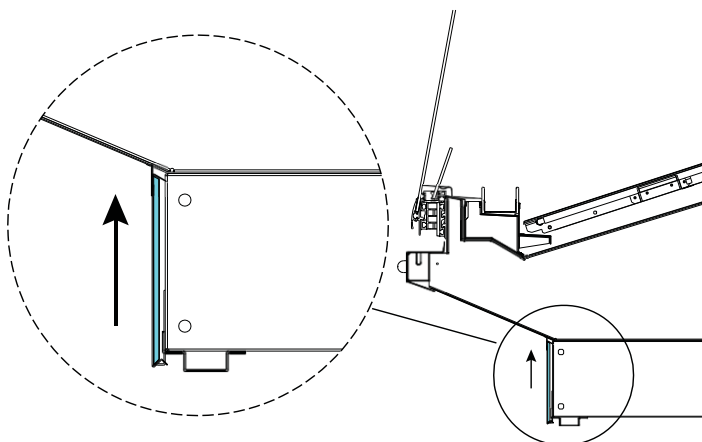



Step 2

Pull body panel inward clearing over lower resting hooks and down to extract slots from retaining clips.

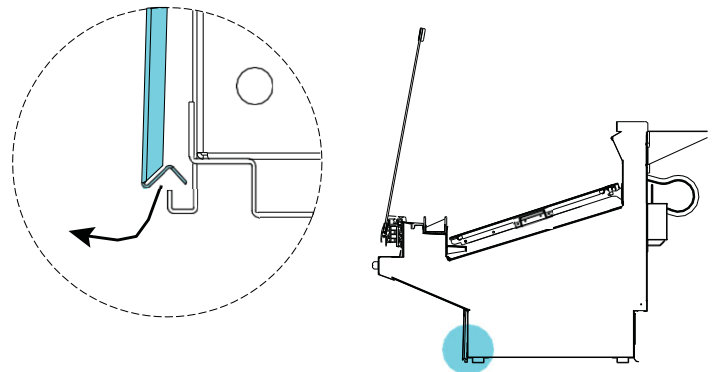

Attach Body Panels

To attach the body panels back onto the merchandiser follow the steps in reverse order.

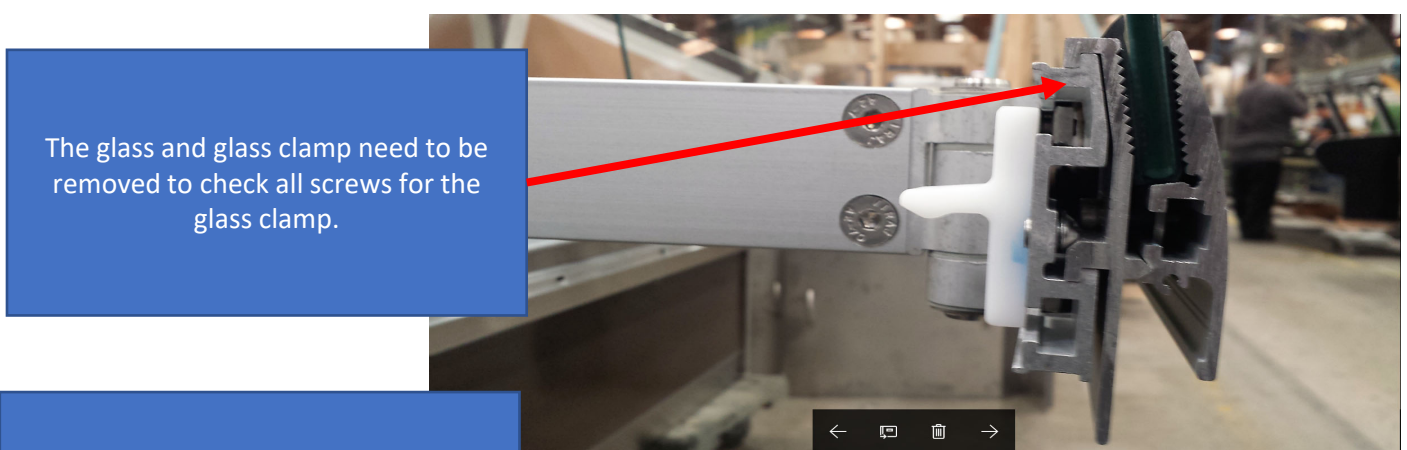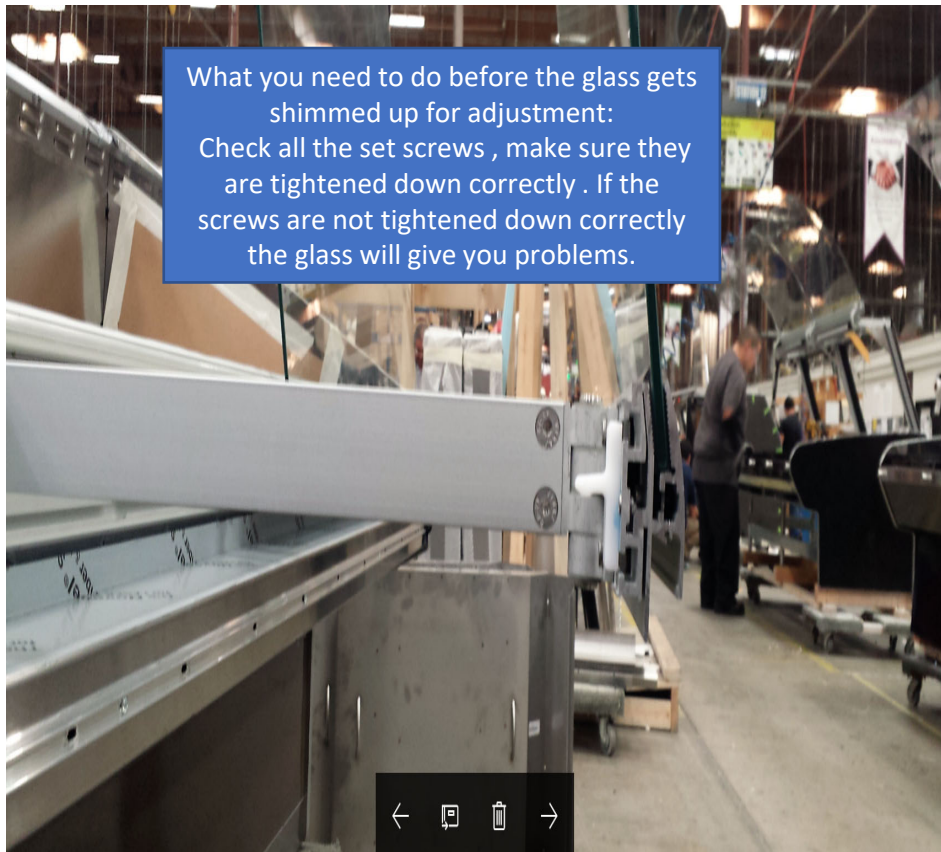


What to do after the set screws are tightened down and the problem continues .


Add a Formica shim to the glass that is not matching, if the glass is down add a shim to the inside between the glass and the glass clamp.

If the glass is high add a shim to the outside between the glass and the clamp.


If shims need to be added, the glass and glass clamp need to be removed to add the shims.

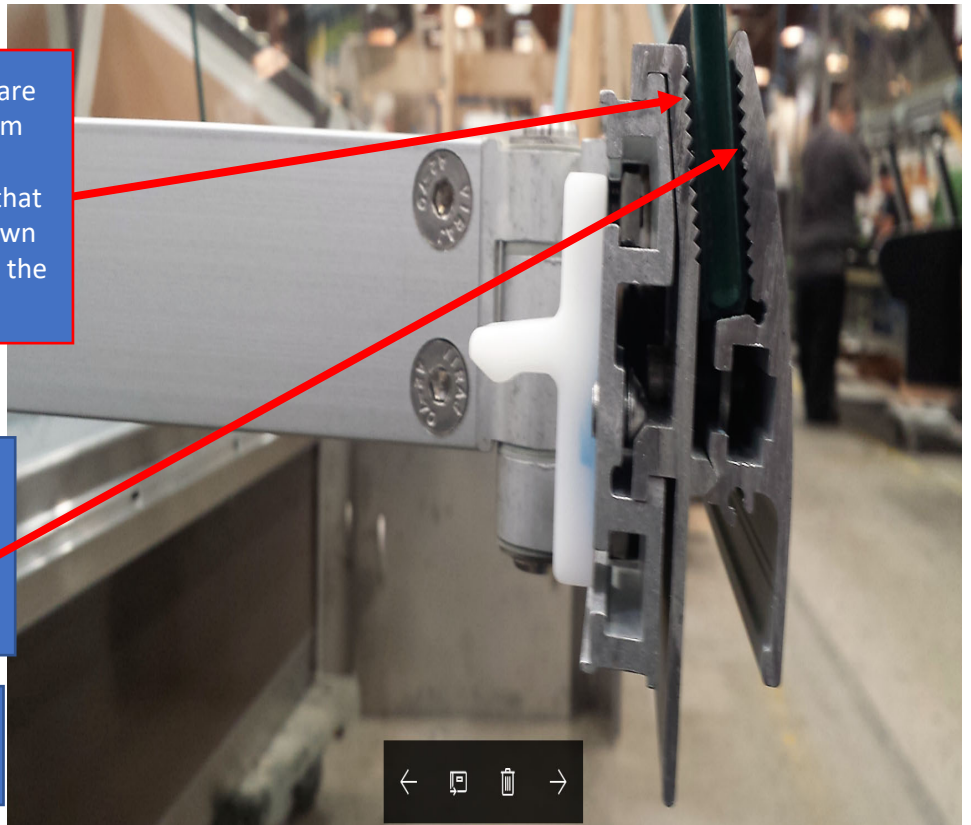


Add a small shim between the glass clamp and the hinge to the top so the glass will move out.

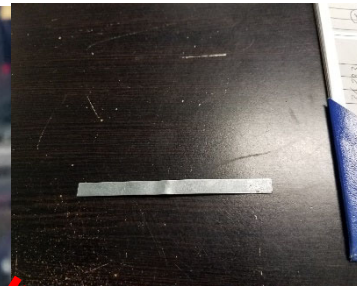

Add a small shim between the glass clamp and the hinge to the bottom so the glass will move in.

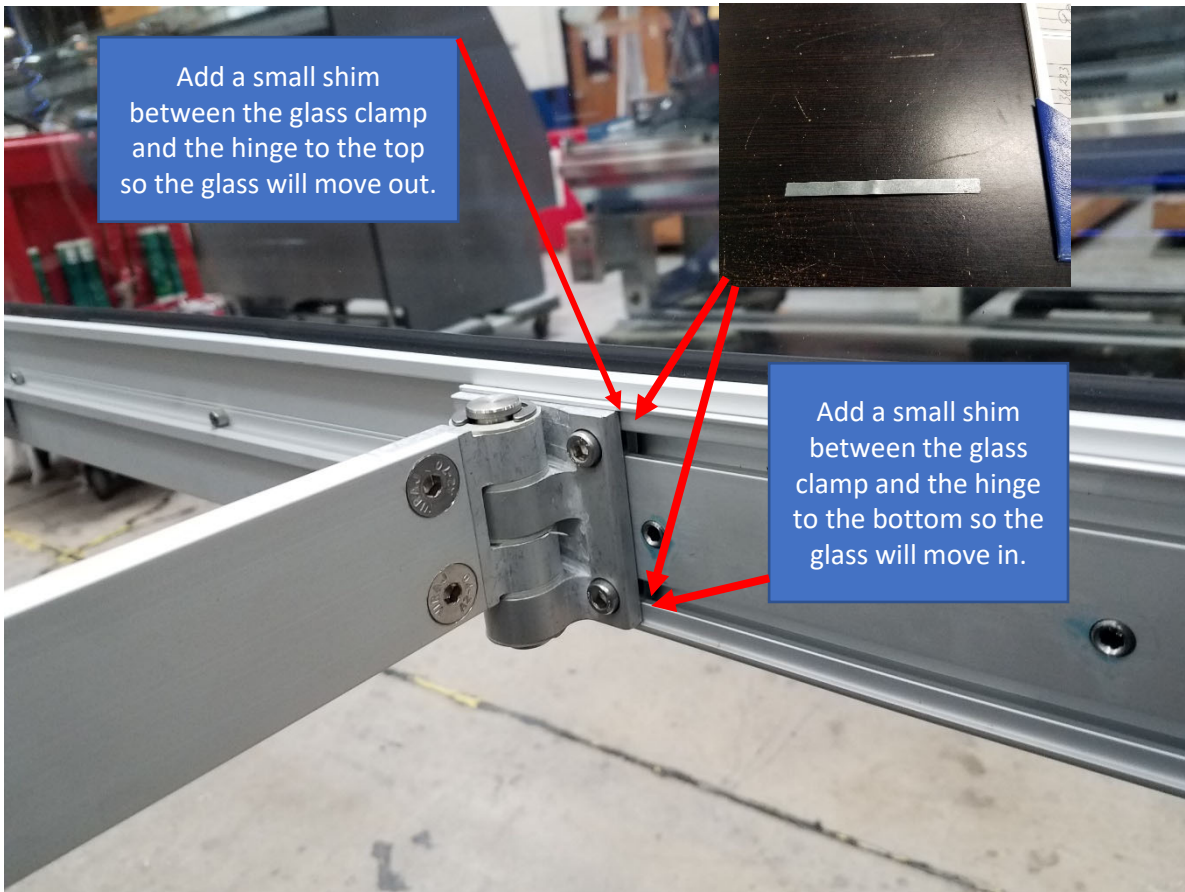


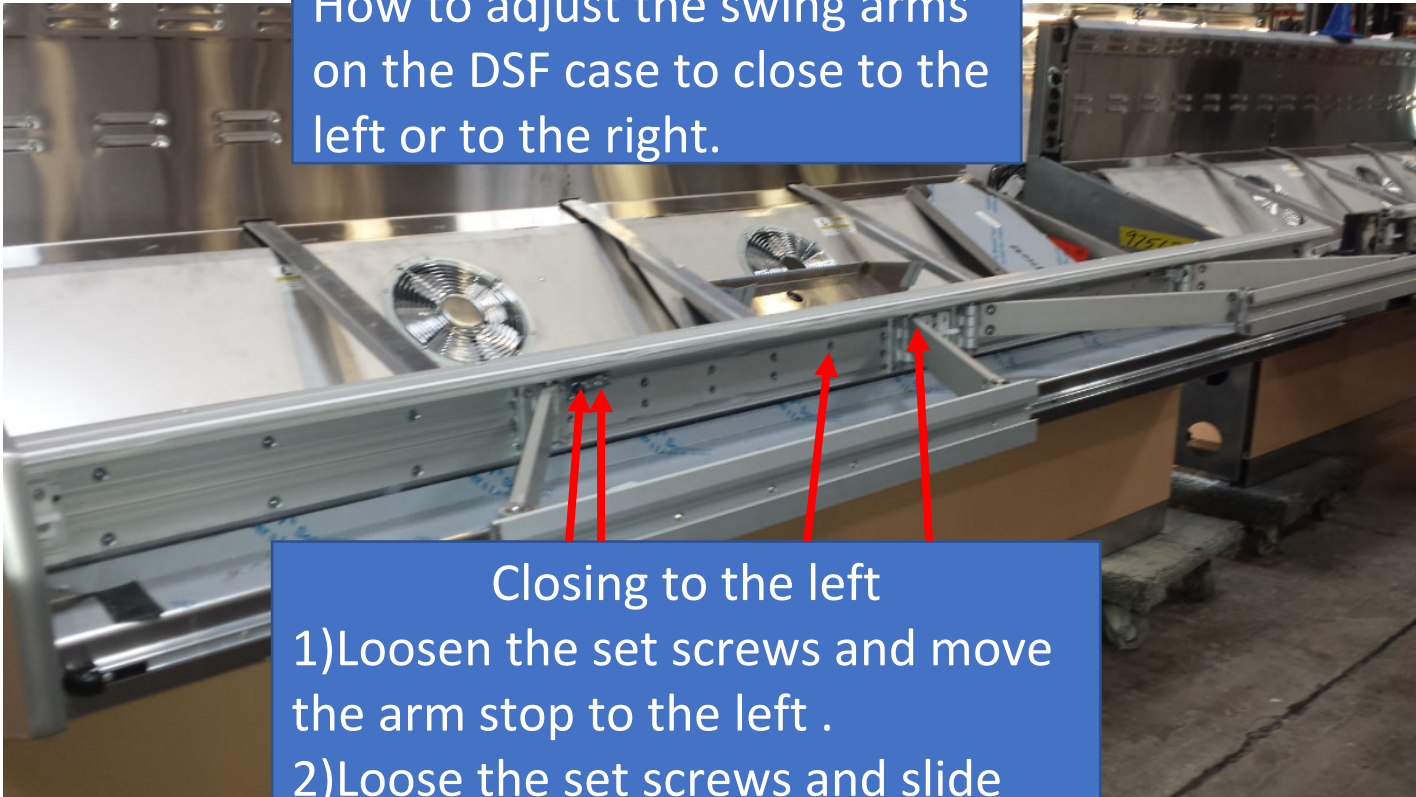

How to adjust the swing arms on the DSF case to close to the left or to the right.

Closing to the left

- 1) Loosen the set screws and move the arm stop to the left .
- 2) Loose the set screws and slide the swing arm to the right.

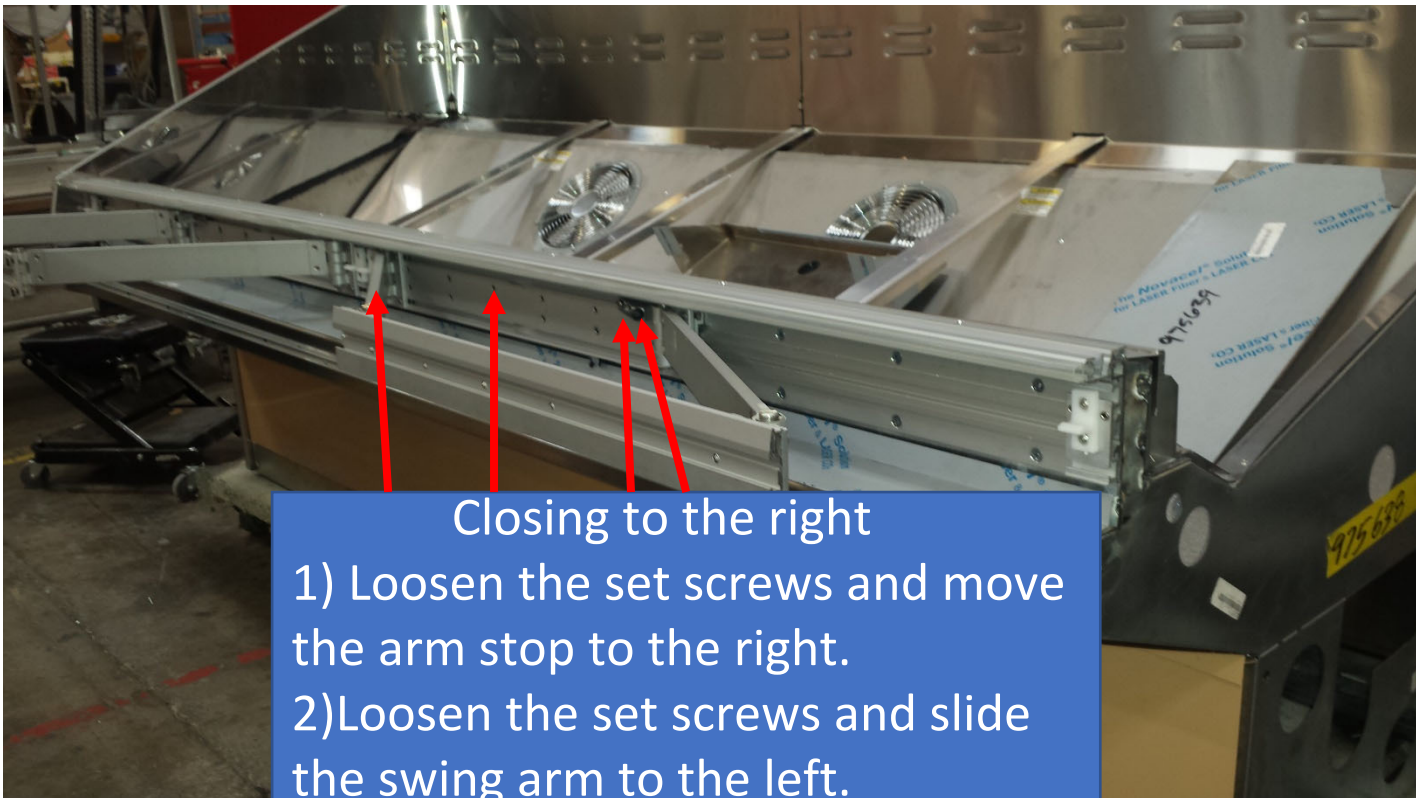


Closing to the right

- 1) Loosen the set screws and move the arm stop to the right.
- 2) Loosen the set screws and slide the swing arm to the left.

To align the top section:
Add a shim between the case and
the arm here if the arm needs to
move back.

The 2 screws at the back holding the
stainless-steel arm need to be loosened if
a shim needs to be added to the arm.

Add a shim here if the arm needs to
move forward.

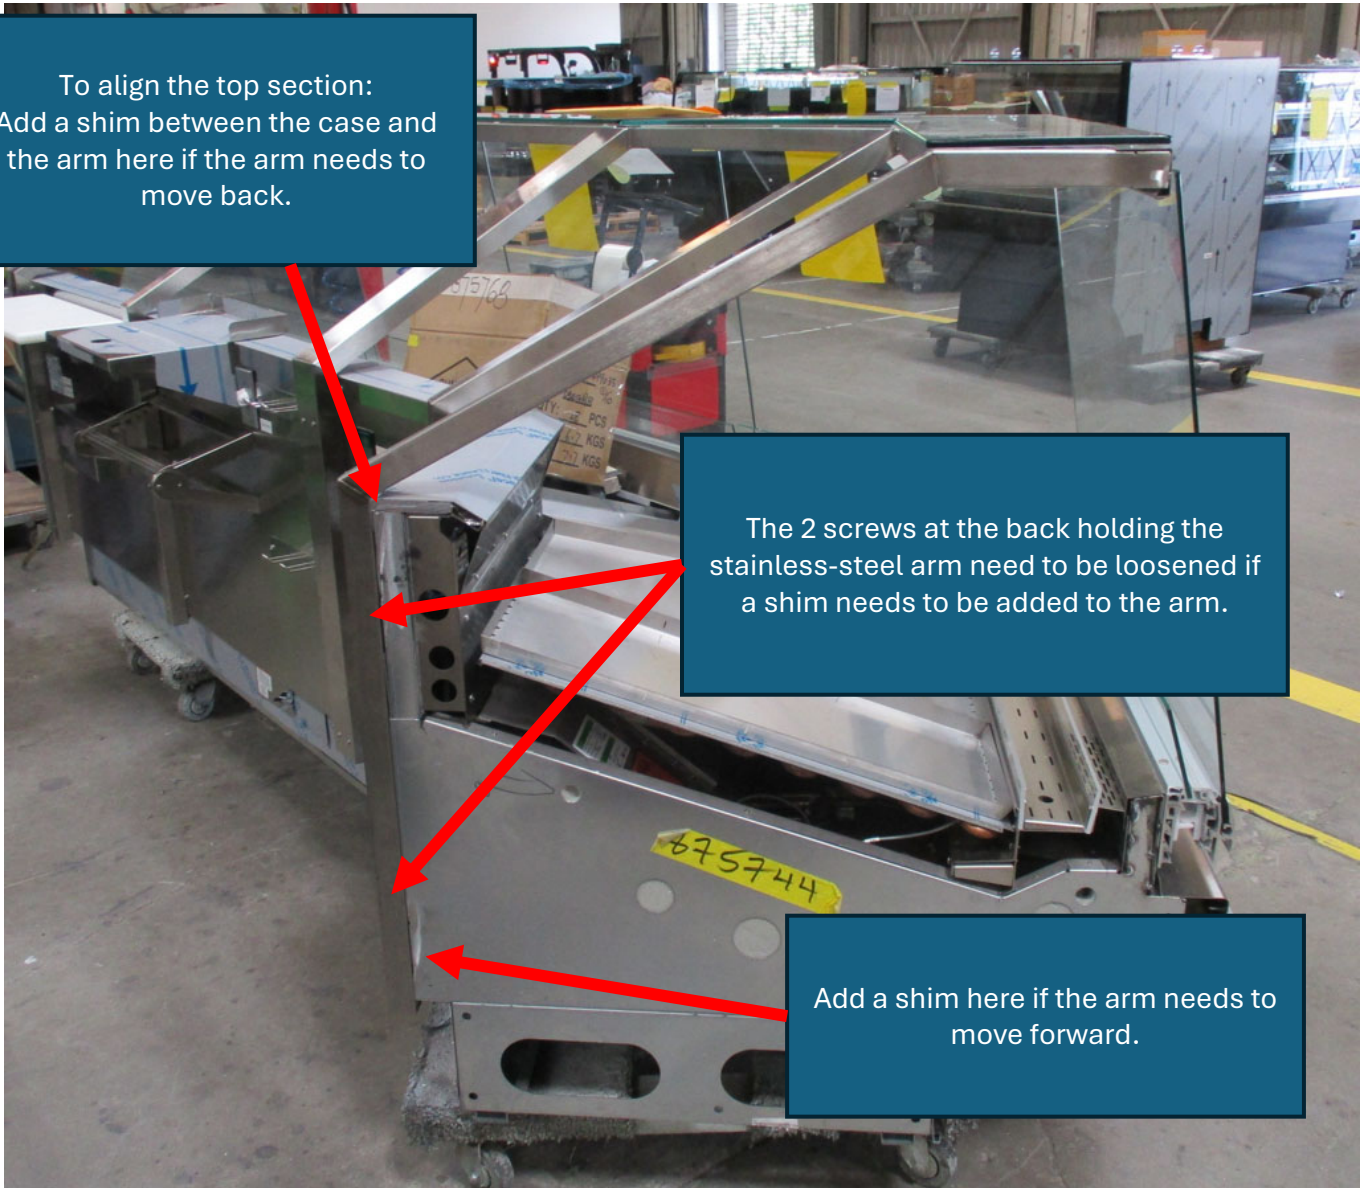

Lifting Instructions


DSF Lifting and Transport Instructions

1. The DSF is not recommended to be lifted by a forklift due to critical refrigeration components underneath merchandiser.
For the safest process defer to using J-Bars




Use of forklift may damage critical refrigeration components and or drainage piping. Use a spotter when placing forks. Preferable method of movement is to use J-Bars or Jacks.


2. Remove splash guards and lower body panels before lifting with a jack. Serious damage will occur if the body panels are not removed (see pg. 16 for body panel removal).
3. The DSF can be raised at one end to allow the placement of rollers or dollies then repeated to raise opposite end.
4. Never drag or push the DSF by ANY COMPONENT including ANY GLASS. This will result in damage to the base, and possibly damage to other components and or injury/serious bodily harm.
7. Evenly support the entire base structure on rollers or dollies before attempting to move. Each Base Leg must have its own dolly to properly support the case.
8. Smaller dollies (36" or less) will require one dolly per corner at all four corners to ensure a safe transporting process

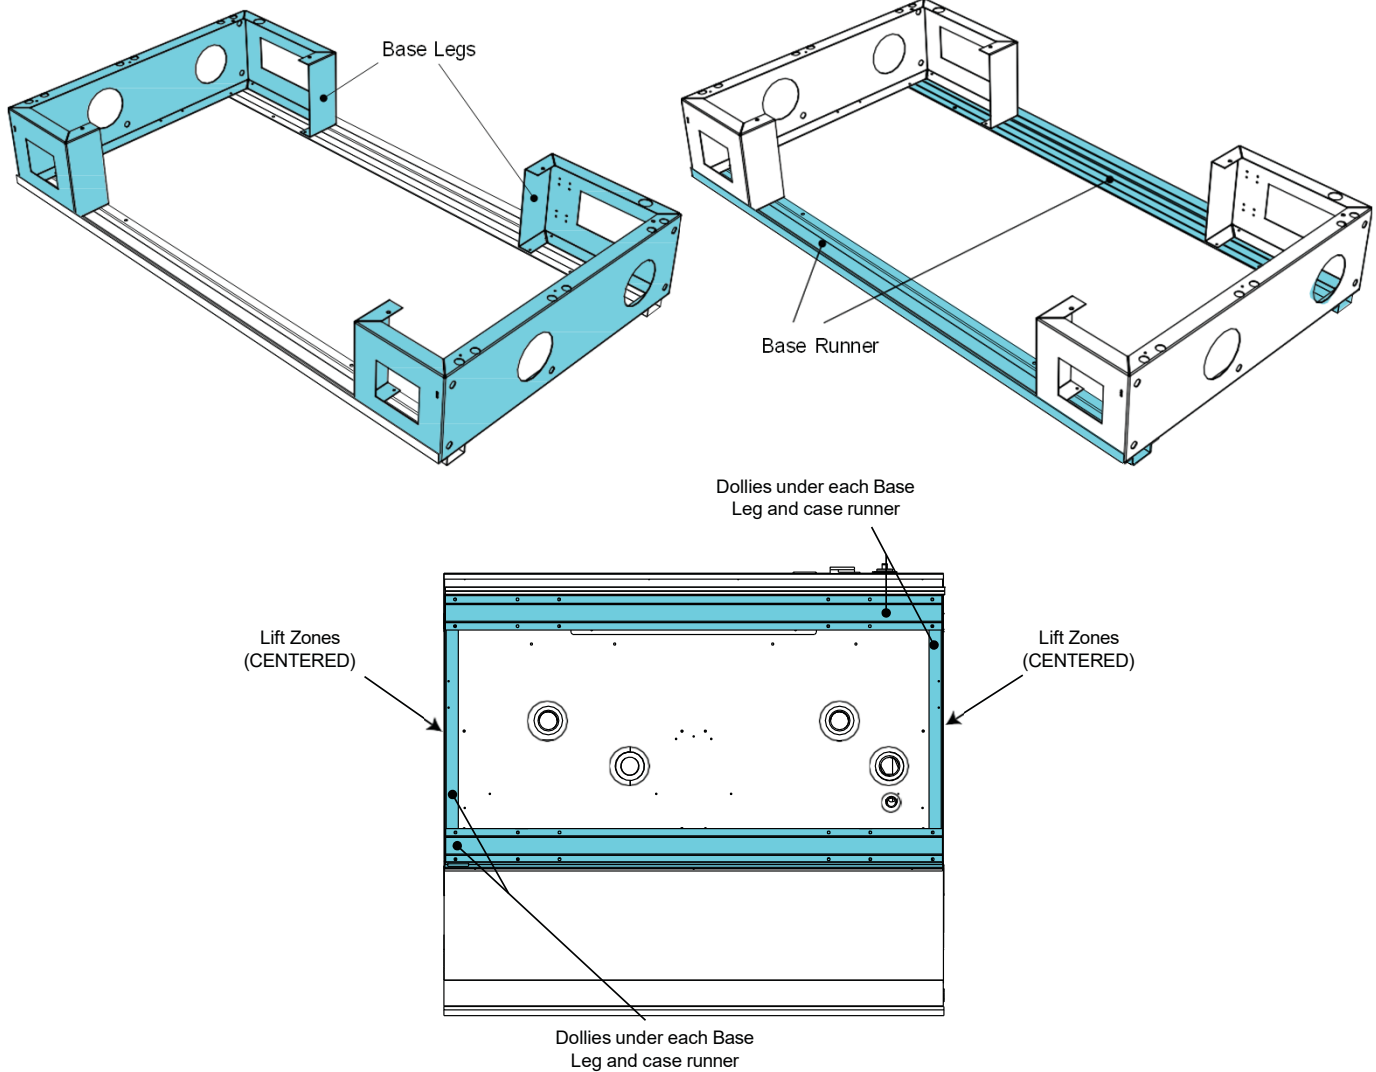

Lifting Instructions (Cont'd)

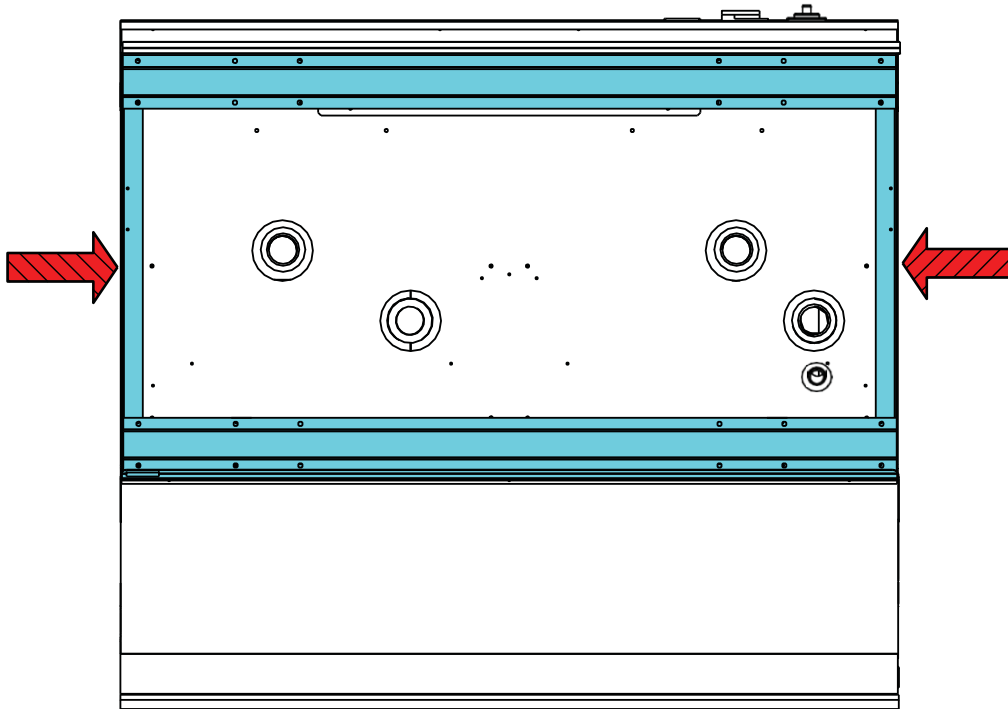

9. While using J-Bars, use the specified set points to support the case based of the size of dollies being utilized.
- Raise one end of the case first.
 - One J-Bar is usually sufficient to lift the case, use multiple J-Bars at specified lift zones if one does not satisfy the safe lift of the merchandiser.
 - Place Dollies and chock wheels before lifting the other side. Be sure that the dollies are evenly spaced to carry to weight of the case

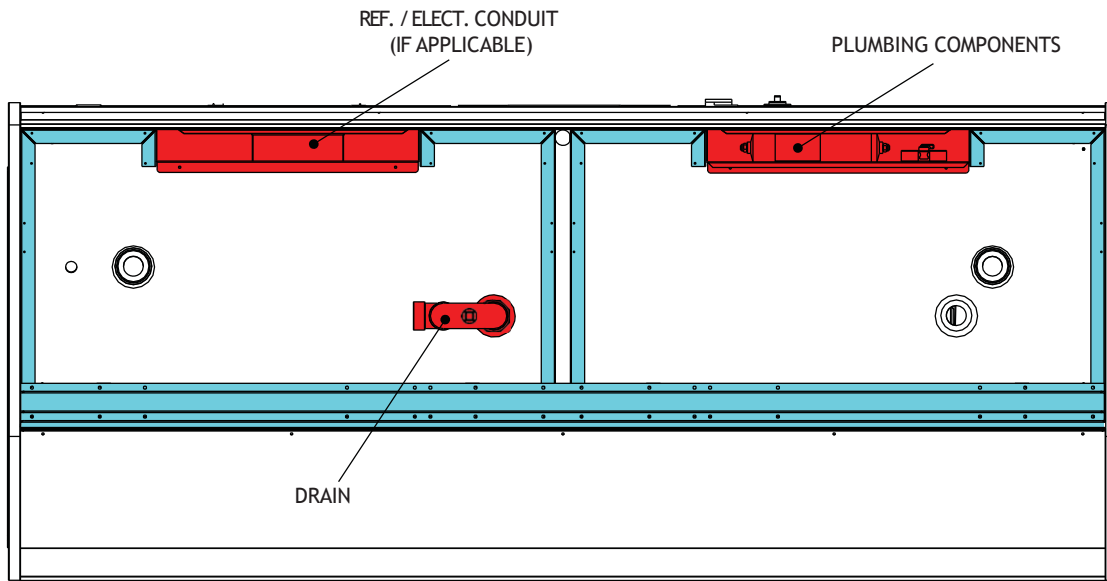

10. Avoid all contact when lifting or transporting merchandiser in order to prevent any damage to the listed critical refrigeration and electrical components.

Plumbing

Waste Outlet and P-TRAP

The waste outlet is located off the center of the case on one side allowing drip piping to be run lengthwise under the fixture. The water seal is factory installed. Do not tighten the water seal where it connects to the drain fitting. Twisting the water seal "trap" can cause a water leak in the case's bottom liner. Do not use thread sealant between ABS drain fitting and water seal.

P-traps must be installed at the base of all refrigerated cases. The 1 1/2" P-TRAP and threaded adapter must be installed to prevent air leakage and insect entrance into the fixture.



WARNING

The drain and water seal are factory installed.
DO NOT use thread sealant or over-tighten these parts.
DO NOT twist water seal. Damage to the drain fitting or water seal may occur if overtightened or incorrectly tampered with.

WARNING!

Do NOT apply thread sealer to ABS P-Trap.



Installing Condensate Drain

Poorly or improperly installed condensate drains can seriously interfere with the operation of this refrigerator, and result in costly maintenance and product losses. Please follow the recommendations listed below when installing condensate drains to insure a proper installation:

1. Never use pipe for condensate drains smaller than the nominal diameter of the pipe or P-TRAP supplied with the case.
2. When connecting condensate drains, the P-TRAP must be used as part of the condensate drain to prevent air leakage or insect entrance. Store plumbing system floor drains should be at least 14" off the center of the case to allow use of the P-TRAP pipe section. Never use two water seals in series in any one line. Double P-TRAPS in series will cause a lock and prevent draining.
3. Always provide as much down hill slope ("fall") as possible; 1/8" per foot is the preferred minimum. PVC pipe, when used, must be supported to maintain the 1/8" pitch and to prevent warping.
4. Avoid long runs of condensate drains. Long runs make it impossible to provide the "fall" necessary for good drainage.
5. Provide a suitable air break between the flood rim of the floor drain and outlet of condensate drain. 1" is ideal.
6. Prevent condensate drains from freezing:
 - a. Do not install condensate drains in contact with non-insulated suction lines. Suction lines should be insulated with a non absorbent insulation material such as Armstrong's Armaflex.
 - b. Where condensate drains are located in dead air spaces (between refrigerators or between a refrigerator and a wall), provide means to prevent freezing. The water seal should be insulated to prevent condensation.

Humidification

General Description

One contributor to the spoilage of fresh meats is dehydration, which causes loss in weight and volume (shrinkage) and product discoloration. As the refrigeration system removes heat from the case, it also removes critical moisture from the air, and any unwrapped products in the case. The Humidity System replaces the moisture in the air, in order to compensate for the moisture taken by the refrigeration system, and disposed of down the drain line. The system is built into the discharge plenum, and mixes moisture laden air with refrigerated air before the air is passed through - and around the product.

The system is constructed almost entirely of PVC pipe, and uses air that is sub-cooled to approximately the same temperature as the case. The sub-cooling of air inhibits the formation of growth found to be a problem in other humidification systems. Maintenance is almost unnecessary if you follow a few simple rules:

1. Keep the case clean.
2. Keep the water filter clean, and change it every six to twelve months or sooner, depending on the kind of water found in your area.
3. Flush the header every six (6) months, by loosening the connecting "L", then removing it from the case, and flushing with a hose.



IMPORTANT INFORMATION

The DSF is capable of maintaining superb product quality with the installation of the proper controlling devices. These devices should be set according to the Hussmann's specifications. The humidity system should be properly maintained. Incorrect settings and failure to maintain the humidity system will result in short product life. Below are a few guidelines for optimum performance and product life:

- Set thermostat to cut in at the discharge temperature designated in the case specifications section of the appropriate installation guide or specification sheet. Maintain the recommended product temperature for Deli, Meat, and Fish. DO NOT set temperature too cold, as this causes product dehydration.
- Temperatures should be achieved by means of a T-STAT and Suction Solenoid at each case. DO NOT use EPR valves, Liquid Line Solenoids, or electronic control devices of any kind. These controls allow temperature swings that cause dehydration and excessive energy consumption.
- Set defrost cycles as listed in the Case Specifications Data for your particular case. The number of defrosts per day should never change. The duration of the defrost cycle may be adjusted to meet conditions present at your location.

- Clean humidity system a minimum of every 90 days for proper system operation.
- Work and rotate product - not to exceed a four (4) hour period.
- At night, turn off case lights, and cover unwrapped product with moistened cheesecloth or fabric towels.
- Keep meat holding box at 32°F.
- Keep meat prep room refrigerated at 55°F.
- Meat Bloom Box (if applicable) should be at 36°F.
- Meat must enter the case at 40°F or below. Product deteriorates rapidly above 40°F.
- Clean, sanitary conditions are required throughout the meat holding, prep, and work areas.
- Do not display product directly within the air discharge
- Turn and rotate meat. The blood works down through the meat over time, which causes the top surface to discolor and dehydrate. Turn meat 3-4 times per day.
- It is not required to remove product from case overnight. Turn off case lights, and cover product with moistened cheesecloth or fabric towel. This helps slow down product dehydration, by taking moisture from the cloth and not the product. This is an old method used by meat shops for many years, as it extends product life.
- Cold coils remove heat and moisture from the case and deposit this as frost onto the coil. Thus a defrost is required to remove this frost. Our humidity system induces moisture into the case, and helps slow down the dehydration process. The only other moisture in the case is that which is in the product. A single level of meat will dry out faster than a fully loaded case with 3-4 levels of meat.
- The colder the case, the faster the product loses its moisture and shelf life. It is very important to maintain a constant, even, correct, product temperature.

Humidification System Hookups

Remove the raceway panel on the lower back of the case. The pre-piped water shut-off valve and the water filter are located on the left hand side of the case. The water line (which is a 1/4" OD copper fitting) can be connected to the ball shut-off valve, by means of a compression fitting (supplied). The line should be one size larger than the supply line. The line can then be run from one case to another from within the raceway(s) using Tee connectors. Before connecting the water to the humidity system, it is best to purge the line to flush any debris that may clog the water filter. If the water line requires purging after the cases are hooked together, it is not necessary to check each one. Simply shut ball valves to each humidity system, remove the water line from the last case in the flow, and purge. By doing this as a precautionary measure, you may avoid problems and repeat servicing.

Manifold Flush System

Start-up

Turn on the fan circuit. Check to see if the fan for the humidity system is running. Remove the right hand bottom pan (when facing the front of the case), then the TXV cover. The fan is located up against the right hand side of the case, as viewed from the front, under the fan plenum (see diagram). View the blade, and make sure the fan rotation agrees with the air flow arrows. Turn on the water, by turning the ball valve in the direction of the flow (OFF is at 90° to the direction of flow).


After a few minutes, check the spray header by sliding the honeycomb to the left to expose the discharge tube located on the right hand side of the case (when viewed from the rear), by lifting the 4'-0" section of honeycomb with both ends, until the bottom clears. Pull up and set aside. The spray header will be exposed. Grasp the header and pull it loose from the 90° "L" until you see the misting nozzle, which should be spraying. If not, check the following:

1. Make sure the water is feeding the nozzle.
2. Remove the nozzle, and purge the water.
3. Check strainer at entrance to nozzle.

Reinsert the header into the 90° "L", making sure that the nozzle is in the center of the pipe when totally inserted, and the holes in the header are facing the front of the case at a level angle. The discharge tube can easily be pulled to service.

Maintenance

- Clean humidity system a minimum of every 90 days for proper system operation.

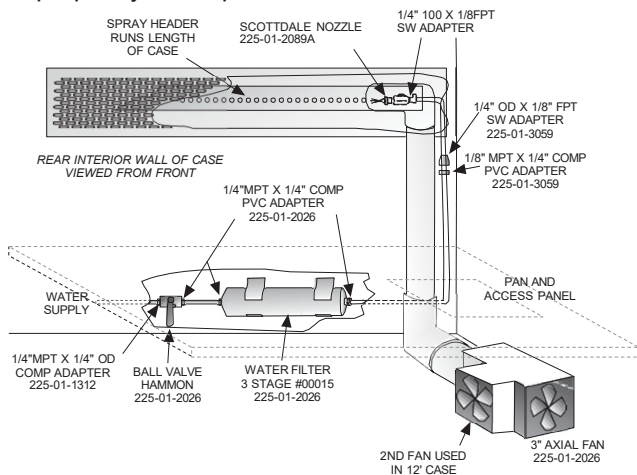

HUMIDITY SYSTEM as viewed from the front.

Note: The axial fans included in the humidity system must be replaced as a unit.

General Description

Twice a day for two (2) minutes, a high pressure water stream will flush most residue build-up from the bottom of the manifold chamber. This is the area that residue builds and expands from. Frequency of this periodic maintenance will vary depending on water mineral content and sanitary conditions.

Automatic Flush System

Electrical components are located within the electrical raceway. Electrical components in this area are 115V AC. Step-down transformer is located in wire-way, and is controlled by pump switch. Water flow for flush system is rated at 0.25 GPM at 60PSI water pressure. Flush nozzle located in the rear of the case.

Basic System Operation:

1. Filtered water is supplied to the 115V solenoid valve.
2. At a time of day determined by you, the 115V time clock will energize the solenoid for 2 minutes.

Start Up:

1. Manually move time clock to initiate a flush cycle.
 2. Observe that flush nozzle is spraying down center of manifold chamber.
 3. Set clock to correct time of day.
 4. Set trip pins to the "time of day system is to flush"
- (NOTE: 2 flush/day!)

Manual Flush System

Water valve is located on the outside of the case, in the rear, on the left hand side as viewed from the rear.

Refrigeration

Refrigerant Type

The standard refrigerant will be specified on the customer order. Check the serial plate on the case for information.

Piping

The refrigerant line outlets are located under the case. Locate first the electrical box, the outlets are then on the same side of the case but at the opposite end. Insulate suction lines to prevent condensation drippage.

Refrigeration Lines

<u>Liquid</u>	<u>Suction</u>
3/8" O.D.	5/8" O.D.

NOTE: The standard coil is piped at 5/8" (suction); however, the store tie-in may vary depending on the number of coils and the draw the case has. Depending on the case setup, the connecting point in the store may be 5/8", 7/8", or 1 1/8". Refer to the particular case you are hooking up.

Refrigerant lines should be sized as shown on the refrigeration legend furnished by the store.

Oil traps must be installed at the base of all suction line vertical risers on refrigerated cases.

Pressure drop can rob the system of capacity. To keep the pressure drop to a minimum, keep refrigerant line run as short as possible, using the minimum number of elbows. Where elbows are required, use long radius elbows only.

Control Settings

See DSF, DSFM technical data sheet for the appropriate settings for your merchandiser. Maintain these parameters to achieve near constant product temperatures. Product temperature should be measured first thing in the morning, after having been refrigerated overnight. For all multiplexing, defrost should be time terminated. Defrost times should be as directed in the DSF, DSFM technical data sheet. The number of defrosts per day should never change. The duration of the defrost cycle may be adjusted to meet conditions present at your location.

Access to TX Valves and Drain Lines

Mechanical - Remove product from end of case. Remove product racks. Remove refrigeration and drain access panels (labeled). TX valve (mechanical only) and drain are located under each access panel at end of the case.

Electronic - The Electronic Expansion valve master and slave cylinder(s) are located within the electrical access panel(s).

Electronic Expansion Valve (Optional)

A wide variety of electronic expansion valves and case controllers can be utilized. Please refer to EEV and controller manufacturers information sheet. Sensors for electronic expansion valves will be installed on the coil inlet, coil outlet, and in the discharge air. (Some supermarkets require a 4th sensor in the return air). Case controllers will be located in the electrical raceway or under the case.

Thermostatic Expansion Valve Location

This device is located on the same side as the refrigeration stub. A balanced port expansion valve model is furnished as standard equipment, unless otherwise specified by customer.

Expansion Valve Adjustment

Expansion valves must be adjusted to fully feed the evaporator. Before attempting any adjustments, make sure the evaporator is either clear or very lightly covered with frost, and that the fixture is within 10°F of its expected operating temperature.

Measuring the Operating Superheat

1. Determine the suction pressure with an accurate pressure gauge at the evaporator outlet.
2. From a refrigerant pressure temperature chart, determine the saturation temperature at the observed suction pressure.
3. Measure the temperature of the suction gas at the thermostatic remote bulb location.
4. Subtract the saturation temperature obtained in step No. 2 from the temperature measured in step No. 3.
5. The difference is superheat.
6. Set the superheat for 5°F - 7°F.

T-STAT Location

T-STATS are located within the electrical raceway of the 4' or 5' main section of the case. In all the cases, the T-STAT is located on the same side of the case. If you are looking at the case from the back, it is on the left hand side.

Standard Case Wire Color Code	
Color Decsription	Color
■ Ground	Green
■ Anti-Sweat	Purple
■ Lights	Orange
■ Receptacles	Yellow
■ T-Stat/Solenoid 230VAC	Red/Black
■ T-Stat/Solenoid 115VAC	White/Black
■ T-Stat/Solenoid 24VAC	Red/White
■ Fan Motors	Brown
Blue Condensing Unit	
Use Copper Conductors Only	
430-01-0338 R101003	

CASE MUST BE GROUNDED

NOTE: Refer to label affixed to case to determine the actual configuration as checked in the "TYPE INSTALLED" boxes.

Standard lighting for all refrigerated models will be full length LED Lights located within the case at the top.

Field Wiring and Serial Plate Amperage

Field Wiring must be sized for component amperes printed on the serial plate. Actual ampere draw may be less than specified. Field wiring from the refrigeration control panel to the merchandisers is required for refrigeration thermostats. Case amperes are listed on the wiring diagram, but always check the serial plate.



DANGER

BEFORE SERVICING

ALWAYS DISCONNECT ELECTRICAL

POWER AT THE MAIN DISCONNECT

WHEN SERVICING OR REPLACING ANY

ELECTRICAL COMPONENT.


This includes (but not limited to) Fans, Heaters

Thermostats, and Lights.

Electrical Components Location

Electrical components (if applicable) will be located in the lower rear raceway of the DSF merchandiser.

- 1. Remove free-floating splashguard away from case.
- 2. Elect. / Refer. panels are designed with simple slide in and rest designs. Lift conduit panels up and away from case to gain access to conduits.






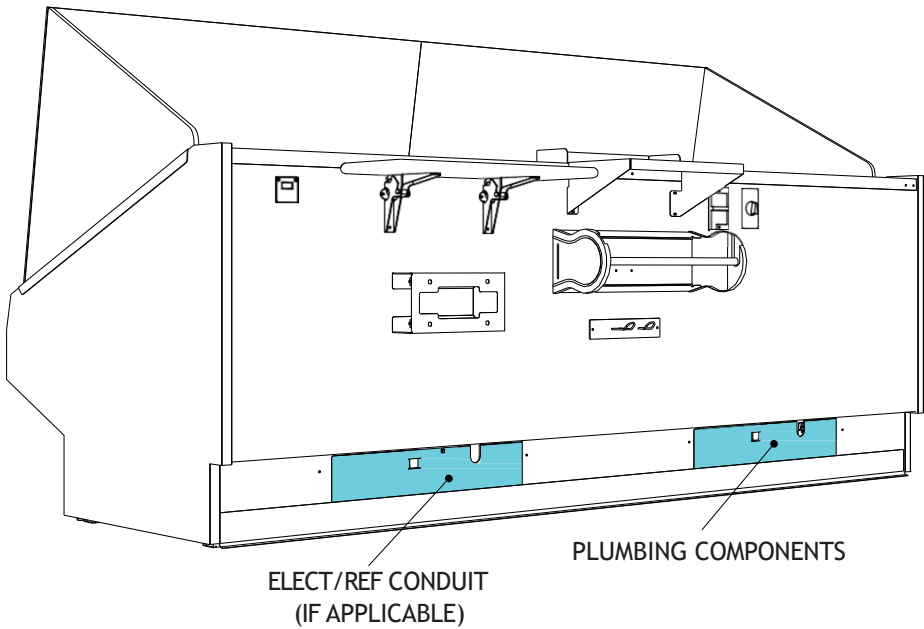


Electrical Wiring Diagram Index

DSFM	DSFM-4-R	4'	3031547
	DSFM-5-R	5'	3041020
	DSFM-6-R	6'	3031548
	DSFM-8-R	8'	3031549
	DSFM-10-R	10'	3031550
	DSFM-12-R	12'	3031551
DSFN-EP	DSFN-EP-2-R	2'	3063099
	DSFN-EP-3-R	3'	3063097
	DSFN-EP-5-R	5'	3063096
	DSFN-EP-6-R	6'	3081699
	DSFN-EP-8-R	8'	3067227
	DSFN-EP-10-R	10'	3077613
	DSFN-EP-45O-R		3063100
DSFN/M-EP	DSFN/M-EP-CNP-6R W/LIGHTS & TIMER	6'	3149539
	DSFM-8-EP-R W/TIMER SWITCH	8'	3114302
	DSFN/M-EP-CNP-8-R W/LIGHTS & TIMER	8'	3157522
	DSFN/M-EP-CNP-10R W/LIGHTS & TIMER	10'	3149540
	DSFN/M-EP-CNP-45OR W/LIGHTS & TIMER		3149541

CIRCUIT #1			
LOADING	120V		
	LI 15		

REVISION HISTORY						
REV	ECN	DATE	REVISION DESCRIPTION	REV BY	CHKD BY	APPR BY
A	ECN-CAP-0007286	2018/04/18	RELEASED TO PRODUCTION	CB	CB	CB
B	ECN-CAP-0009101	2017/09/24	REMOVED SOLENOID PART NUMBER	CB	CB	CB

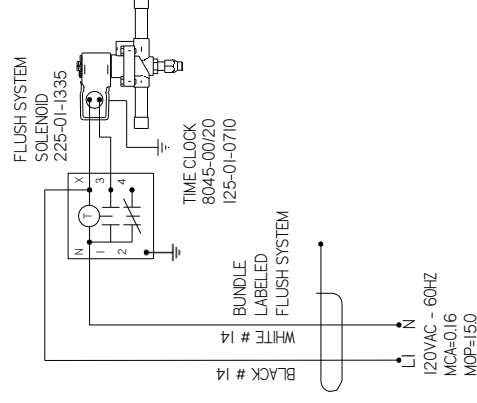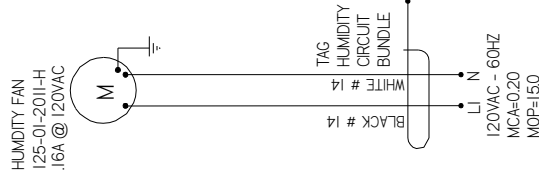
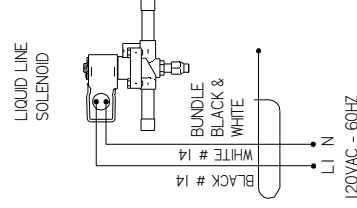
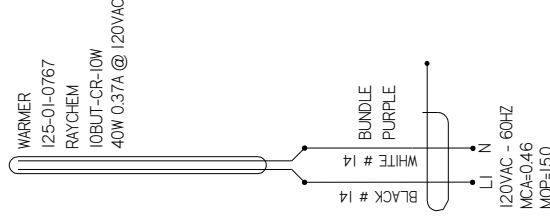
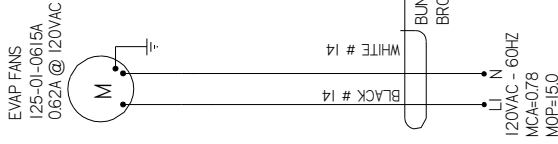
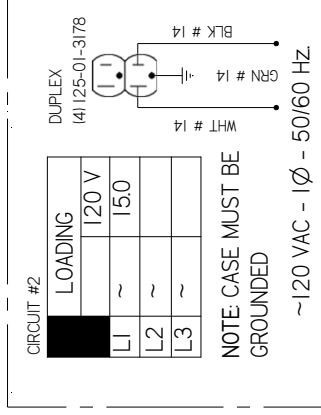


NOTES:
CASE MUST BE GROUNDED
WHEN PASSING WIRES THROUGH METAL HOLES A GROMMET MUST BE USED

MATERIAL - NA		ECN-CAP-0007286		HUSSEMAN®	
DATE DRAWN - 4-18-17		REF -		DIAGRAM-DSFM-4-R	
DRAWN BY - CRAIG BOOREY		SHEET 1 OF 1			
REVISED BY - CRAIG BOOREY		THIRD			
APPROVED BY - CRAIG BOOREY		ANGLE			
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES.		TOLERANCES ARE:			
DECIMALS .XX +0.3, .XXX +0.0				3031547	
				B	
				ANGLES ± 2°	

REVISION HISTORY						
REV	ECN	DATE	REVISION DESCRIPTION	REV BY	CHKD BY	APPR BY
A	ECN-CAP-00090905	2017/08/03	RELEASED TO PRODUCTION	CB	CB	CB
B	ECN-CAP-00090101	2017/08/24	REMOVED SOLENOID PART NUMBER	CB	CB	CB

CIRCUIT #1			
LOADING	120V		
	LI 15		

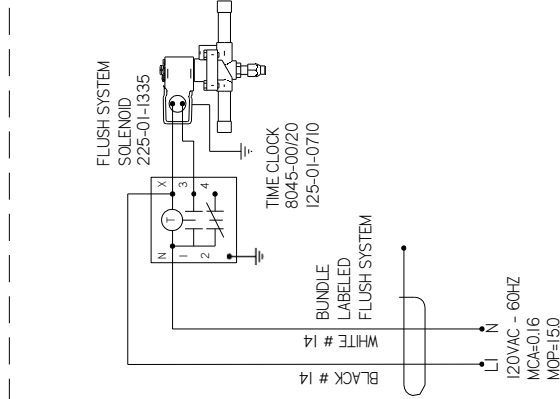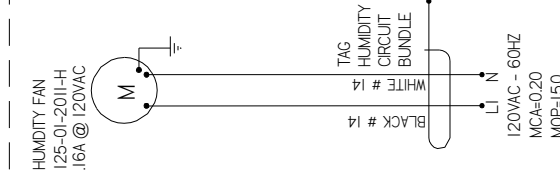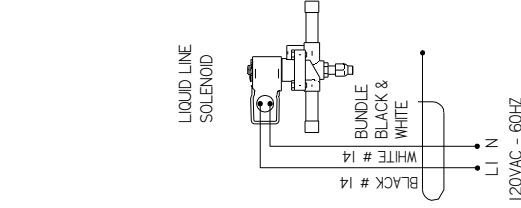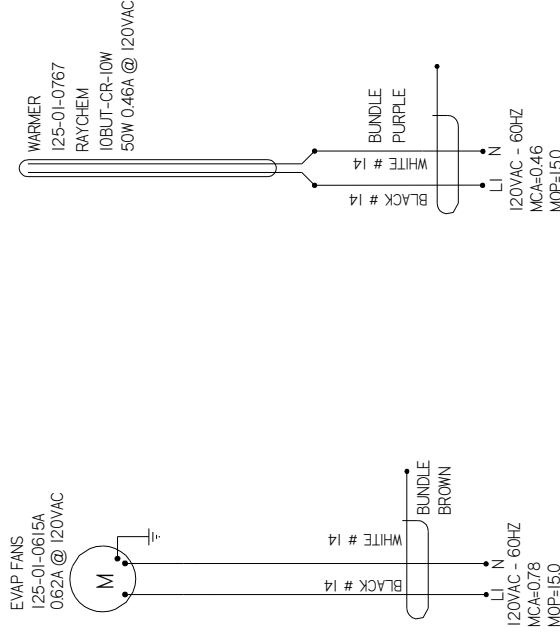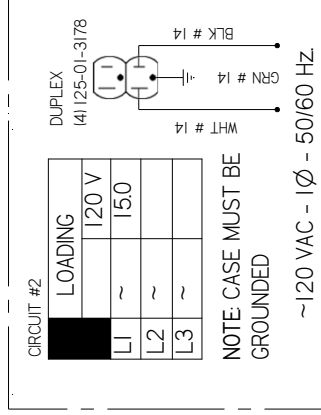







OPTIONAL:

NOTES:
CASE MUST BE GROUNDED
WHEN PASSING WIRES THROUGH METAL HOLES A GROMMET MUST BE USED

WATERMAN MATERIAL - N/A		DIAGRAM-DSFM-5-R	
DATE DRAWN - 8-3-17	ECN-CAP-0009095		
DRAWN BY - CRAIG BOOREY	REF -		
REVIEWED BY - CRAIG BOOREY	SHEET 1 OF 1		
APPROVED BY - CRAIG BOOREY	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES.		
TOLERANCES ARE	THIRD		
DECIMALS XX ±0.3, XXX ±0.0	ANG.		
ANGLES ± .XX°	E		
		3041020	B

CIRCUIT #1 LOADING	120V		
	LI 23		

REVISION HISTORY						
REV	ECN	DATE	REVISION DESCRIPTION	REV BY	CHKD BY	APPR BY
A	ECN-CAP-0007296	2016/04/18	RELEASED TO PRODUCTION	CB	CB	CB
A	ECN-CAP-0009101	2017/08/24	REMOVED SOLENOID PART NUMBER	CB	CB	CB

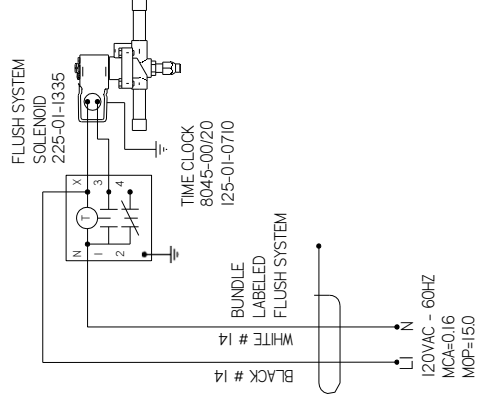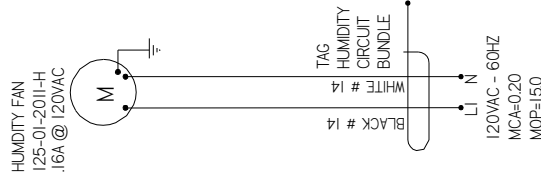
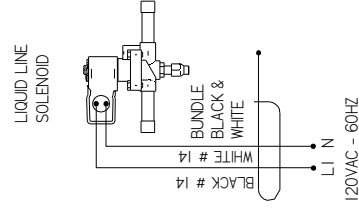
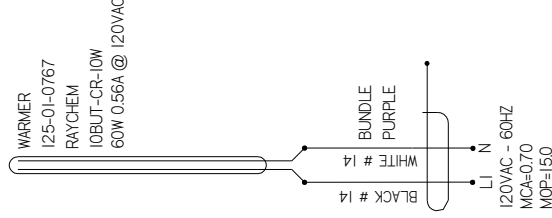
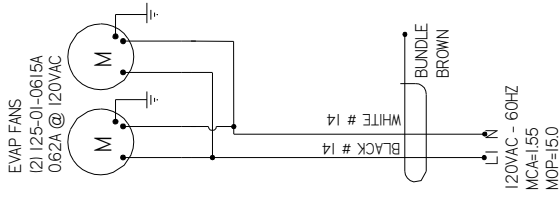
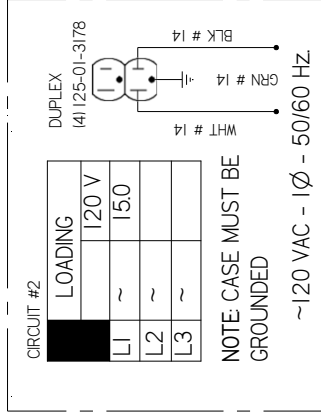


NOTES:
CASE MUST BE GROUNDED
WHEN PASSING WIRES THROUGH METAL HOLES A GROMMET MUST BE USED

MATERIAL - NA		ECN-CAP-0007286		HUSSMANN®	
DATE DRAWN - 4-18-17		REF -		DIAGRAM-DSFM-6-R	
DRAWN BY - CRAIG BOOREY		SHEET 1 OF 1			
REVIEWED BY - CRAIG BOOREY		THIRD			
APPROVED BY - CRAIG BOOREY		UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES.			
TOLERANCES ARE				3031548 B	
DECIMALS .XX .XXX .010		ANGL			
ANGLES ± 2°		E			

CIRCUIT				
#1				

		REVISION HISTORY					
REV		EQN	DATE	REVISION DESCRIPTION	REV BY	CHKD BY	APPR BY
A	ECN-CAP-0007286		2017/04/18	RELEASED TO PRODUCTION	CB	CB	CB
B	ECN-CAP-0009101		2017/08/24	REMOVED SOLENOID PART NUMBER	CB	CB	CB
C	ECN-CAP-003245		2018/07/17	MADE PARTS OPTIONAL	CB	CB	CB

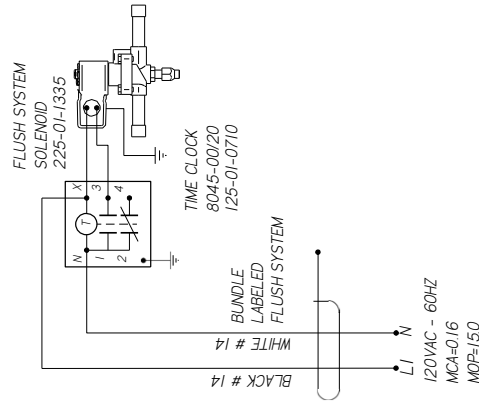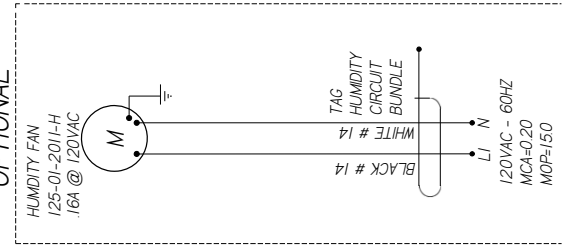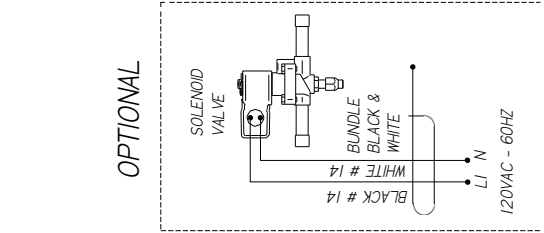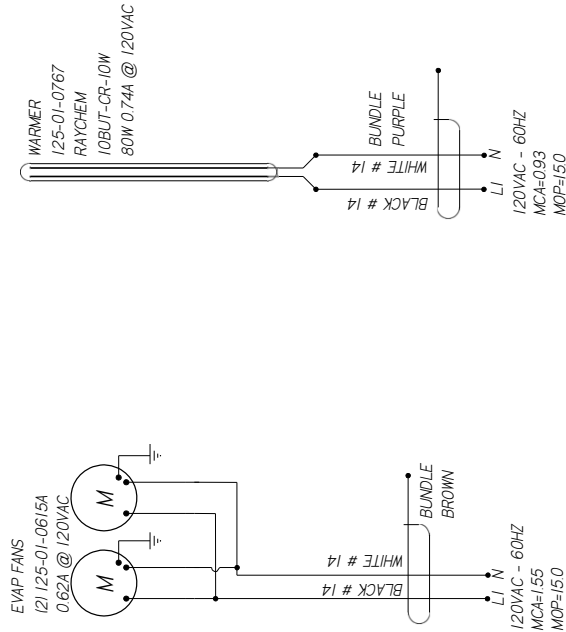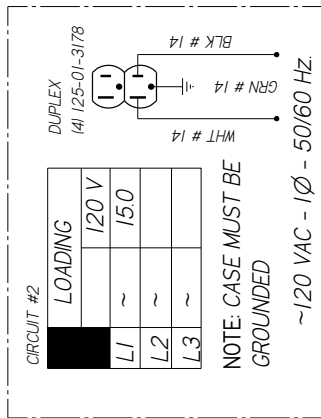



NOTES:
CASE MUST BE GROUNDED
WHEN PASSING WIRES THROUGH METAL HOLES A GROMMET MUST BE USED

DATE DRAWN - 4-18-17		ECN-CAP-0007286	
DRAWN BY - CRAIG BOOREY		REVIEWED BY - CRAIG BOOREY	
APPROVED BY - CRAIG BOOREY		SHEET 1 OF 1	
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES			
TOLERANCES ARE:			
THIRD		THIRD	
DECIMALS .XX ± .03 .XXX		ANG	
010		E	
3031549		C	



REV	EN	DATE	REVISION HISTORY	REV BY	CHK BY	APP BY
A	ECN-CAP-0007286	20/04/17	RELEASED TO PRODUCTION	CB	CB	CB
B	ECN-CAP-0008101	20/08/24	REMOVED SOLENOID PART NUMBER	CB	CB	CB
C	ECN-CAP-0008005	20/09/21	CHANGED HUMIDITY FAN TO QTY 1	CB	CB	CB

CIRCUIT #1	LOADING			
	120V			
	L1 3.3			



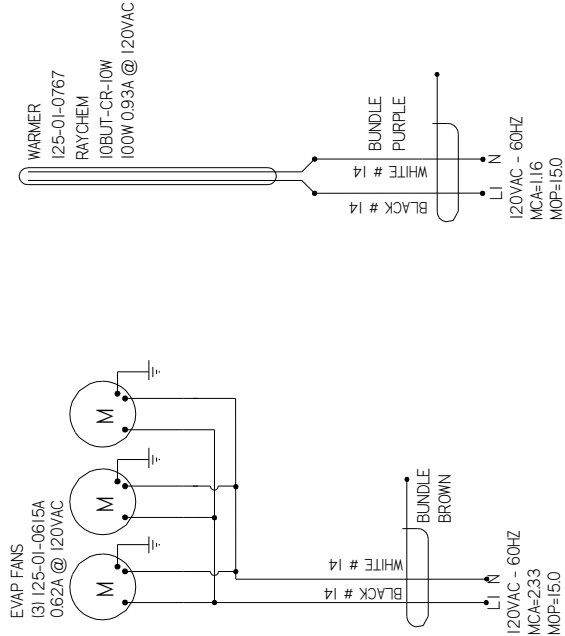
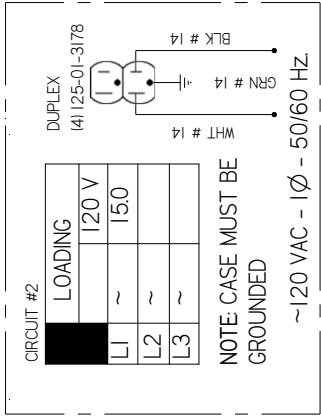


CIRCUIT

#1

120V				
120V				
120V				
120V				

REV	EN	DATE	REVISION DESCRIPTION	REV BY	CHK BY	APPR BY
A	ECN-CAP-0007286	20170417	RELEASED TO PRODUCTION	CB	CB	CB
B	ECN-CAP-0008097	20170814	CHANGED HUMIDITY FAN QTY	CB	CB	CB
C	ECN-CAP-0008101	20170824	REMOVED SOLENOID PART NUMBER	CB	CB	CB
D	ECN-CAP-0016245	20180717	MADE PARTS OPTIONAL	CB	CB	CB

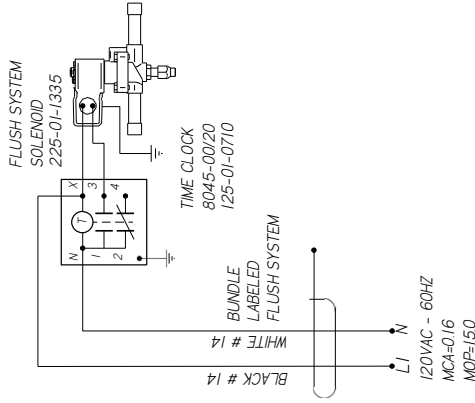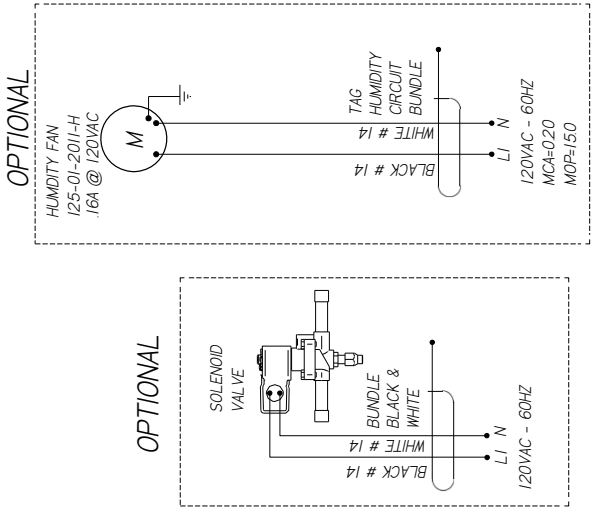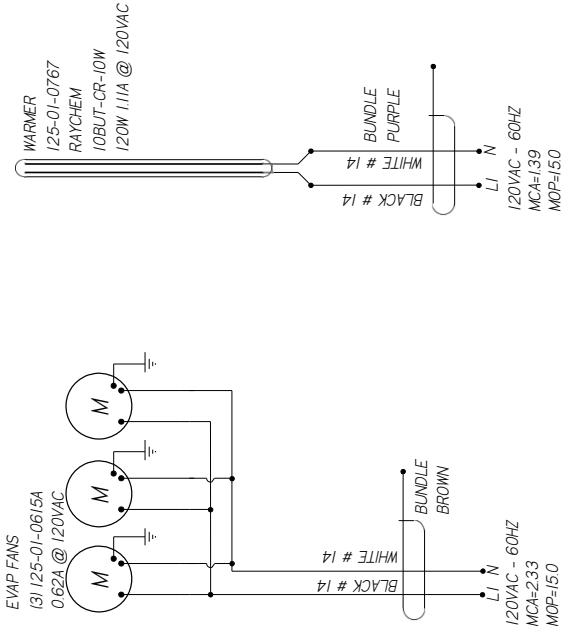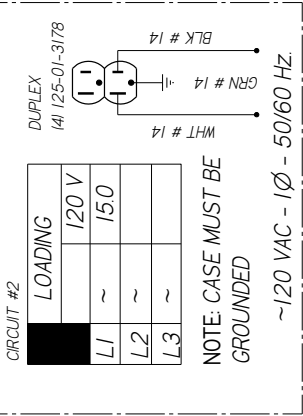

MATERIAL - IN A			
DATE DRAWN - 4-17-17	ECN-CAP-0007286	REF -	
DRAWN BY - CRAIG BOOREY		SHEET 1 OF 1	
REVIEWED BY - CRAIG BOOREY		UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES	
APPROVED BY - CRAIG BOOREY		TOLERANCES ARE:	
		DECIMALS .XX ± 0.3, .XXX ± 0.1	
		ANGLES ± 2°	
		PROJECTION	

HUSSMANN®
DIAGRAM-DSFM-12-R

NOTES:
CASE MUST BE GROUNDED
WHEN PASSING WIRES THROUGH METAL HOLES A GROMMET MUST BE USED

3031551 | D




CIRCUIT
#1

LOADING	120V	150V
1		
2		
3		

THERMAL SIMPLE
THERMOMETER
TS2-GAR-I
IH87361550



POWER SUPPLY




PLUG NEMA 5-15P




EVAP FANS
125-01-0615A
062A @ 120VAC

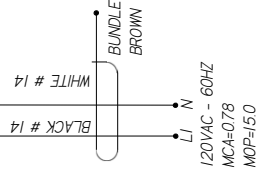


BUNDLE
YELLOW





REAR COIL

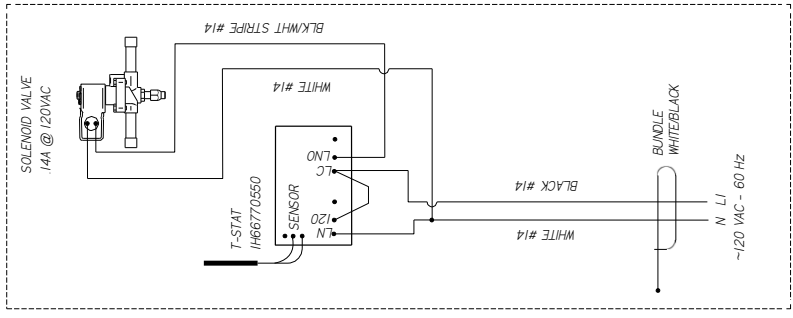

DECK COIL


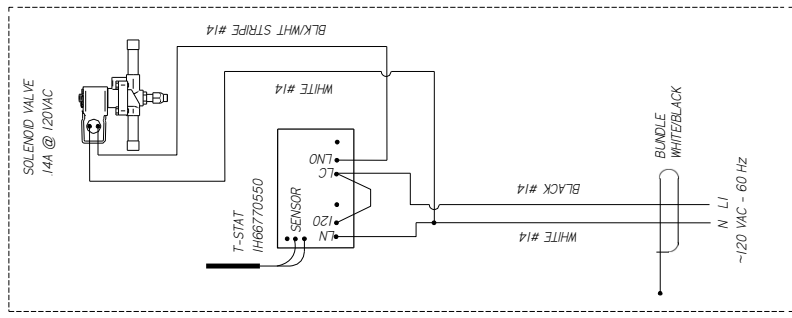


HUMIDITY FAN
125-01-2011-H
16A @ 120VAC

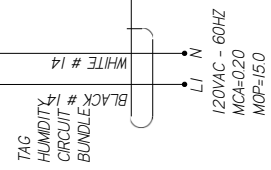

TAG
HUMIDITY
CIRCUIT # 14

FLUSH SYSTEM OPTIONAL

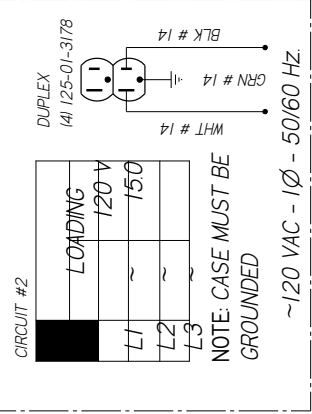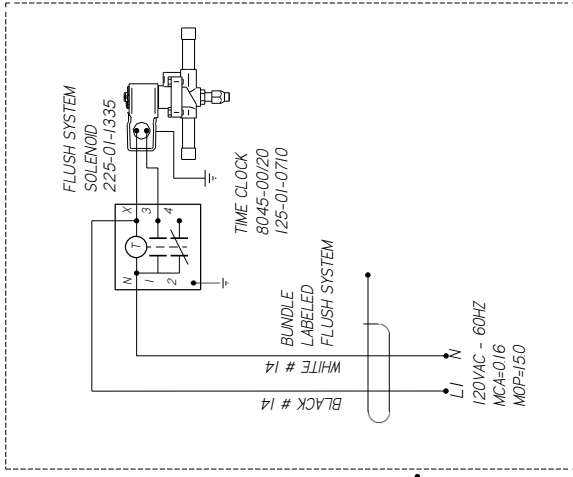

REV	EN	DATE	REVISION DESCRIPTION	REV BY	CHKD BY	APPR BY
A	ECN-CAP-0012694	20/04/16	RELEASED TO PRODUCTION	CB	CB	CB
B	ECN-CAP-0012694	20/05/24	ADDED DIGITAL T-STATS	CB	CB	CB

HUSSMANN®

DATE DRAWN - 5-16-18

DRAWN BY - CRAIG BOOREY

REVIEWED BY - CRAIG BOOREY

APPROVED BY - CRAIG BOOREY

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES

TOLERANCES ARE:

DECIMALS XX ± 0.3, XXX ± 0.0

ANGLES ± 2°

DIAGRAM-DSFI-EP-

2-R

REF -

SHEET 1 OF 1

THIRD ANGLE PROJECTION

MATERIAL - N/A

3063099

B

NOTES:
CASE MUST BE GROUNDED
WHEN PASSING WIRES THROUGH METAL HOLES A GROMMET MUST BE USED




REV	EN	DATE	REVISION DESCRIPTION	REV BY	CHK BY	APPR BY
A	ECN-CAP-0012694	20/04/16	RELEASED TO PRODUCTION	CB	CB	CB
B	ECN-CAP-0012696	20/05/24	ADDED DIGITAL T-STATS	CB	CB	CB

CIRCUIT #1	LOADING	120V	150V

THERMAL SIMPLE
THERMOMETER
TS2-GAR-1
IH87361550

PLUG NEMA 5-15P




EVAP FANS
125-01-0615A
0.62A @ 120VAC




120VAC - 60HZ
N L1
BLACK # 14
WHITE # 14

120VAC - 60HZ
MCA=0.78
MOP=150
N L1
BLACK # 14
WHITE # 14
BUNDLE BROWN


BUNDLE YELLOW



REAR COIL

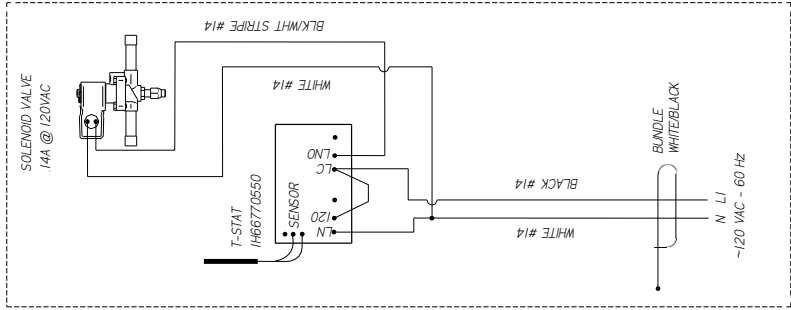

DECK COIL


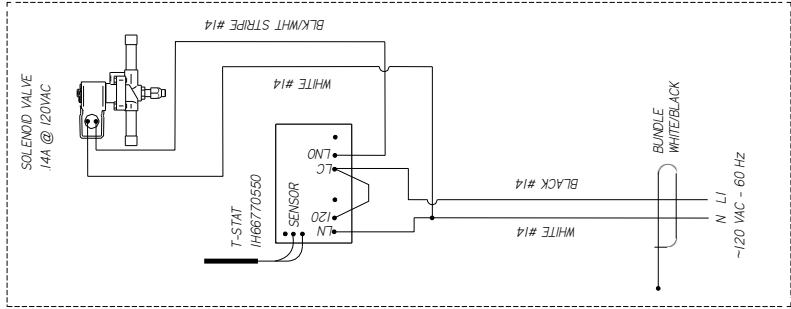


HUMIDITY FAN
125-01-2011-H
1.6A @ 120VAC



120VAC - 60HZ
MCA=0.20
MOP=150
N L1
BLACK # 14
WHITE # 14
TAG HUMIDITY
CIRCUIT BUNDLE

FLUSH SYSTEM OPTIONAL

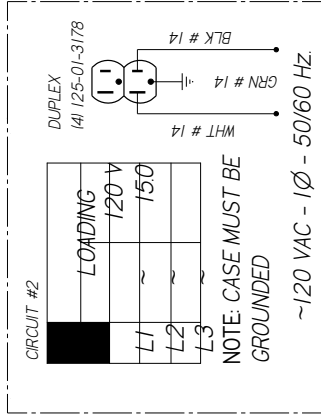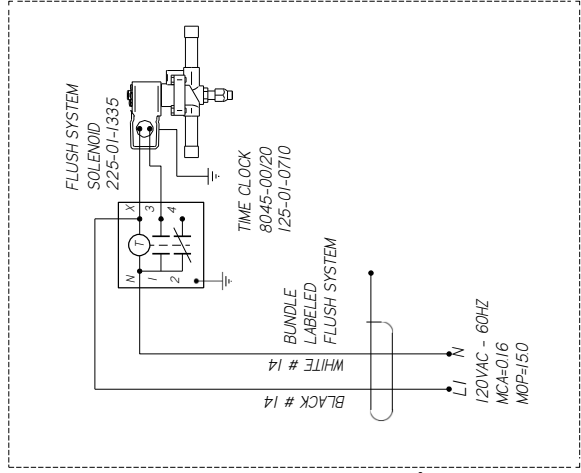

MATERIAL - N/A		DATE DRAWN - 5-16-18		ECON-CAP-0012694		DIAGRAM-DSFI-EP-	
DRAWN BY - CRAIG BOOREY		REVIEWED BY - CRAIG BOOREY		APPROVED BY - CRAIG BOOREY		SHEET 1 OF 1	
UNLESS OTHERWISE SPECIFIED		DIMENSIONS ARE IN INCHES		TOLERANCES ARE:		ANGLES	
DECIMALS XX ± 0.3, XXX		THIRD		E		PROJECTION	

NOTES:
CASE MUST BE GROUNDED
WHEN PASSING WIRES THROUGH METAL HOLES A GROMMET MUST BE USED


3063097 | B




CIRCUIT #1

LOADING					
120V					
60Hz					


THERMAL SIMPLE
THERMOMETER
TS2-GAR-1
IH87361550

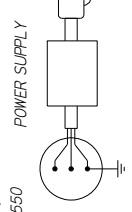


PLUG NEMA 5-15P

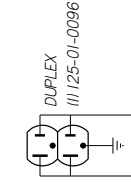

EVAP FANS
12/ 125-01-0615A
0.62A @ 120VAC

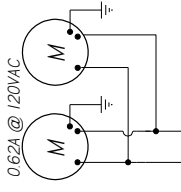


BUNDLE
YELLOW




120VAC - 60Hz
MCA=156
MOP=150



REAR COIL

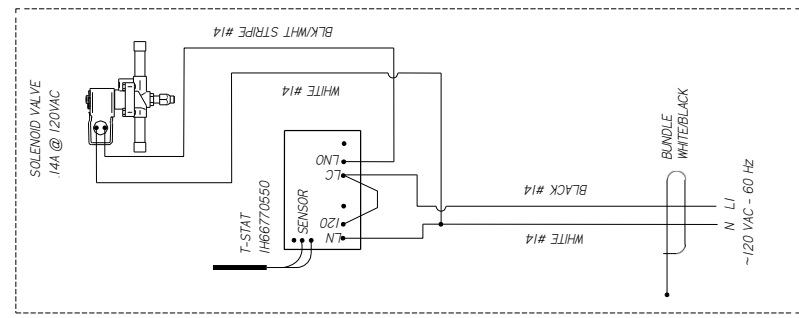

DECK COIL


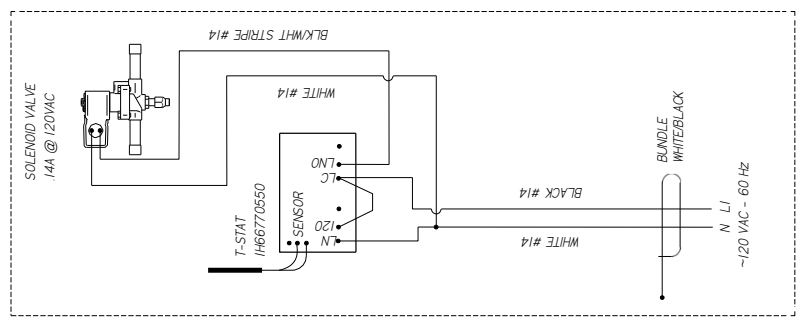


HUMIDITY FAN
125-01-2011-H
16A @ 120VAC

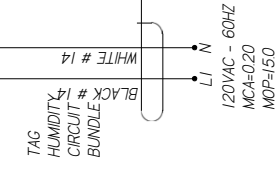

120VAC - 60Hz
MCA=020
MOP=150

FLUSH SYSTEM
OPTIONAL

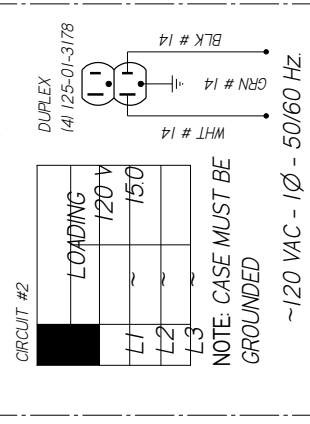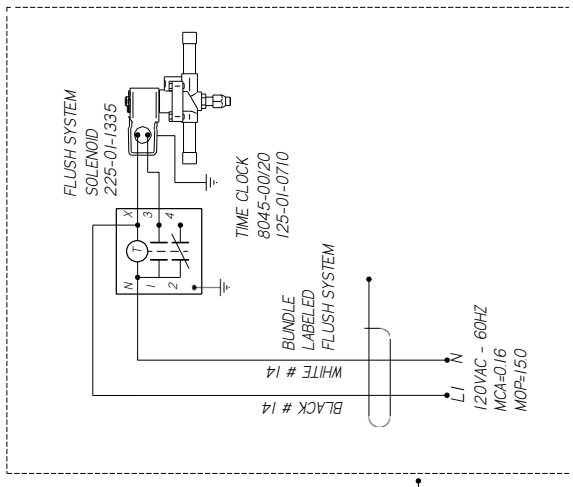

NOTE: CASE MUST BE
GROUNDED

~120 VAC - 1Ø - 50/60 HZ

HUSSMANN

DIAGRAM-DSFN-EP-5

DATE DRAWN -5-16-18

DRAWN BY -CRAIG BOOREY

REVIEWED BY -CRAIG BOOREY

APPROVED BY -CRAIG BOOREY

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES

TOLERANCES ARE:

DECIMALS .XX ±.03, .XXX ±.010

ANGLES ± 2°

PROJECTION

ANGLES

THIRD

SHEET 1 OF 1

REF -

ECON-CAP-0012694

MATERIAL - INVA

3063096

C

REVISION HISTORY


REV	EN	DATE	DESCRIPTION	REV BY	CHK BY	APPR BY
A	ECON-CAP-0012694	2018/05/16	RELEASED TO PRODUCTION	CB	CB	CB
B	ECON-CAP-0012694	2018/05/24	ADDED DIGITAL T-STATS	CB	CB	CB
C	ECON-CAP-0012694	2018/06/25	ADDED A 2ND FAN MOTOR	CB	CB	CB

NOTES:
CASE MUST BE GROUNDED
WHEN PASSING WIRES THROUGH METAL HOLES A GROMMET MUST BE USED


CIRCUIT
#1

LOADING					
120V					
L1					
L2					
L3					


OPTIONAL

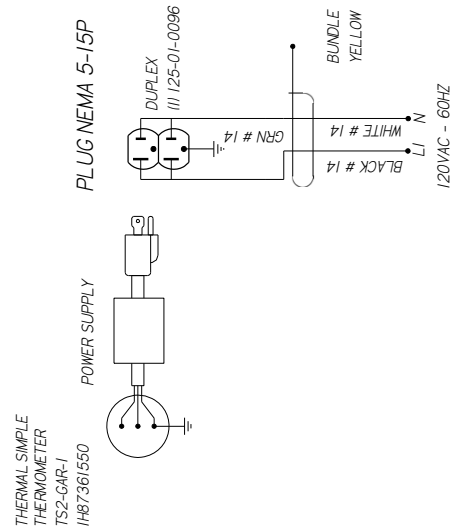


REAR COIL

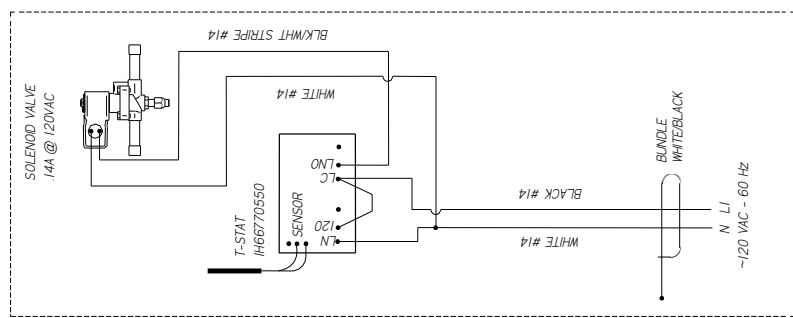

DECK COIL

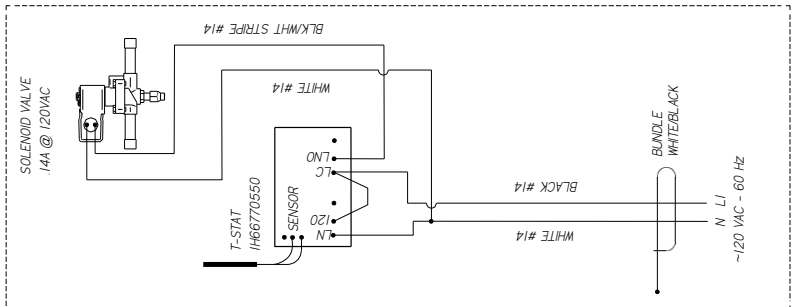


HUMIDITY FAN
125-01-2011-H
16A @ 120VAC

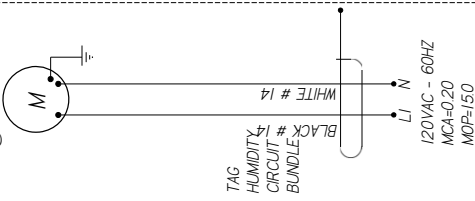

TAG
HUMIDITY
CIRCUIT
BUNDLE

EVAP FANS
121 125-01-0615A
0.62A @ 120VAC

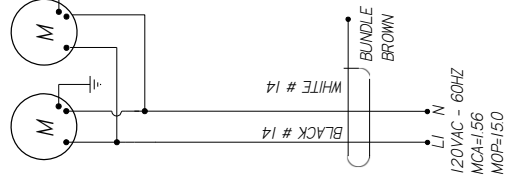


NOTES:
CASE MUST BE GROUNDED
WHEN PASSING WIRES THROUGH METAL HOLES A GROMMET MUST BE USED

CIRCUIT #2


LOADING					
120V					
L1					
L2					
L3					

NOTE: CASE MUST BE
GROUNDED

~120 VAC - 1Ø - 50/60 HZ

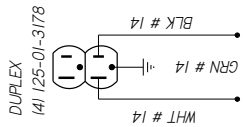

FLUSH SYSTEM OPTIONAL

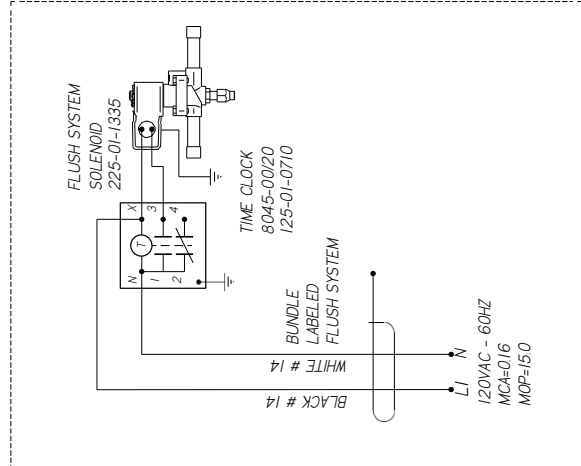

MATERIAL - INVA

DATE DRAWN - 6-27-18

DRAWN BY - CRAIG BOOREY

REVIEWED BY - CRAIG BOOREY

APPROVED BY - CRAIG BOOREY

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES

TOLERANCES ARE:

DECIMALS .XX ± 0.3, .XXX ± 0.0

ANGLES ± 2°

HUSSMANN CORP. 11 SHEET SIZE D

DIAGRAM-DSFN-EP-8

-R

REF -

SHEET 1 OF 1

THIRD

ANG

E

PROJECTION

3067227

A



REVISION HISTORY				
REV	EN	DATE	DESCRIPTION	REV BY / CHD BY / APPR BY
1	ECN-CAP-004938	2018/01/15	RELEASED TO PRODUCTION	CB


CIRCUIT #1
LOADING

120V				
L1				
L2				
L3				

OPTIONAL

THERMAL SIMPLE
THERMOMETER
TS2-GAR-1
IH87361550


POWER SUPPLY



PLUG NEMA 5-15P




DUPLEX
111 125-01-0096

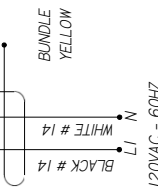

BUNDLE
YELLOW
BLACK #14
WHITE #14
N
L1
120VAC - 60HZ

REAR COIL

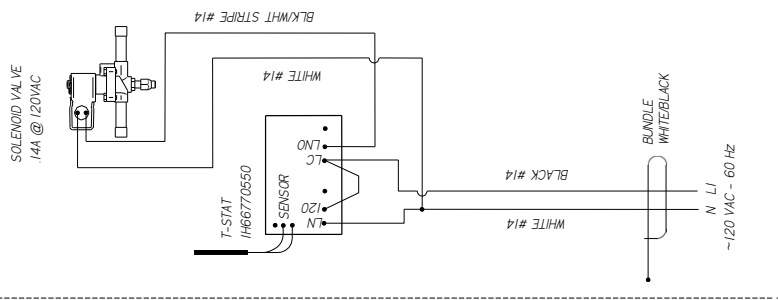


SOLENOID VALVE
14A @ 120VAC




T-STAT
IH66770550

WHITE #14
BLACK #14
N
L1
~120 VAC - 60 Hz

DECK COIL

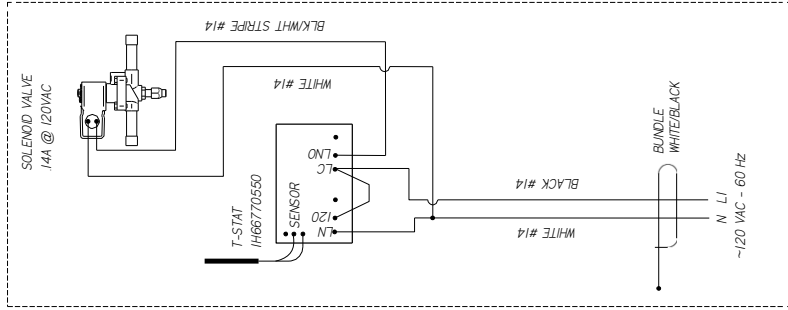

SOLENOID VALVE
14A @ 120VAC




T-STAT
IH66770550

WHITE #14
BLACK #14
N
L1
~120 VAC - 60 Hz


HUMIDITY FAN

125-01-2011-H
16A @ 120VAC




BLACK #14
WHITE #14
N
L1
120VAC - 60HZ
MCA=0.20
MOP=150

EVAP FANS
G3 125-01-0615A
0.62A @ 120VAC




BLACK #14
WHITE #14
N
L1
120VAC - 60HZ
MCA=23
MOP=150

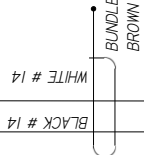

BUNDLE
BROWN
BLACK #14
WHITE #14
N
L1
120VAC - 60HZ
MCA=23
MOP=150

FLUSH SYSTEM OPTIONAL

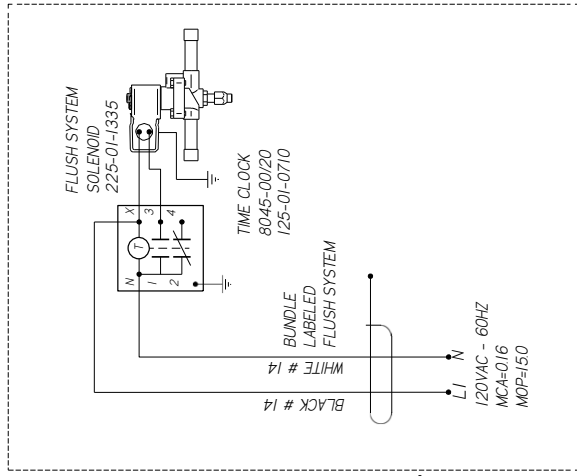


FLUSH SYSTEM
SOLENOID
225-01-1335

TIME CLOCK
8045-00120
125-01-0710

BUNDLE
Labeled
FLUSH SYSTEM

BLACK #14
WHITE #14
N
L1
120VAC - 60HZ
MCA=0.16
MOP=150

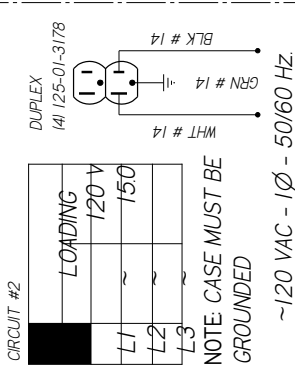

DUPLEX
141 125-01-3178

WHT #14
GRN #14
BLK #14

CIRCUIT #2

LOADING	120V	150
L1		
L2		
L3		

NOTE: CASE MUST BE
GROUNDED

~120 VAC - 1Ø - 50/60 HZ.

NOTES:
CASE MUST BE GROUNDED
WHEN PASSING WIRES THROUGH METAL HOLES A GROMMET MUST BE USED

MATERIAL - N/A		DATE DRAWN - 10-15-18	
DRAWN BY - CRAIG BOOREY		ECON-CAP-0014939	
REVIEWED BY - CRAIG BOOREY		REF - 10-R	
APPROVED BY - CRAIG BOOREY		SHEET 1 OF 1	
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES		TOLERANCES ARE:	
DECIMALS XX ± 0.3, XXX		ANG	
± 0.0		E	
ANGLES ± 2°		PROJECTION	

HUSSMANN®
DIAGRAM-DSFN-EF-

10-R

3077613


A




CIRCUIT #1

LOADING					
120V					
150V					


THERMAL SIMPLE
THERMOMETER
TS2-GAR-1
IH87361550





PLUG NEMA 5-15P

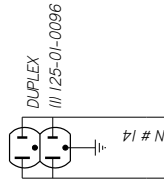


EVAP FANS
125-01-0615A
0.62A @ 120VAC




BUNDLE
YELLOW

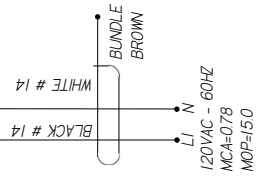


LH REAR COIL

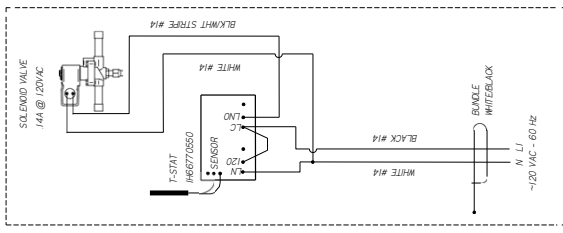


RH REAR COIL

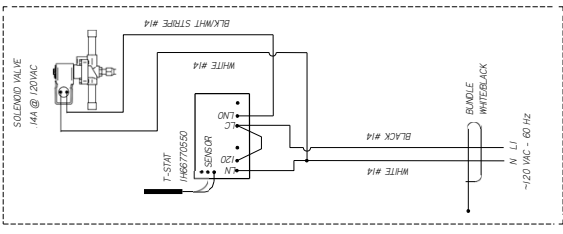




LH DECK COIL

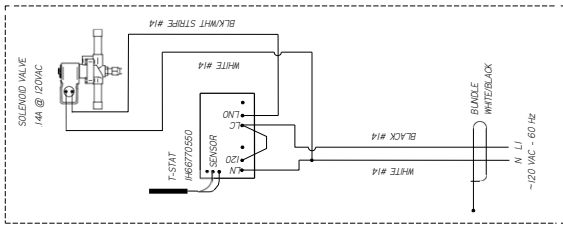


RH DECK COIL

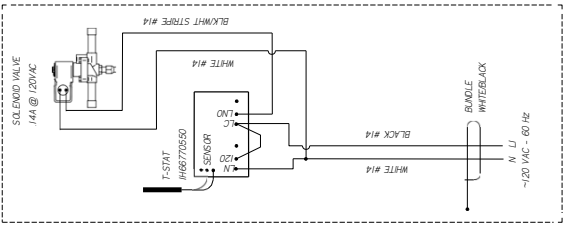

HUMIDITY FAN
125-01-2011-H
1.6A @ 120VAC

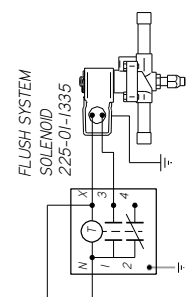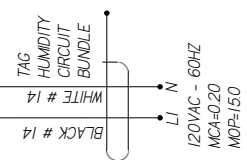

FLUSH SYSTEM OPTIONAL

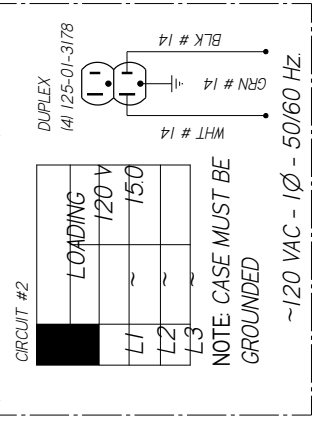

NOTE: CASE MUST BE
GROUNDED

REVISION HISTORY		REV BY	CHD BY	APPR BY
A	ECN-CAP-0012694	20840516	CB	CB
B	ECN-CAP-0012696	20840524	CB	CB

REVISION DESCRIPTION		REV BY	CHD BY	APPR BY
A	RELEASED TO PRODUCTION	CB	CB	CB
B	ADDED DIGITAL T-STATS	CB	CB	CB

HUSSMANN

DIAGRAM-DSFT-EP-4 50-R









MATERIAL - INVA		DATE DRAWN - 5-16-18	ECN-CAP-0012694	REF -
DRAWN BY - CRAIG BOOREY		REVIEWED BY - CRAIG BOOREY	SHEET 1 OF 1	
APPROVED BY - CRAIG BOOREY		UNLESS OTHERWISE SPECIFIED	DIMENSIONS ARE IN INCHES	
TOLERANCES ARE:		DECIMALS XX ± 0.3, XXX ± 0.0	ANGLES ± 2°	

NOTES:
CASE MUST BE GROUNDED
WHEN PASSING WIRES THROUGH METAL HOLES A GROMMET MUST BE USED



CIRCUIT #1

LOADING	120V	150V
~	~	~
L1	L2	L3

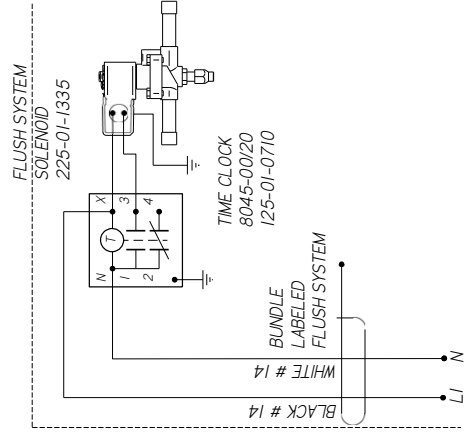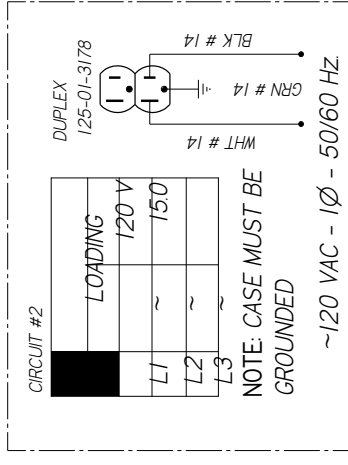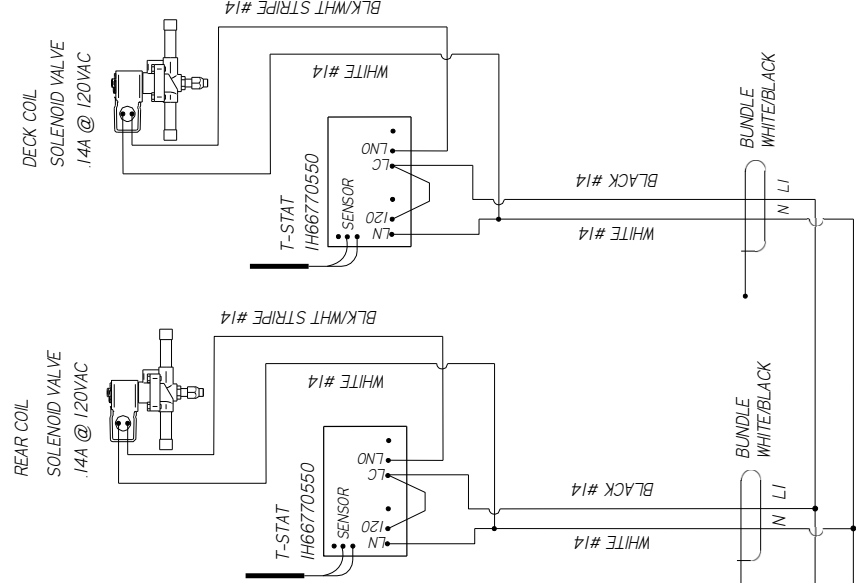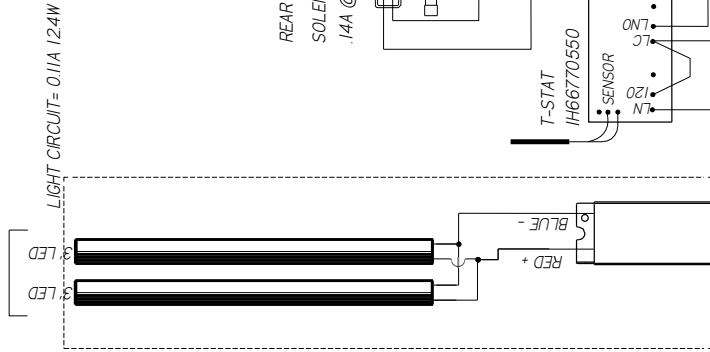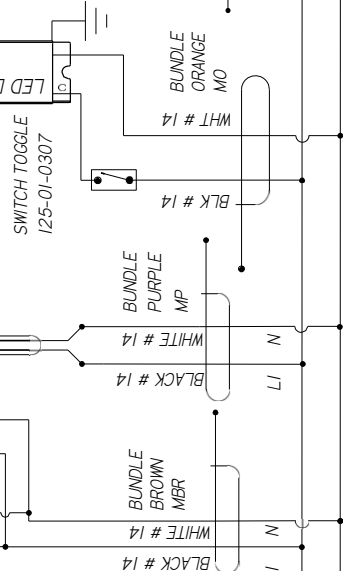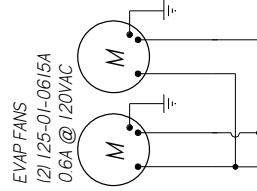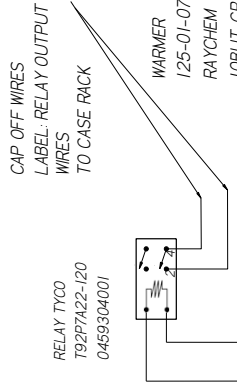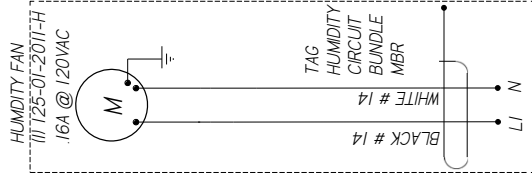

UL COLOR CODES / ABBREVIATIONS	FACTORY 14GA WIRE
RED = RD	FACTORY 10GA WIRE
BLACK = BK	FIELD WIRE
BLUE = BL	---
YELLOW = YL	---
GRAY = GR	---
VT	---

FACTORY 14GA WIRE	FACTORY 10GA WIRE	FIELD WIRE	DO NOT SCALE DRAWING	SHEET 1 OF 1
FACTORY 14GA WIRE	FACTORY 10GA WIRE	FIELD WIRE	DO NOT SCALE DRAWING	SHEET 1 OF 1

NOTES:

1. PRINTED DOCUMENT REQUIRED SETTING: ALL COLORS BLACK & WHITE
2. CASE & ANY REMOVABLE PANEL WITH ELECTRICAL PARTS MUST BE GROUNDED.
3. WHEN PASSING WIRES THROUGH METAL HOLES A GROMMET MUST BE USED

HUSSMANN®

DIAGRAM-DSFNM-EP
-CNP-6R

3149539

A


CIRCUIT
#1

LOADING				
120V				
150V				
16A				



REVISION HISTORY

REV	ECN	DATE	REVISION DESCRIPTION	REV BY	CHKD BY	APPR BY
A	ECN-000-0013664	5-24-21	RELEASED TO PRODUCTION	CB	CB	CB

LIGHT CIRCUIT= 0.20A 21.1W

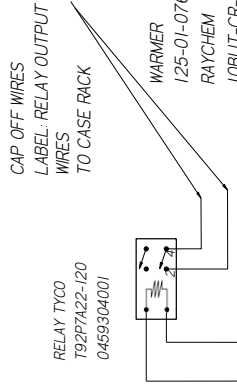

RELAY TY00
T92P7A22-120
0459304001

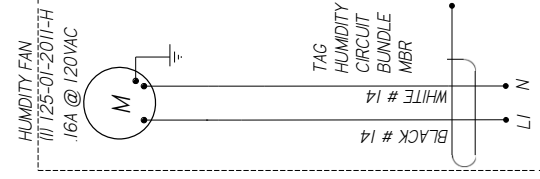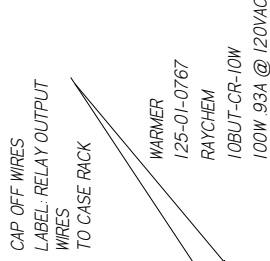


TAG HUMIDITY
CIRCUIT
BUNDLE
MBR

WARMER
125-01-0767
RAYCHEM
108UT-CR-10W
100W 93A @ 120VAC

CAP OFF WIRES
LABEL: RELAY OUTPUT
WIRES
TO CASE RACK

REAR COIL
SOLENOID VALVE
.14A @ 120VAC
















DECK COIL
SOLENOID VALVE
.14A @ 120VAC

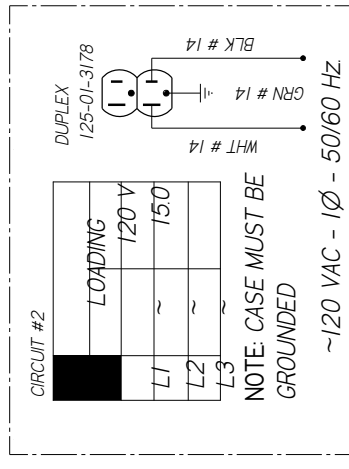

CIRCUIT #2

LOADING				
120V				
150V				
16A				

NOTE: CASE MUST BE
GROUNDED

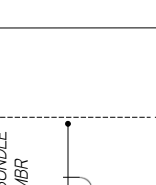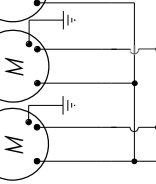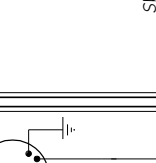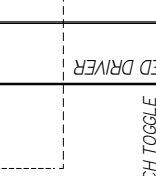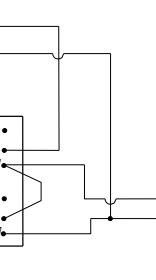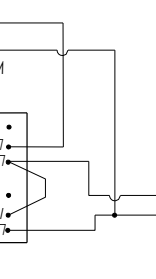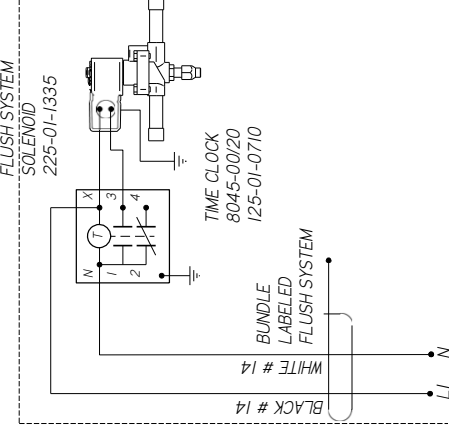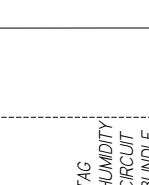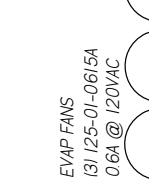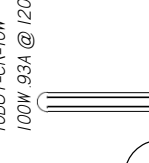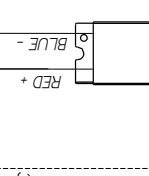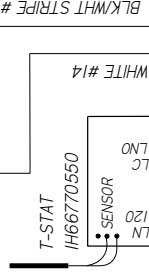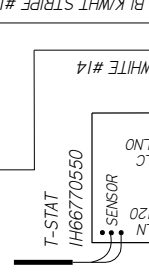

TIMER SWITCH
20 AMP
IH77162550

SWITCH T063LE
125-01-0307

LED DRIVER
125-01-0307

REAR COIL
SOLENOID VALVE
.14A @ 120VAC

DECK COIL
SOLENOID VALVE
.14A @ 120VAC

FLUSH SYSTEM
SOLENOID
225-01-1335

TIME CLOCK
8045-0020
125-01-0710

BUNDLE
Labeled
FLUSH SYSTEM

WHITE #14
BLACK #14

WHITE #14
BLACK #14

WHITE #14
BLACK #14

WHITE #14
BLACK #14

WHITE #14
BLACK #14

WHITE #14
BLACK #14

WHITE #14
BLACK #14

WHITE #14
BLACK #14

UL COLOR CODES / ABBREVIATIONS	FACTORY 14GA WIRE
RED = RD	FACTORY 10GA WIRE
BLACK = BK	FIELD WIRE
BLUE = BL	DO NOT SCALE DRAWING
YELLOW = YL	SHEET 1 OF 1
GRAY = GR	
OR VIOLET = VT	

HUSSMANN®	DIAGRAM-DSFNM-EP
-CNP-10-R	3149540


- NOTES:
1. PRINTED DOCUMENT REQUIRED SETTING: ALL COLORS BLACK & WHITE
 2. CASE & ANY REMOVABLE PANEL WITH ELECTRICAL PARTS MUST BE GROUNDED.
 3. WHEN PASSING WIRES THROUGH METAL HOLES A GROMMET MUST BE USED

CIRCUIT
#1

120V					
120V					
120V					
120V					
120V					
120V					

REV	ECN	DATE	REVISION DESCRIPTION	REV BY	CHKD BY	APPR BY
A	ECN-000-0013664	5-24-21	RELEASED TO PRODUCTION	CB	CB	CB

LIGHT CIRCUIT= 0.05A 58W

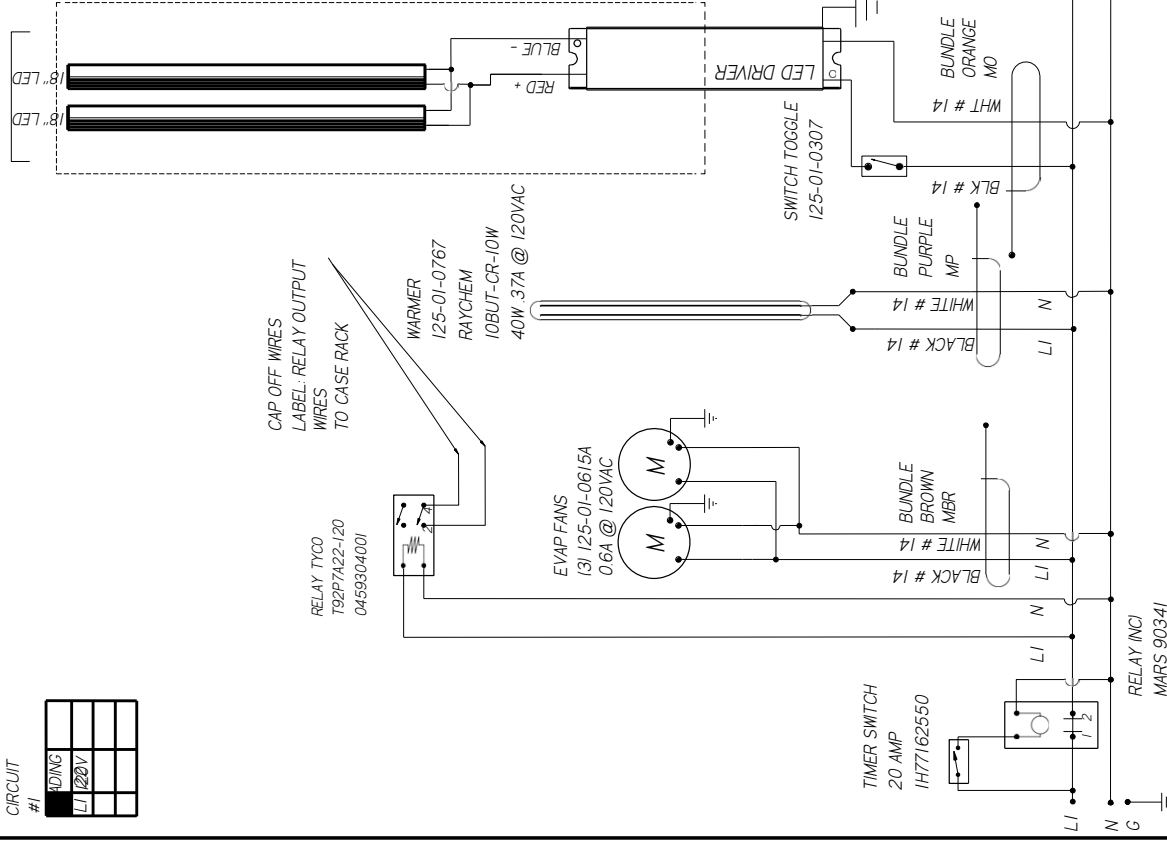

RELAY INCI
MARS 90341




CIRCUIT #1 125-01-1343

NOTES:
1. PRINTED DOCUMENT REQUIRED SETTING: ALL COLORS BLACK & WHITE
2. CASE & ANY REMOVABLE PANEL WITH ELECTRICAL PARTS MUST BE GROUNDED.
3. WHEN PASSING WIRES THROUGH METAL HOLES A GROMMET MUST BE USED

UL COLOR CODES / ABBREVIATIONS	
— RED = RD	— WHITE = WT
— BLACK = BK	— GREEN = GN
— BLUE = BL	— BROWN = BN
— YELLOW =	— ORANGE =
— YL GRAY =	— OR VIOLET =
	— VT

FACTORY 14GA WIRE
FACTORY 10GA WIRE
FIELD WIRE
DO NOT SCALE DRAWING
SHEET 1 OF 2

HUSSMANN
DIAGRAM-DSFNM-EP
-CNP-450-R
3149541
A

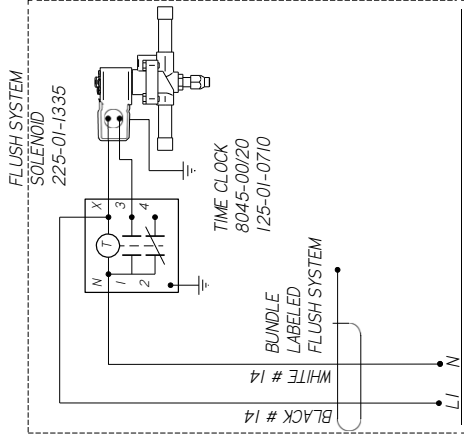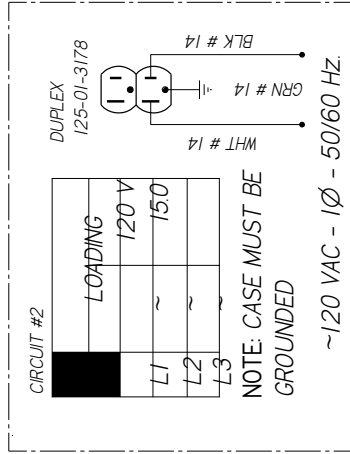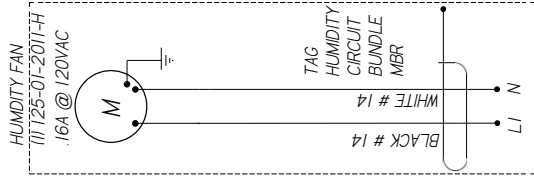

- NOTES:
1. PRINTED DOCUMENT REQUIRED SETTING: ALL COLORS BLACK & WHITE
 2. CASE & ANY REMOVABLE PANEL WITH ELECTRICAL PARTS MUST BE GROUNDED.
 3. WHEN PASSING WIRES THROUGH METAL HOLES A GROMMET MUST BE USED

HUSSMANN® DIAGRAM-DSFNM-EP -CNP-450-R	FACTORY 14GA WIRE	DO NOT SCALE DRAWING
	FACTORY 10GA WIRE	SHEET 2 OF 2
	FIELD WIRE	

UL COLOR CODES / ABBREVIATIONS	
— RED = RD	— WHITE = WT
— BLACK = BK	— GREEN = GN
— BLUE = BL	— BROWN = BN
— YELLOW =	— ORANGE =
— YL GRAY =	— OR VIOLET =
— GY	— VT

3149541

A

Maintenance

Case Cleaning

To insure long life, proper sanitation and minimum maintenance costs, the refrigerator should be thoroughly cleaned frequently. **SHUT OFF FAN BEFORE CLEANING:** It can be unplugged within the case, or shut off entire case at the source. The interior bottom may be wiped with any domestic soap or detergent based cleaners. Sanitizing solutions will not harm the interior bottom,

WARNING! DO NOT USE WATER HOSES! A self contained case empties into an evaporator pan that **WILL OVERFLOW IF TOO MUCH WATER IS INTRODUCED** during cleaning

- USE WATER AND A MILD DETERGENT FOR THE EXTERIOR ONLY
- Wipe interior with damp non-abrasive cloth. Soap and hot water are not enough to kill bacteria; a sanitizing solution must be included with each cleaning process to eliminate bacteria.
- Clean any visible debris surrounding or on top of the drain location. The drain is located under the deck pans.
- DO NOT USE A CHLORINATED CLEANER ON ANY SURFACE.
- DO NOT USE ABRASIVES OR STEEL WOOL SCOURING PADS (these will mar the finish)

- DO NOT USE A CLEANING OR SANITIZING SOLUTION THAT HAS AN OIL BASE (these will dissolve the butyl sealants) or an AMMONIA BASE (this will corrode the copper components of the case)

Service

- To maintain good refrigeration performance, a refrigeration service person should be called periodically (at least twice a year) to clean the discharge honeycomb and remove any accumulated dirt from the condenser coil and condensate evaporator pan on self-contained models. POOR CIRCULATION OF AIR THROUGH THE CONDENSER COIL WILL RESULT IN POOR REFRIGERATION PERFORMANCE.
- Dirt accumulation inside the condensate evaporator pan will reduce the pan's capacity and affect the efficiency of the heater causing a burned out heater and an overflow of defrost water onto the store floor.

Tips and Troubleshooting

Before calling for service:

- Check power. Ensure reliable electrical power supply to the equipment
- Check shelf loading. Overstocking will adversely affect case performance.
- If frost is collecting on fixture or product, verify that store Humidity Control is working properly, and that no outside doors/windows allow moisture into store.

WARNING

ALWAYS DISCONNECT THE ELECTRICAL POWER AT THE MAIN DISCONNECT WHEN SERVICING OR REPLACING ANY ELECTRICAL COMPONENT OF THIS REFRIGERATOR. THIS INCLUDES, BUT IS NOT LIMITED TO SUCH ITEMS AS FANS AND THERMOSTATS.

Fan Blade Replacement

The evaporator fan is located directly under the deck pan. Should the fan blade ever need servicing. **ALWAYS REPLACE THE FAN BLADE WITH THE RAISED EMBOSSING SIDE OF THE BLADE INSTALLED TOWARD THE MOTOR.**

Honeycomb Removal & Cleaning

CAUTION: DO NOT TEAR THE HONEYCOMB**1) Remove the honeycomb assembly as follows:**

Insert a small Phillips screwdriver behind the rear edge of the honeycomb on the right hand end and gently pull down. The bottom of the honeycomb will drop down. Continue down the length of the case, lifting the honeycomb out.

2) To clean honeycomb:

Mix powdered detergent, in warm water. (5 to 7 Tablespoons per gallon)

Immerse or spot clean the honeycomb. Use care not to damage the cell structure of the honeycomb.

Rinse thoroughly in clean water. Shake excess water from the honeycomb and dry. (if heat is used, do not exceed 140 F dry heat)

3) **Install honeycomb** by inserting the notched side up against the deflector and press upwards inserting the bottom of the honeycomb into the back ledge. Slide along the honeycomb, pressing the front edge upward into the ledge. Be careful no to damage the cells or cut yourself on the edges of the honeycomb.

Ballast Replacement

The power supply for the LED fixtures is located under the case in a dedicated electrical box.

For access to the ballast:

- Remove body panels (See Body panel Removal for reference pg.23)
- Remove screws to grille to expose electrical conduit?
- Replace or service the ballast as required and replace the canopy in reverse order of removal.

User Information

Stocking

Improper temperature and lighting will cause serious product loss. Discoloration, dehydration and spoilage can be controlled with proper use of the equipment and handling of product. Product temperature should always be maintained at a constant and proper temperature. This means that from the time the product is received, through storage, preparation and display, the temperature of the product must be controlled to maximize life of the product. Hussmann cases were not designed to “heat up” or “cool down” product - but rather to maintain an item’s proper temperature for maximum shelf life. To achieve the protection required always:

1. Minimize processing time to avoid damaging temperature rise to the product. Product should be at proper temperature.
2. Keep the air in and around the case area free of foreign gasses and fumes or food will rapidly deteriorate.
3. Maintain the display merchandisers temperature controls as outlined in the refrigerator section of this manual.
4. Do not place any product into these refrigerators until all controls have been adjusted and they are operating at the proper temperature. Allow merchandiser to operate a minimum of three (3) hours before stocking with any product.
5. When stocking, never allow the product to extend beyond the recommended load limit. Air discharge and return air flue must be unobstructed at all times to provide proper refrigeration.
6. Avoid the use of supplemental flood or spot lighting. Display light intensity has been designed for maximum visibility and product life at the factory.

Case Cleaning

Long life and satisfactory performance of any equipment are dependent upon the care given to it. To insure long life, proper sanitation and minimum maintenance costs, the refrigerator should be thoroughly cleaned frequently. SHUT OFF FAN DURING CLEANING PROCESS. It can be unplugged within the case, or shut off entire case at the source. The interior bottom may be cleaned with any domestic soap or detergent based cleaners. Sanitizing solutions will not harm the interior bottom, however, these solutions should always be used according to the Hussmann’s directions. It is essential to establish and regulate cleaning procedures. This will minimize bacteria causing discoloration which leads to degraded product appearance and significantly shortening product shelf life.

Soap and hot water are not enough to kill this bacteria. A sanitizing solution must be included with each cleaning process to eliminate this bacteria.

1. Scrub thoroughly, cleaning all surfaces, with soap and hot water.
2. Rinse with hot water, but do not flood.
3. Apply the sanitizing solution according to Hussmann’s directions.
4. Rinse thoroughly.
5. Dry completely before resuming operation.

Non-Glare Glass

The high optical clarity of this glass is possible due to special coatings on the glass surface itself. To preserve this coating and the optical clarity, keep the glass clean.

Water is the only solution recommended to be used to clean the non-glare glass. The damage to the glass from improper, caustic solutions is irreparable.

In addition to cleaning the glass with the recommended product, there are precautions that should be taken when working and cleaning the inside of the case.

- When cleaning the inside of the cases, we recommend that the glass be fully opened and covered to prevent solutions from splashing onto the glass and ruining the coating on the inside.

Plexiglass and Acrylic Care

Improper cleaning not only accelerates the cleaning cycle but also degrades the quality of this surface. Normal daily buffing motions can generate static cling attracting dust to the surface. Incorrect cleaning agents or cleaning cloths can cause micro scratching of the surface, causing the plastic to haze over time.

Cleaning

Hussmann recommends using a clean damp chamois, or a paper towel marked as “dust and abrasive free” with 210® Plastic Cleaner and Polish available by calling Sumner Labs at 1-800-542-8656. Hard, rough cloths or paper towels will scratch the acrylic and should not be used.



This warning does not mean that Hussmann products will cause cancer or reproductive harm, or is in violation of any product-safety standards or requirements. As clarified by the California State government, Proposition 65 can be considered more of a ‘right to know’ law than a pure product safety law. When used as designed, Hussmann believes that our products are not harmful. We provide the Proposition 65 warning to stay in compliance with California State law. It is your responsibility to provide accurate Proposition 65 warning labels to your customers when necessary. For more information on Proposition 65, please visit the California State government website.

Service Record

Last service date: By:

_____	_____
_____	_____
_____	_____
_____	_____
_____	_____
_____	_____
_____	_____

HUSSmann®/Chino

Additional copies of this publication may be obtained by contacting:

Hussmann® Chino
 13770 Ramona Avenue • Chino, California 91710
 (909) 590-4910
 (800) 922-1919

www.hussmann.com

The *MODEL NAME* and *SERIAL NUMBER* is required in order to provide you with the correct parts and information for your particular unit.

They can be found on a small metal plate on the unit.
 Please note them below for future reference.

MODEL:

SERIAL NUMBER: